


CAST IRON COMMERCIAL HOT WATER OR STEAM BOILER

Dunkirk
America's Hottest Boiler Value!

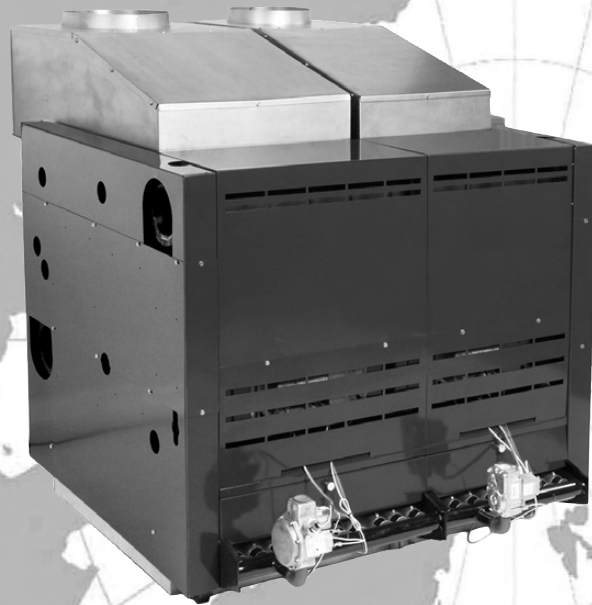

Dunkirk Boilers
85 Middle Rd.
Dunkirk, NY 14048
<http://www.dunkirk.com>

 An **ECR International Brand**
An ISO 9001-2000 Certified Company



P/N# 240006636D, Rev. 1.0 [07/07]

CAST IRON HOT WATER OR STEAM BOILER

INSTALLATION MANUAL AND OPERATING INSTRUCTIONS

TABLE OF CONTENTS

Safety Symbols.....	2
Boiler Ratings & Capacities.....	3
Rules For Safe Installation & Operation.....	4
Locating The Boiler.....	5
Combustion Air, Chimney & Vent Pipe Connection.....	5
Minimum Vent Pipe Clearance,.....	5
Installation.....	5
Ventilation And Combustion Air.....	6
Vent Installation.....	8
Assembly Of Bases, Starting Section Assembly.....	12
Attaching Draft Hoods.....	13
Installing Boiler Jacket Panels.....	14
Control Mounting And Installation.....	17
Tappings.....	19
Boiler Trim, Water Trim, Water Trim Assembly.....	19
Boiler Piping.....	20
Boilers Used With Refrigeration System.....	20
Boiler Piping, High Limit, Pipe Sizing.....	20
Piping Diagrams.....	21
Connecting Gas Service.....	23
Electrical Wiring.....	24
Installing Thermostat.....	24
Adjust Thermostat Heat Anticipator.....	24
Stage Firing Multiple Base Boilers.....	24
Wiring Diagrams.....	25
Operation and Service.....	27
Functions & Operation, Trial/Pilot Ignition.....	27
Main Burner Operation, System Troubleshooting.....	27
Component & Spark Ignition Check.....	27
Startup & Checkout, Start system.....	28
Pilot Flame Adjustment, Check Burner Input.....	28
Pilot System Troubleshooting Table.....	29
Checking & Adjusting.....	30
Cleaning And Maintenance.....	31

**KEEP THIS MANUAL NEAR BOILER.
RETAIN FOR FUTURE REFERENCE.**

SAFETY SYMBOLS

The following defined symbols are used throughout this manual to notify the reader of potential hazards of varying risk levels.

DANGER

Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

CAUTION

Indicates a potential hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.

IMPORTANT: Read the following instructions **COMPLETELY** before installing!!

WARNING

All installations of boilers should be done **only** by a qualified expert and in accordance with the appropriate manual. Installing a boiler or any other electric appliance with improper methods or materials may result in serious injury or death due to fire.



CAST IRON HOT WATER OR STEAM BOILER

IBR Ratings and Capacities – Chart #1													
Boiler Model No.	A.G.A. Input (1)	A.G.A. Output (1)	NET I=B=R Ratings (2)			Fule Outlet No. & Size			Chimney Size (6)	Flue Collector Size to Chimney	Horsepower Gross Output (4)	Pressure Drop Thru Water Boiler (5)	
	Btu Mbh	Btu Mbh	Steam Sq. Ft. (3)	Steam Btu Mbh	Water Btu Mbh	8"	10"	12"	I.D. x Ht.			GPM	In. Water
300	300	240	750	180	209	1			8"x20'	8	7.16	18.9 37.8	0.10 0.50
400	400	320	1000	240	278		1		10"x20'	10	9.55	25.2 50.4	0.27 0.86
500	500	400	1250	300	348			1	12"x20'	12	11.94	31.5 63.0	0.40 1.20
600	600	480	1500	360	417	2			12"x20'	12	14.33	37.8 75.6	0.50 1.70
700	700	560	1750	420	487	1	1		12"x20'	12	16.72	44.1 88.2	0.70 2.50
800	800	640	2000	480	557		2		14"x20'	14	19.10	50.4 100.8	0.88 2.90
900	900	720	2250	540	626		1	1	14"x20'	14	21.49	56.7 113.4	1.10 3.80
1000	1000	800	2500	600	696			2	14"x20'	14	23.88	63.0 126.0	1.30 4.00
1100	1100	880	2750	660	765	1	2		16"x20'	16	26.27	69.3 138.6	1.50 5.00
1200	1200	960	3000	720	835		3		16"x20'	16	28.66	75.6 151.2	1.80 6.00
1300	1300	1040	3250	780	904	1		2	16"x20'	16	31.04	81.9 163.8	2.00 5.60
1400	1400	1120	3500	840	974		1	2	18"x20'	18	33.43	88.2 176.4	2.40 7.00
1500	1500	1200	3750	900	1043			3	18"x20'	18	35.82	94.5 189.0	2.60 8.30
1600	1600	1280	4008	962	1113		4		18"x20'	18	83.21	100.8 201.0	2.80 9.60
1700	1700	1360	4283	1028	1183	1	1	2	18"x20'	18	40.60	107.1 214.2	3.15 10.30
1800	1800	1440	4563	1095	1252		2	2	20"x20'	20	42.99	113.4 226.8	3.50 11.00
1900	1900	1520	4838	1161	1322		1	3	20"x20'	20	45.37	119.7 239.4	4.00 12.50
2000	2000	1600	5117	1228	1391			4	20"x20'	20	47.76	126.0 252.0	4.50 14.00
2100	2100	1680	5392	1294	1461	2		3	20"x20'	20	50.15	132.3 264.6	4.95 16.00
2200	2200	7160	5671	1361	1530		3	2	22"x20'	22	52.54	138.6 277.2	5.40 18.00
2300	2300	1840	5913	1426	1600		2	3	22"x20'	22	54.93	144.9 289.8	5.70 17.00
2400	2400	1920	6213	1491	1670		1	4	22"x20'	22	57.31	151.2 302.4	8.00 19.00
2500	2500	2000	6471	1553	1739			5	22"x20'	22	59.70	157.5 315.0	8.00 20.50
2600	2600	2080	6729	1615	1809	2		4	22"x20'	22	62.09	163.8 327.6	7.00 24.00
2700	2700	2160	6988	1677	1878	1	1	4	24"x20'	24	64.48	170.1 340.2	7.50 24.00
2800	2800	2240	7246	1739	1948		2	4	24"x20'	24	66.87	176.4 352.8	8.00 26.00
2900	2900	2320	7504	1801	2017		1	5	24"x20'	24	69.25	182.75 365.5	8.50 27.50
3000	3000	2400	7763	1863	2087			6	24"x20'	24	71.64	189.1 378.2	9.00 9.00

- 1) Ratings are at sea level to 2,000 feet. For altitudes above 2,000 feet, reduce all ratings 4% for each 1,000 feet above sea level
- 2) Ratings based on selection factors recommended by Hydronics institute for piping and pickup. Net water boiler ratings are based on an allowance of 1.15, and net steam boiler ratings are based on an allowance of 1.33. For water applications with high piping and pickup requirements, use steam rating.
- 3) Ratings in square feet are computed at 240 Btu/square foot for steam boilers.
- 4) Ratings based on 33,500 Btu/h per horsepower.
- 5) Pressure drop based on given flow from a single outlet and returning to a single inlet at the opposite end of the boiler.
- 6) Chimney sizes shown are one option based on a typical venting system as shown in **Figure #6**, and sized according to the National Fuel Gas Code, assuming Type B double wall vent and vent connectors, Other venting system designs are acceptable as shown on **Flue Connection And Venting section of this manual**. For further chimney design and sizing information, consult the National Fuel Gas Code, ANSI Z223.1/NFPA 54-latest revision, or ASHRAE-1996 HVAC Systems and Equipment Handbook, Chapter 30, Chimney, Gas Vent, and Fireplace Systems, or the Standard for Chimneys, Fireplaces, Vents, and Solid Fuel Burning Appliances. NFPA 211 -latest revision. Follow standard engineering practice.

CAST IRON HOT WATER OR STEAM BOILER

RULES FOR SAFE INSTALLATION AND OPERATION

1. Read the Owner's Manual and the Rules for Safe Operation carefully. Failure to follow the rules for safe operation and the instructions could cause a malfunction of the boiler and result in death, serious bodily injury, and/or property damage.
2. Check your local codes and utility requirements before installation. The installation must be in accordance with their directives.
3. Before servicing, allow boiler to cool and always shut off any electricity and gas to boiler when working on it. This will prevent any electrical shocks or burns.
4. Never test for leaks with an open flame. Use soap suds to check all connections. This will avoid any possibility of fire or explosion.
5. This boiler is configured for operation with natural gas. Over-firing will result in premature failure of the boiler sections and cause dangerous operation. Be certain that there is adequate gas supply piping.
6. Never vent this boiler into an enclosed space. Always connect the boiler to a chimney and vent to the outside. Never vent to another room or inside a building.
7. Be sure there is adequate air supply for complete combustion.
8. Follow a regular service and maintenance schedule for efficient and safe operation.
9. Never install the boiler on carpeting.
10. Keep boiler area clear and free from combustible material such as gasoline and other flammable vapors and liquids.

WHEN YOUR BOILER ARRIVES

When your boiler arrives be sure to save and refer to the instructions.

First, inspect each item received for visible damage. If any parts are damaged, report this to the freight company immediately and request them to call and make an inspection before you make any installation. Have the inspector prepare a signed report. Send a copy of this report to the manufacturer and we will send replacements for the damaged parts. But we must have the signed inspection report of the freight company to prove their liability.

Read these instructions carefully before beginning the installation to be sure all packages have been received. It is recommended that you follow the step-by-step instructions for best assembly results. Before discarding any packing material carefully examine for loose parts. Also store all parts received where they will not be lost or damaged.

CODES GOVERNING INSTALLATION

Boiler should be installed in accordance to the latest edition of American National Standard National Fuel Gas Code Z223.1 (Available from the American Gas Association, 8501 East Pleasant Valley Road, Cleveland, Ohio 44131). Reference should also be made to local gas utility regulations and other codes in effect in the area in which the installation is to be made. The jurisdiction normally covers electrical wiring, gas piping, flue specification, and insulation of adjacent combustible material where required clearance cannot be maintained.

Where required by the authority having jurisdiction, the installation must conform to American Society of Mechanical Engineers Safety Code for Controls and Safety Devices for Automatically Fired Boilers, No. CSD-1.

CAST IRON HOT WATER OR STEAM BOILER

PRE-INSTALLATION

LOCATING THE BOILER

Locate the boiler on a level, non-combustible foundation as near to chimney or flue as possible. Allow 24 inches at front and sides of boiler for servicing and cleaning. When installed in a utility room, the door should be wide enough to allow the largest boiler parts to enter, or permit replacement of any other appliance in the same room.

The installing contractor **must** provide a ventilated foundation for the boiler when installing:

- Over a room
- Over electrical wiring or cables of any kind
- If the concrete floor is “green,” or water is channeled under the concrete floor

The boiler shall be installed such that the automatic gas ignition system components are protected from water (dripping, spraying, rain, etc.) during appliance operation and service.

COMBUSTION AIR

Provision for combustion and ventilation air must be in accordance with Section 5.3, “Air for Combustion and Ventilation”, of the National Fuel Gas Code, ANSI Z223.1 latest revision, and applicable provisions of the local building codes. Consult the code books or boiler manufacturer for specific requirements.

CHIMNEY AND VENT PIPE CONNECTION

This is a very important part of the heating system. It must be clean, the right size, properly constructed and in **GOOD CONDITION**. No boiler can function properly with a bad chimney. See Pages 6-10 for specific venting instructions.

The flue pipe should be the same size as draft hood outlet from boiler to flue collector. See **Chart #1** for Typical Chimney Size. Maintain a minimum upward slope of 1/4 inch per linear foot from boiler to the chimney. Fasten joints together with sheet metal screws to prevent sagging.

MINIMUM VENT PIPE CLEARANCE

If the vent pipe must go through a crawl space, double wall vent pipe should be used. Where vent passes through a combustible wall or partition, use a ventilated metal thimble. The thimble should be 4 inches larger in diameter than vent pipe. If boiler is installed with single wall galvanized type vent pipe, it must have 6 inches clearance between its surface and any combustible material. If UL listed type B (insulated) vent pipe is used, clearance between it and combustible material to be as listed by pipe manufacturer.

FOR INSTALLATION ON NON-COMBUSTIBLE FLOORS ONLY, MINIMUM CLEARANCES TO COMBUSTIBLE CONSTRUCTION

	Inputs of 400 MBH or less	Inputs over 400 MBH
Top	52"	52"
Front	Alcove	Alcove
Flue Collector	6 "	6"
Rear	18"	24"
Sides	18"	24"

Greater clearances for access should supercede fire protection clearances.

INSTALLATION

This boiler is designed to provide a wide heating capacity range with multiple burner modules, each equipped with its own set of controls. For purposes of orientation, the gas manifold side of the boiler is considered the front. These instructions are written for the assembling of the boiler starting with the left side and working to the right side.

A hot water boiler installed above radiation level must be provided with a low water cutoff device in piping at the time of boiler installation.

The boiler and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 psig (3.5 kPa).

The boiler must also be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psig (3.5 kPa)

CAST IRON HOT WATER OR STEAM BOILER

VENTILATION AND COMBUSTION AIR



WARNING

Enough air ensures proper combustion and assures that no hazard will develop due to the lack of oxygen



WARNING

Air openings to combustion area must not be obstructed. Follow **Chart #2** to insure that adequate combustion air can be maintained.

COMBUSTION AIR REQUIREMENTS – Chart #2

(MINIMUM SQUARE INCHES OPENING)



MODEL NUMBER	NUMBER OF MODULES	*UNCONFINED AREA		**CONFINED AREA	
		OUTSIDE COMBUSTION AIR 1 SQ. IN /4000 Btu/hr (SEE FIG. 2)	INSIDE COMBUSTION AIR 1 SQ. IN. /1000 Btu/hr (SEE FIG. 1)	VERT. DUCTS 1 SQ. IN. /4000 Btu/hr	HORZ. DUCTS 1 SQ. IN. /2000 Btu/hr
300	1	75	300	75	150
400	1	100	400	100	200
500	1	125	500	125	250
600	2	150	600	150	300
700	2	175	700	175	350
800	2	200	800	200	400
900	2	225	900	225	450
1000	2	250	1000	250	500
1100	3	275	1100	275	550
1200	3	300	1200	300	600
1300	3	325	1300	325	650
1400	3	350	1400	350	700
1500	3	375	1500	375	750
1600	4	400	1600	400	800
1700	4	425	1700	425	850
1800	4	450	1800	450	900
1900	4	475	1900	475	950
2000	4	500	2000	500	1000
2100	5	525	2100	525	1050
2200	5	550	2200	550	1100
2300	5	575	2300	575	1150
2400	5	600	2400	600	1200
2500	5	625	2500	625	1250
2600	6	650	2600	650	1300
2700	6	675	2700	675	1350
2800	6	700	2800	700	1400
2900	6	725	2900	725	1450
3000	6	750	3000	750	1500

* Unconfined area: A space whose volume is not less than 50 cubic feet per 1000 Btu per hour of all appliances installed in that space (cubic feet of space = height x width x length).

** Confined area: A space whose volume is less than 50 cubic feet per 1000 Btu per hour of all appliances installed in that space (cubic feet of space = height x width x length).

CAST IRON HOT WATER OR STEAM BOILER

VENTILATION AND COMBUSTION AIR

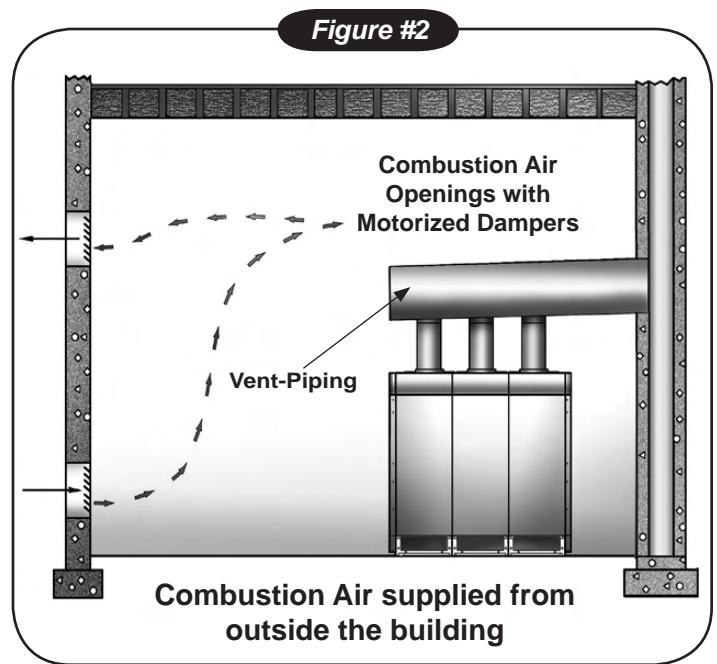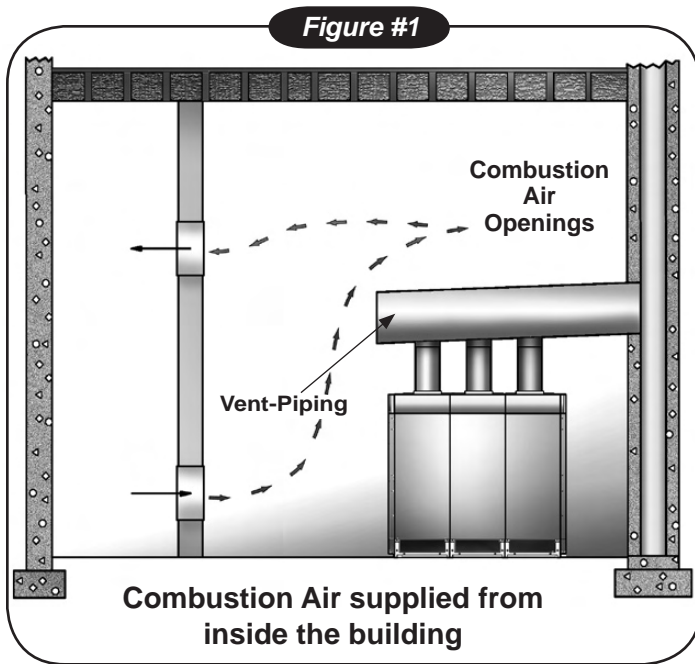

IMPORTANT VENT-PIPING NOTE: Sloped Vent Pipe at least 1/4" for every 1' to the vent terminal.

1. Ventilation of the boiler room must be adequate to provide sufficient air to properly support combustion per the National Fuel Gas Code, ANSI Z223.1-latest edition.
2. When a boiler is located in an unconfined space in a building or conventional construction frame, masonry or metal building, infiltration normally is adequate to provide air for combustion and ventilation. However, if the equipment is located in a building of tight construction (See the national Fuel Gas Code, Ansi Z223.1-latest edition), the boiler area should be considered as a confined space. If there is any doubt, install air supply provisions in accordance with the latest revision of the National Fuel Gas Code.
3. When a boiler is installed in an unconfined space, in a building of tight construction, air for combustion and ventilation must be obtained from outdoors or from spaces freely communicating with the outdoors. A permanent opening or openings having a total free area of not less than 1 square inch per 5,000 Btu per hour of total input rating of all appliances shall be provided. Ducts may be used to convey makeup air from the outdoors and shall have the same cross-sectional area of the openings to which they are connected.
4. When air for combustion and ventilation is from inside buildings, the confined space shall be provided with two permanent openings, one starting 12 inches from the top and one 12 inches from the bottom of the enclosed space. Each opening shall have a minimum free area of 1 square inch per one thousand (1000) Btu per hour of the total input rating of all appliances in the enclosed space, but must not be less than one hundred (100) square inches. These openings must freely communicate directly with other spaces of sufficient volume so that the combined volume of all spaces meets the criteria for an unconfined space. See **Figure #1**.
5. When the boiler is installed in a confined space and all air is provided from the outdoors the confined space shall be provided with one or two permanent openings according to methods A or B (listed below). When ducts are used, they shall be of the same cross sectional area as the free area of the area of the openings to which they connect. The minimum dimension of rectangular air ducts shall be not less than 3 x 3 inches or 9 square inches.
 - A. When installing two openings, one must commence within 12 inches from the top and the other within 12 inches from the bottom of the enclosure. The openings shall communicate directly, or by ducts, with the outdoors or spaces (crawl or attic) that freely communicate with the outdoors. One of the following methods must be used to provide adequate air for ventilation and combustion.

CAST IRON HOT WATER OR STEAM BOILER

VENTILATION AND COMBUSTION AIR

- A. 1) When directly communicating with the outdoors, each opening shall have a minimum free area of 1 square inch per 4,000 Btu per hour of total input rating of all equipment in the enclosure. Refer to **Figure #2** on previous page.
 - 2) When communicating with the outdoors by means of vertical ducts, each opening shall have a minimum free area 1 square inch per 4,000 Btu per hour of total input rating of all appliances in the enclosed space.
 - 3) If horizontal ducts are used, each opening and duct shall have a minimum free area 1 square inch per 2,000 Btu per hour of total input rating of all appliances in the enclosed space.
 - B. One permanent opening, commencing within 12 inches of the top of the enclosure, shall be permitted where the equipment has clearances of at least 1 inch from the sides, 1 inch from the back, and 6 inches from the front of the boiler. The opening shall directly communicate with the outdoors or shall communicate through a vertical or horizontal duct to the outdoors or spaces (crawl or attic) that freely communicate with the outdoors. The openings must have a minimum free area of 1 square inch per 3000 Btu per hour of the total input rating of all equipment located in the enclosure. The free area must be no less than the sum of the areas of all vent connectors in the confined space.
6. In calculating free area using louvers, grilles or screens for the above, consideration shall be given to their blocking effect. Screens used shall not be smaller than 1/4 inch mesh. If the free area through a design of louver or grill is known, it should be used in calculating the size opening required to provide the free area specified. If the design and free area is not known, it may be assumed that wood louvers will have 20-25% free area and metal louvers and grilles will have 60-75% free area. Louvers and grilles should be fixed in the open position or interlocked with the boiler so they are opened automatically during the boiler operation.

VENT INSTALLATION



WARNING

This boiler is to be vented by natural draft and shall not be connected into any portion of a mechanical draft system operating under positive pressure.

1. The vent pipe must slope upward from the boiler not less than 1/4" for every 1' to the vent terminal. (Refer to **Figures #1 & #2**)
 2. Horizontal portions of the venting system shall be supported rigidly every 5 feet and at the elbows. No portion of the vent pipe should have dips or sags.
3. Run flue pipe directly as possible. Keep turns to a minimum. Insert flue pipe into, but not beyond, inside wall of chimney. Do not connect into a chimney serving an open fireplace.
 4. Insulate flue pipe where it passes near combustible material.
 5. Rigidly support pipe with hangers and straps.
 6. Extend chimneys at least 2 feet above any object within radius of 15 feet, including roof.
 7. Install a hood on all flue pipes which extend through roof. In most locations, the venting of a boiler relies on natural draft. Inasmuch as the energy available from natural draft is quite low, serious thought should be given to vent system design, i.e., adequate size, use of gradual transitions, tees, elbows, etc., close proximity of boiler and chimney. On all boilers, the vertical risers must be at least as large as the vent openings on the draft hood. The boiler manufacturer makes no specific recommendations regarding the application of draft inducers that may be used with this boiler. If a draft inducer is used, it is up to the installing contractor and the draft inducer manufacturer to determine the proper application.

FLUE CONNECTION AND VENTING

Consult local codes and gas company requirements. Adhere to the following standard practice recommendations for installing the flue pipe:


1. Consult dimensional drawing for number and size of flue pipes required for each size boiler.
2. Maintain minimum upward slope of 1/4 inch per linear foot from the boiler to chimney.

CAST IRON HOT WATER OR STEAM BOILER


FLUE CONNECTION AND VENTING *Continued*

A simple vent system consists of a 6-foot minimum vertical rise immediately off the draft hood, as shown in **Figure #3**. Terminate this vertical flue above the building roof with a suitable rain cap at least 2 feet above surrounding obstructions, i.e., parapets, adjacent buildings, penthouses, etc. This type of vent system applies to single-draft hood boilers ONLY, and has limited practical use, because it is restricted to single-story boiler rooms and because of the problems encountered in roof flashing.

The vertical venting system shown in **Figure #3** cannot be used on multiple-base boilers because of the physical interference of multiple rain caps.

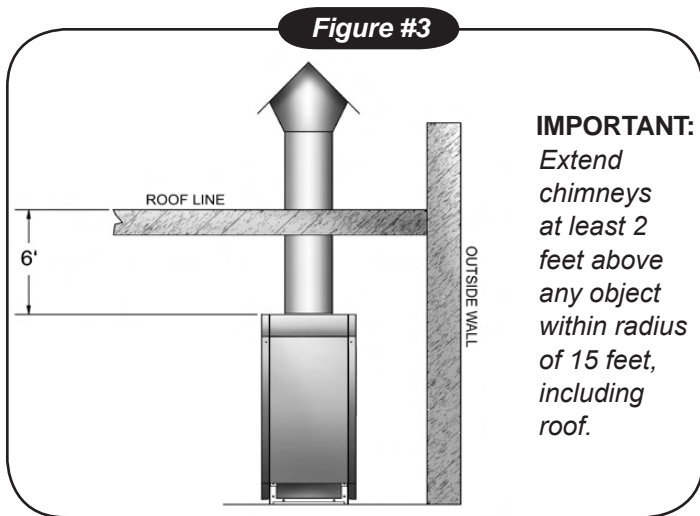


For multiple-base boilers, the pant leg venting system shown in **Figure #4** can be applied, if desired.

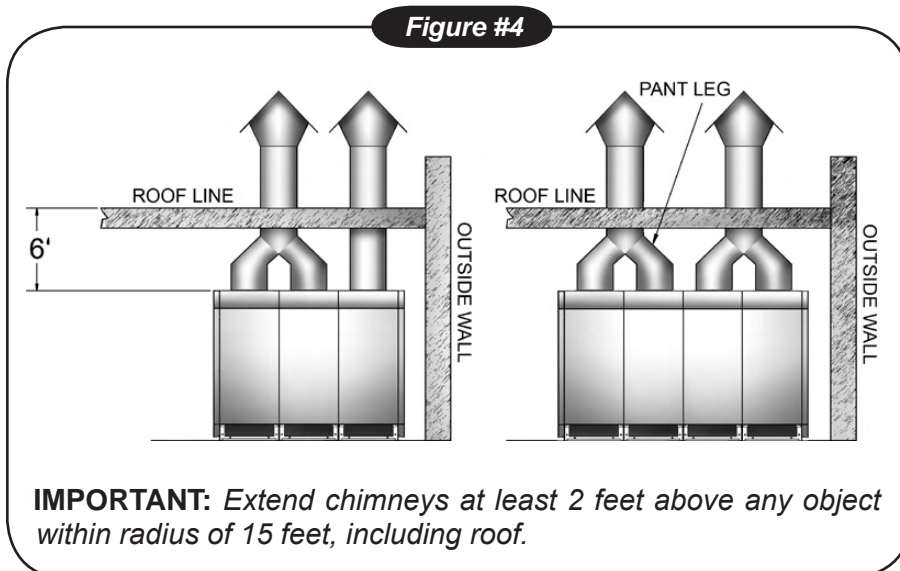

The vent system shown in **Figure #5** is commonly used. With the vent diameters sized to match the flue outlets, a minimum vertical rise of 4 feet above the draft hood must be maintained for proper operation. Refer to **Chart #1** for typical chimney sizes. Requirements for this type of system are: an adequately sized chimney, adequate combustion air, and the outlet end of the horizontal run must be no more than 6 feet from the chimney with no more than one 90° elbow in this run as shown.

For installations where the required minimum 4-foot vertical rise cannot be maintained, the diameter of the horizontal run must be increased one inch for each foot of riser reduction. This procedure will reduce the resistance of the system, and if the chimney is adequate the boiler will vent properly.

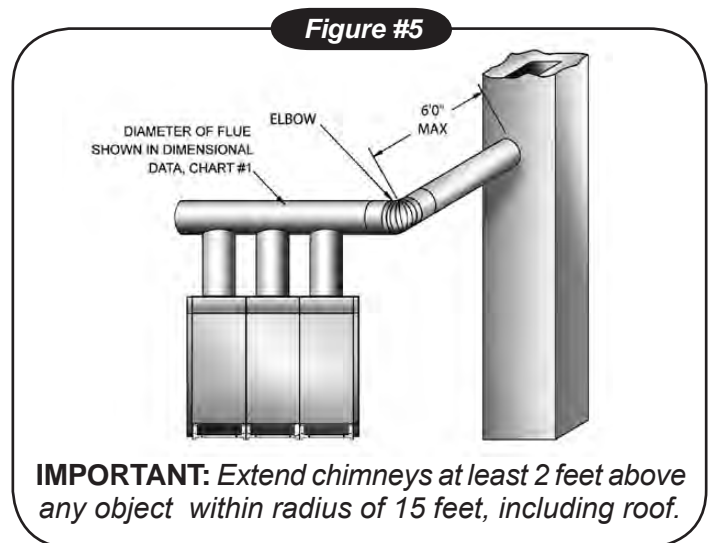


In certain cases where these short rises of less than 4 feet have been used, spillage of combustion products has occurred at the draft hoods farthest from the chimney. Assuming the chimney is adequately sized, one acceptable method to correct this spillage problem is to permanently baffle the riser(s) closest to the chimney to reduce the excess of room air entering those draft hoods. **DO NOT BAFFLE ENOUGH TO CAUSE SPILLAGE.** The use of fixed baffles in the short risers above the boiler draft hood are acceptable as spelled out

CAST IRON HOT WATER OR STEAM BOILER

FLUE CONNECTION AND VENTING *Continued*

in American National Standard NFPA 54/ANSI Z223.1 National Fuel Gas Code, latest revision.

Fabricate these fixed baffles, using 20-gauge steel. See **Figure #6**. Permanently attach the baffle to the inside of the riser(s). Trial and error will dictate the degree to which each should be positioned to avoid draffhood spillage at the far end of the boiler. Be careful to avoid bending the fixed baffle so it will obstruct the flue gas flow in the horizontal collector.

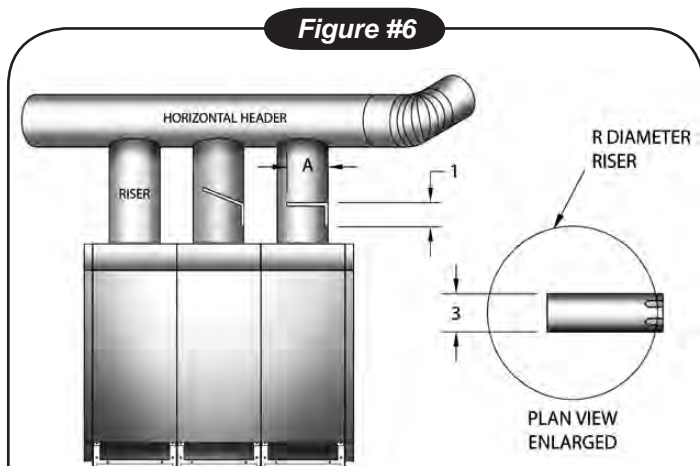

Baffle Size (Inches)			
R	8	10	12
A	6	8	10

Shown is suggested size of fixed baffle for different size risers.

IMPORTANT: Extend chimneys at least 2 feet above any object within radius of 15 feet, including roof.




REMOVING EXISTING BOILER FROM COMMON VENTING SYSTEM

When an existing boiler is removed from a common venting system, the common venting system is likely to be too large for proper venting of the appliances remaining connected to it.

At the time of removal of an existing boiler, the following steps shall be followed with each appliance remaining connected to the common venting system placed in operation, while the other appliances remaining connected to the common venting system are not in operation.

1. Seal any unused openings in the common venting system.
2. Visually inspect the venting system for proper size and horizontal pitch and determine there is no blockage or restriction, leakage, corrosion and other deficiencies which could cause an unsafe condition.
3. Insofar as is practical, close all building doors and windows and all doors between the space in which the appliances remaining connected to the common venting system are located and other spaces of the building. Turn on clothes dryers and any appliance not connected to the common venting system. Turn on any exhaust fans, such as range hoods and bathroom exhausts, so they will operate at maximum speed. Do not operate a summer exhaust fan. Close fireplace dampers.
4. Place in operation the appliance being inspected. Follow the lighting instructions. Adjust thermostat so appliance will operate continuously.
5. Test for spillage at the draft hood relief opening after 5 minutes of main burner operation. Use the flame of a match or candle, or smoke from a cigarette, cigar or pipe.
6. After it has been determined that each appliance remaining connected to the common venting system properly vents when tested as outlined above, return doors, windows, exhaust fans, fireplace dampers and any other gas-burning appliance to their previous conditions of use.
7. Any improper operation of the common venting system should be corrected so the installation conforms with the National Fuel Gas Code, ANSI Z223.1-latest issue. When resizing any portion of the common venting system, the common venting system should be resized to approach the minimum size as determined using the appropriate tables in Part 11 in the National Fuel Gas Code, ANSI Z223.1-latest issue.

CAST IRON HOT WATER OR STEAM BOILER

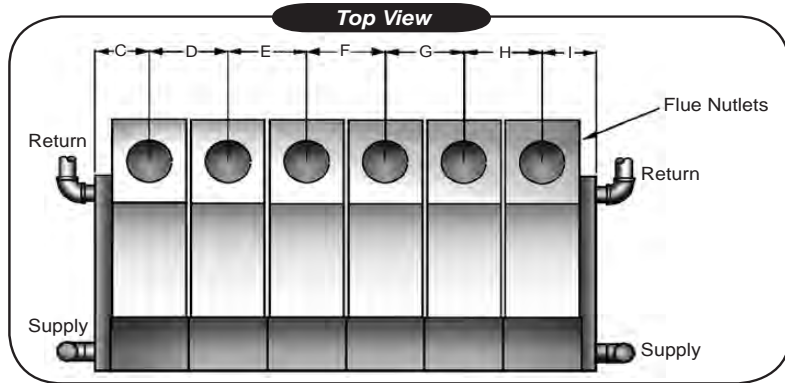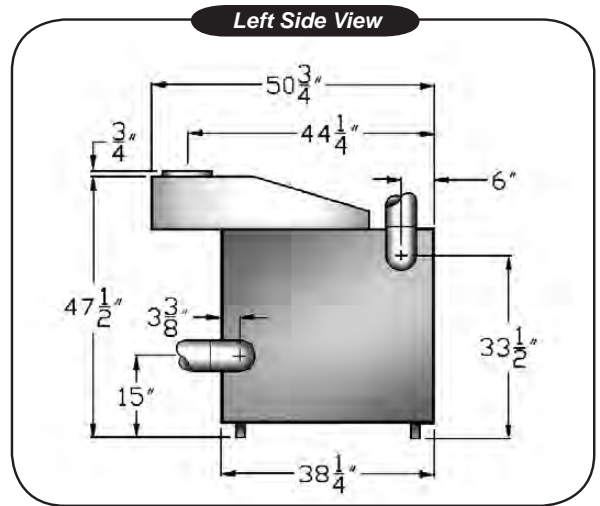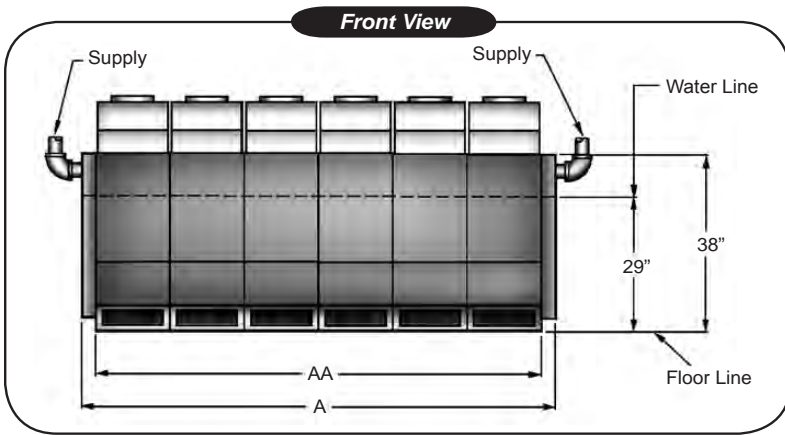

ALL SUPPLY AND RETURN CONNECTIONS ARE 4 INCH

Chart #3

Boiler Model No.	Water Content in Gallons		Shipping Weight Lbs.	A Jacket Width L to R	AA Base & Battery Length	C	D	E	F	G	H	I
	Steam	Water										
300	20	26	922	18 3/4	16 3/4	9 3/8	-	-	-	-	-	9 3/8
400	25	33	1133	23	21	11 1/2	-	-	-	-	-	11 1/2
500	30	40	1344	27 1/4	25 1/4	13 5/8	-	-	-	-	-	13 5/8
600	35	46	1555	31 1/2	29 1/2	9 3/8	12 3/4	-	-	-	-	9 3/8
700	40	52	1766	35 3/4	34 3/4	9 3/8	14 7/8	-	-	-	-	11 1/2
800	45	58	1977	40	38	11 1/2	17	-	-	-	-	11 1/2
900	50	65	2188	44 1/4	42 1/4	11 1/2	19 1/8	-	-	-	-	13 5/8
1000	55	71	2399	48	46 1/2	13 5/8	21 1/4	-	-	-	-	13 5/8
1100	60	78	2610	52 3/4	50 3/4	9 3/8	14 7/8	17	-	-	-	11 1/2
1200	65	84	2821	57	55	11 1/2	17	17	-	-	-	11 1/2
1300	70	91	3032	61 1/4	59 1/4	9 3/8	17	21 1/4	-	-	-	13 5/8
1400	75	97	3243	65 1/2	63 1/2	11 1/2	19 1/8	21 1/4	-	-	-	13 5/8
1500	80	104	3454	69 3/4	67 3/4	13 5/8	21 1/4	21 1/4	-	-	-	13 5/8
1600	85	110	3665	74	72	11 1/2	17	17	17	-	-	11 1/2
1700	90	117	3876	78 1/4	76 1/4	9 3/8	14 7/8	19 1/8	21 1/4	-	-	13 5/8
1800	95	123	4087	82 1/2	80 1/2	11 1/2	17	19 1/8	21 1/4	-	-	13 5/8
1900	100	130	4298	86 3/4	84 3/4	11 1/2	19 1/8	21 1/4	21 1/4	-	-	13 5/8
2000	105	136	4509	91	89	13 5/8	21 1/4	21 1/4	21 1/4	-	-	13 5/8
2100	110	143	4720	95 1/4	93 1/4	9 3/8	12 3/4	17	21 1/4	21 1/4	-	13 5/8
2200	115	149	4931	99 1/2	97 1/2	11 1/2	17	17	19 1/8	21 1/4	-	13 5/8
2300	120	156	5142	103 3/4	101 3/4	11 1/2	17	19 1/8	21 1/4	21 1/4	-	13 5/8
2400	125	162	5353	108	106	11 1/2	19 1/8	21 1/4	21 1/4	21 1/4	-	13 5/8
2500	130	169	5564	112 1/4	110 1/4	13 5/8	21 1/4	21 1/4	21 1/4	21 1/4	-	13 5/8
2600	135	175	5775	116 1/2	114 1/2	9 3/8	12 3/4	17	21 1/4	21 1/4	21 1/4	13 5/8
2700	140	182	5986	120 3/4	118 3/4	9 3/8	14 7/8	19 1/8	21 1/4	21 1/4	21 1/4	13 5/8
2800	145	188	6197	125	123	11 1/2	17	19 1/8	21 1/4	21 1/4	21 1/4	13 5/8
2900	150	195	6408	129 1/4	127 1/4	11 1/2	19 1/8	21 1/4	21 1/4	21 1/4	21 1/4	13 5/8
3000	155	201	6619	133 1/2	131 1/2	13 5/8	21 1/4	21 1/4	21 1/4	21 1/4	21 1/4	13 5/8

CAST IRON HOT WATER OR STEAM BOILER

INSTALLATION – ASSEMBLY

ASSEMBLY OF BASES

The 300, 400 and 500 boilers are the basic models. The 300 model has (6) burners, the 400 model has (8) burners and the 500 model has (10) burners. Combinations of the basic models are used to assemble the 600 through 3000 models. Refer to **Chart #3** for the proper order of assembly. When two or more bases are used to assemble the boiler, be sure the tops of the bases are even.

The bases are fastened together with 5/16 cap bolts and nuts. Insert two bolts in the front posts and two in the rear posts as shown in **Figure #7A**. After bases are fastened together, install the base end panels. These end panels must be installed before assembling sections **Figure #7B**.

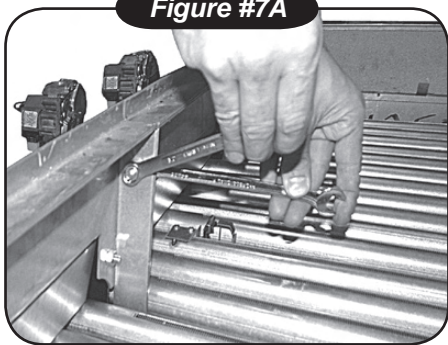


Figure #7A

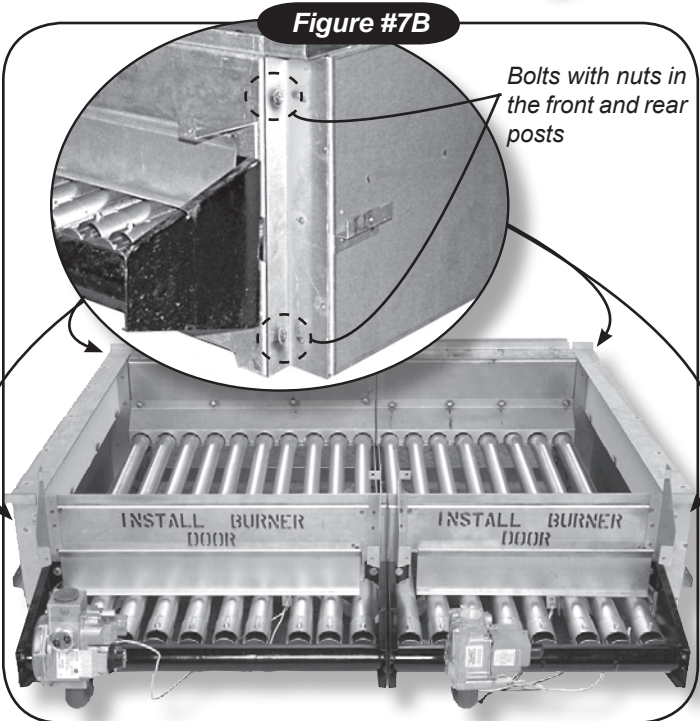


Figure #7B

Bolts with nuts in the front and rear posts

Important: After bases are assembled check to be sure they are level.

SECTION ASSEMBLY

The sections may be started from either the left or right end of the base.

Place the end section on the base with the center-line of the section directly over the joint of the base end closure. With boilers having two or more bases, as you progress be sure the parting line (center-line of section) of the intermediate sections fall on the junction of the two bases. (**Figure #8**)

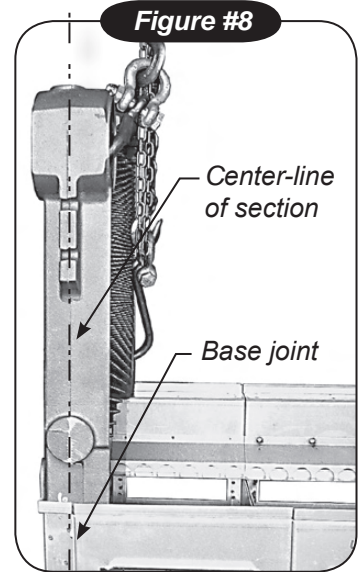


Figure #8

Before beginning, clean nipples and nipple ports. Coat nipples and nipple ports with pipe joint compound or other good sealant and keep them clean. (**Figure #9**)



Figure #9

Place nipples in ports taking care to seat them squarely to prevent cocking. (**Figure #10**)

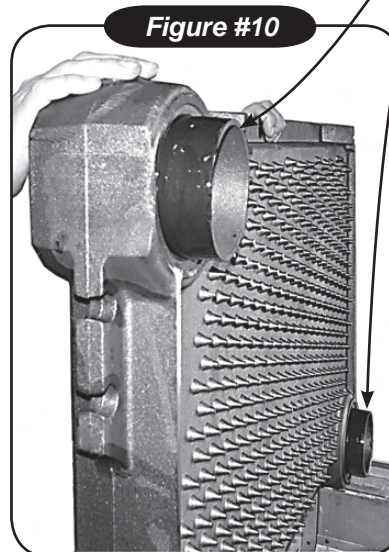


Figure #10

When pulling sections together with tie rods, **always insert tie rods in holes nearest to nipple ports**. Move tie rods to proper location, if necessary, only after sections are fully pulled together. Oil or lubricate threads, insert tie rods in lugs with washers under nuts and tighten uniformly and evenly so that sections are pulled parallel as they

CAST IRON HOT WATER OR STEAM BOILER

go together. When all sections are pulled up locate the tie rods in alternating pairs of upper and lower holes between adjacent sections. **(Figure #11)**

Be sure both ends of completed section assembly are resting evenly on both ends of base.

Apply furnace cement at the joints of the sections front, top and back. Putty should also be applied where the sections join the base. **(See Figure #12)**


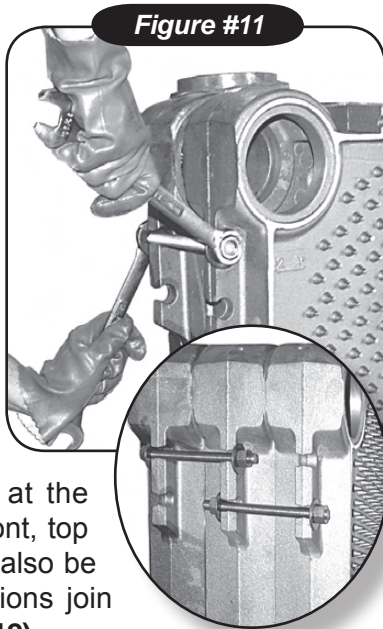


Figure #11

Figure #12

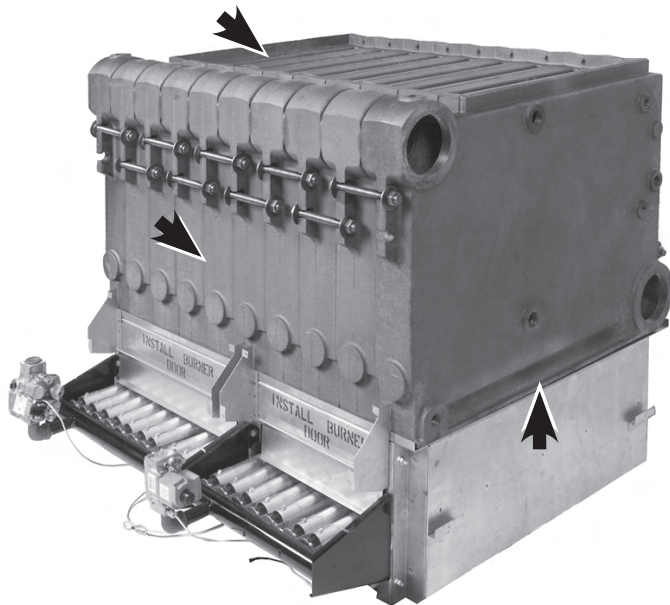

Apply furnace cement to joints on all sides of boiler

Place the necessary plugs and control wells in the correct locations. Plug all other tappings, leaving an air vent in the top of one of the end sections, and connect water. Fill the boiler with water until it runs out the air vent. Then hydrostatically test the boiler in accordance with applicable codes. Check for leaks before continuing with the assembly. Drain and remove unnecessary plugs.

ATTACHING DRAFT HOODS

Attach the draft hoods to the boiler sections after applying boiler putty to the top of the boiler sections where the hoods and sections meet. Use j-bolts to attach the fronts of the draft hoods to slots in the section flanges. **Figure 13#**

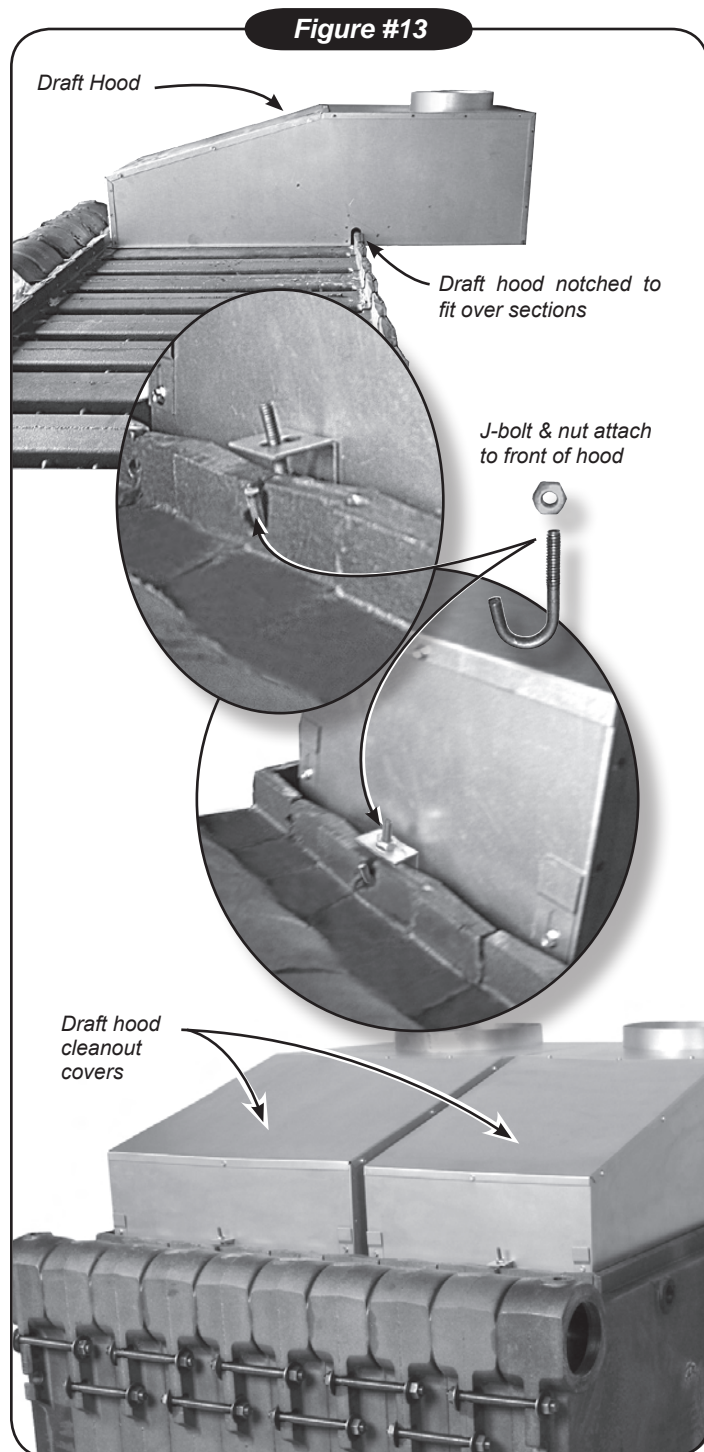


Figure #13

Draft Hood

Draft hood notched to fit over sections

J-bolt & nut attach to front of hood


Draft hood cleanout covers

CAST IRON HOT WATER OR STEAM BOILER


INSTALLING BOILER JACKET PANELS

NOTE: Jacket assembly must start at the left side of the boiler.


1. Attach the lower jacket end panel (left) to the two Z-bars on the base end closures through the two slotted holes on the bottom of the jacket end panel. Use (2) #10 x 1/2" screws. **(Figure #14)**

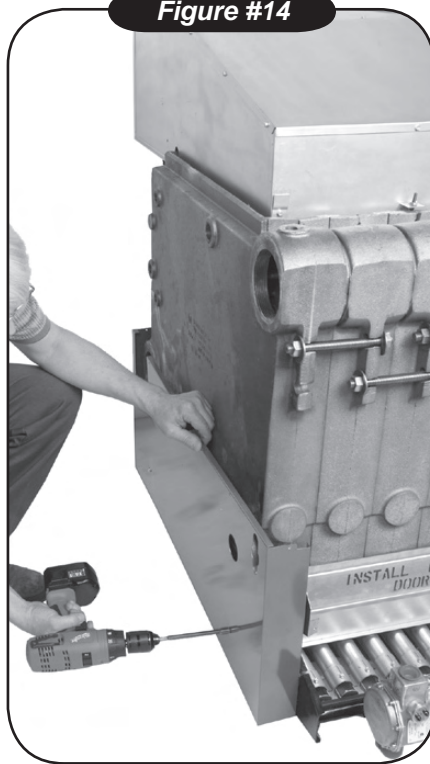


2. Attach the middle jacket end panel (left) to the lower jacket end panel with the middle laying over the lower and lining up holes. Use (5) #10 x 1/2" screws. **(Figure #15)**

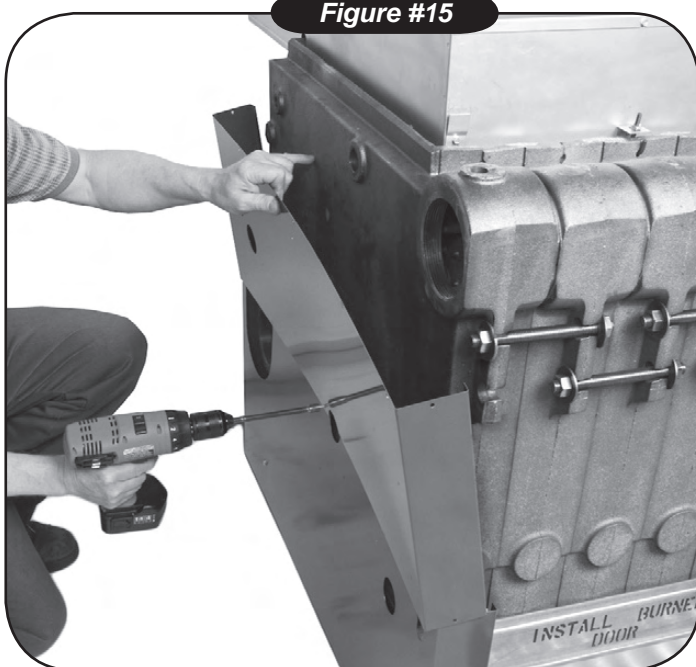

3. Attach the upper jacket end panel (left) to the middle jacket end panel with the upper behind the middle and lining up the holes. Use (6) #10 x 1/2" screws. Attach upper jacket end panel to rear side of draft hood. Use (1) #8 x 3/4" screw. **(Figure #16)**

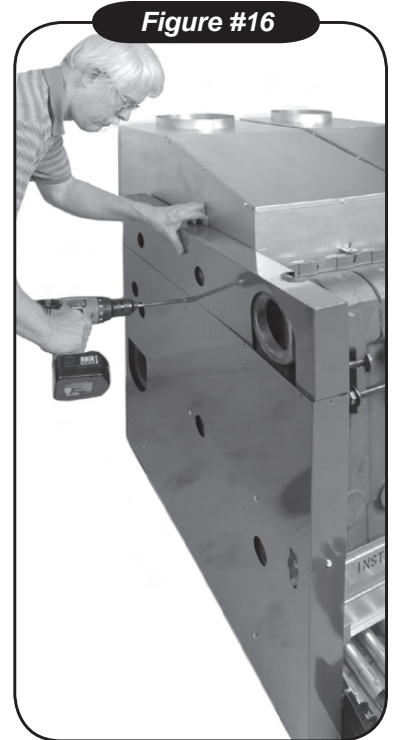


4. Position top/front intermediate panel so the back edge of the top hangs on adjustable clips on front of draft hood(s); the left edge hangs on bracket on left upper jacket end panel; and the right edge with integral bracket hangs on the tie rod(s). **(Figure #17)**

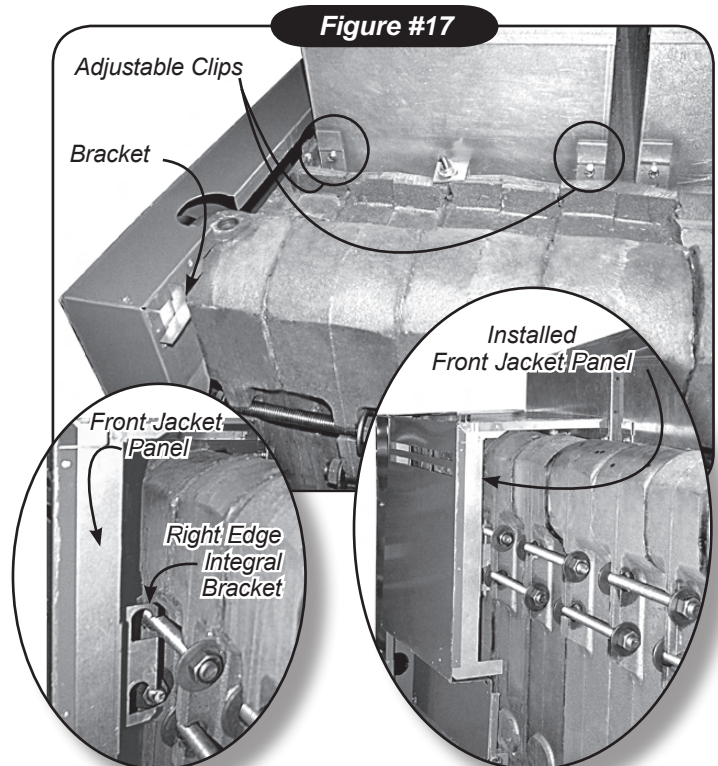


CAST IRON HOT WATER OR STEAM BOILER

INSTALLING BOILER JACKET PANELS


5. Attach top/front intermediate panel to the lower base brackets through four slotted holes in panel. Use (4) #10 x 1/2" screws. **(Figure #18)**

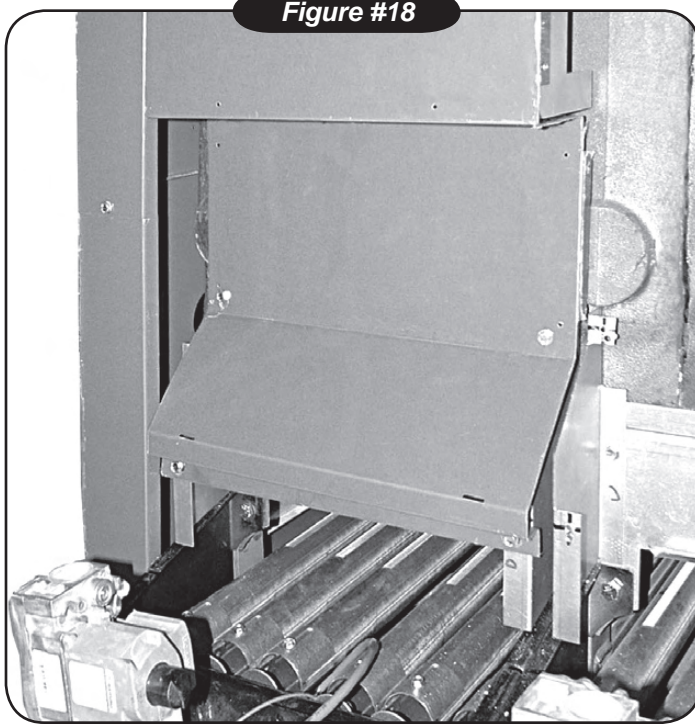

6. On multiple base boilers, each additional top/front intermediate panel attaches in the same way (working your way from left to right). **(Figure #19)**

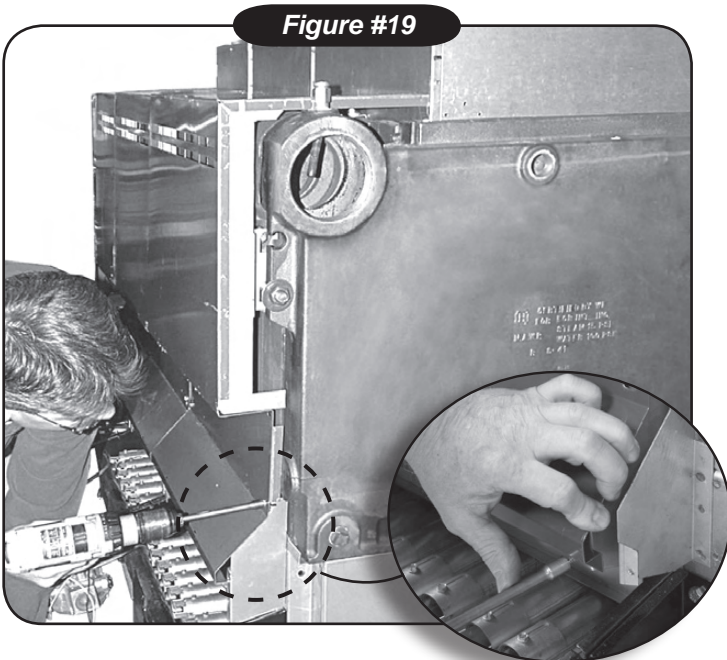

7. Attach the upper jacket end panel (right) so the left edge hangs on bracket on top/front intermediate panel. Attach upper jacket end panel to rear side of draft hood. Use (1) #8 x 3/4" screw. **(Figure #20)**

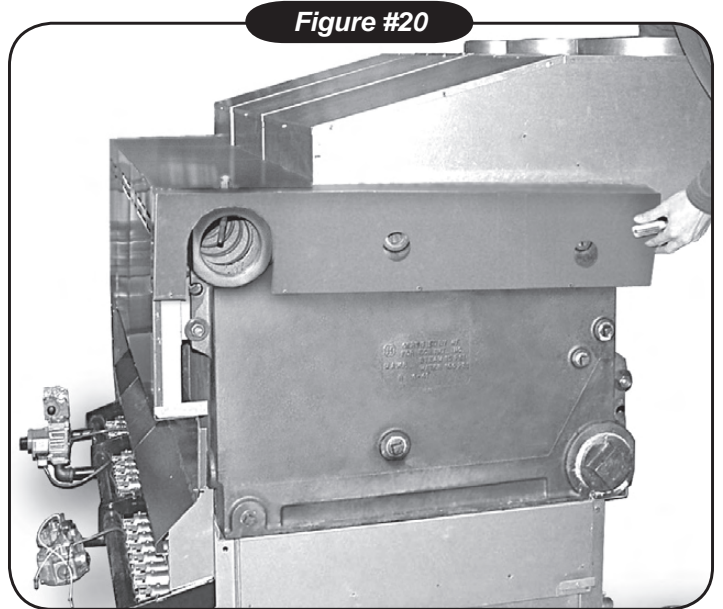


8. Attach the middle jacket end panel (right) to the upper jacket end panel with the middle laying over the upper and lining up holes. Use (6) #10 x 1/2" screws. **(Figure #21)**

CAST IRON HOT WATER OR STEAM BOILER


INSTALLING BOILER JACKET PANELS

9. Attach the lower jacket end panel (right) to the middle jacket end panel with the lower behind the middle and lining up holes. Use (5) #10 x 1/2" screws. Attach the lower jacket end panel to the two Z-bars on the base end closures through the two slotted holes on the bottom of the jacket end panel. Use (2) #10 x 1/2" screws. (Figure #21B)

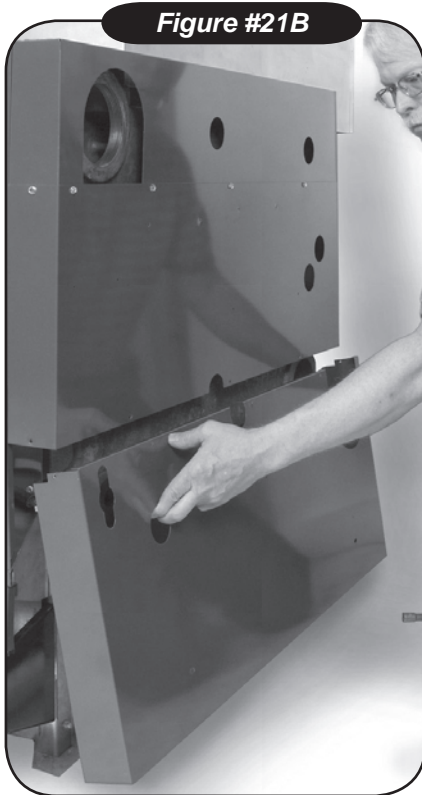


Use (2) #10 x 1/2" screws. (Figure #21B)

10. Position top of rear jacket panel(s) to draft hood baffle flange and secure with (2) #10 x 1/2" screws. Secure bottom of rear jacket panel(s) to bracket(s) on boiler base using (2) #10 x 1/2" screws. (Figure #22)

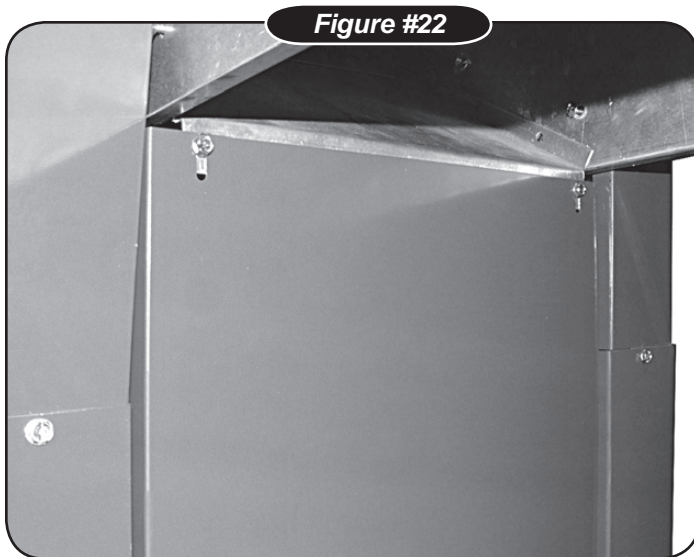

11. Attach burner door knobs with #8-32 x 1/4" screws and #8-32 hex nuts. Slide bottom of lower access door(s) in slots on top of manifold brackets. (Figure #23)

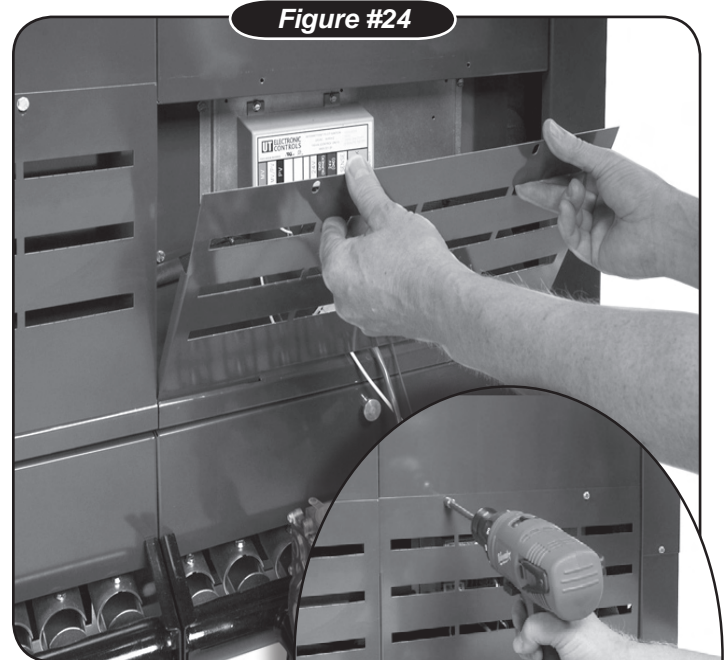

12. Position control access jacket panel(s) so the tabs slide into slots on the top/front intermediate jacket panel(s). Attach control access jacket panel to top/front intermediate jacket. Use (2) #10 x 1/2" screws. (Figure #24)

NOTE: The attachment of the control access jacket panels can wait until the controls have been mounted to the top/front intermediate jacket panels.

CAST IRON HOT WATER OR STEAM BOILER

13. Lighting Instruction Plates are provided with each boiler base. Each boiler base also includes a data plate indicating the required gas type, firing rate, and gas pressure for that base. These plates are located on the Jacket Top/Front Panels. Boilers also have a rating plate showing the total Input and


Output Ratings. This rating plate is shipped in the AC Carton and is to be mounted on the side Jacket End Panel by the installing contractor.

14. Attach Local Code Label (*not provided by manufacturer.*)

CONTROL MOUNTING AND INSTALLATION


NOTE: The electrical controls (j-box, transformer, etc. can be mounted on either the left or right jacket end panel. Subsequently, the boiler safeties (LWCO, etc.) and their respective piping must be mounted on the opposite end of the boiler.

1. Attach j-box assembly to jacket end panel aligning with holes in end panel. Use (4) #10 x 1/2" screws (**Figure #25A**).

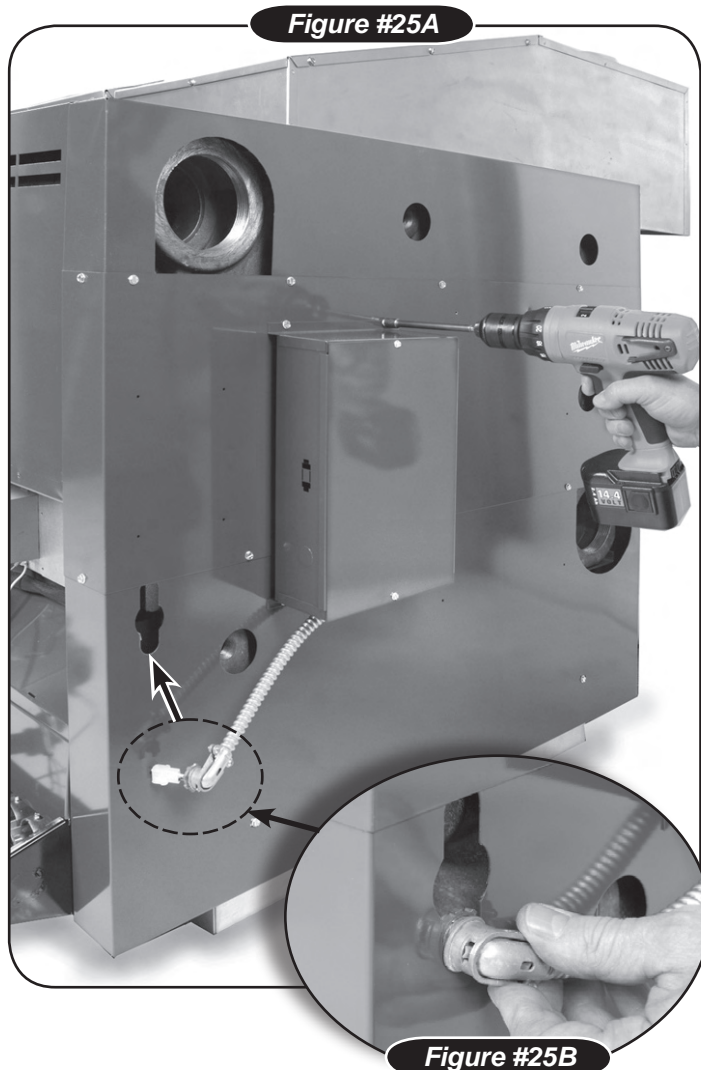

2. Position harness and plug from j-box through opening in jacket end panel (**Figure #25B**).

3. Boilers with four through six bases, require a transformer mounted externally to the j-box assembly. Attach transformer and bracket assembly to the

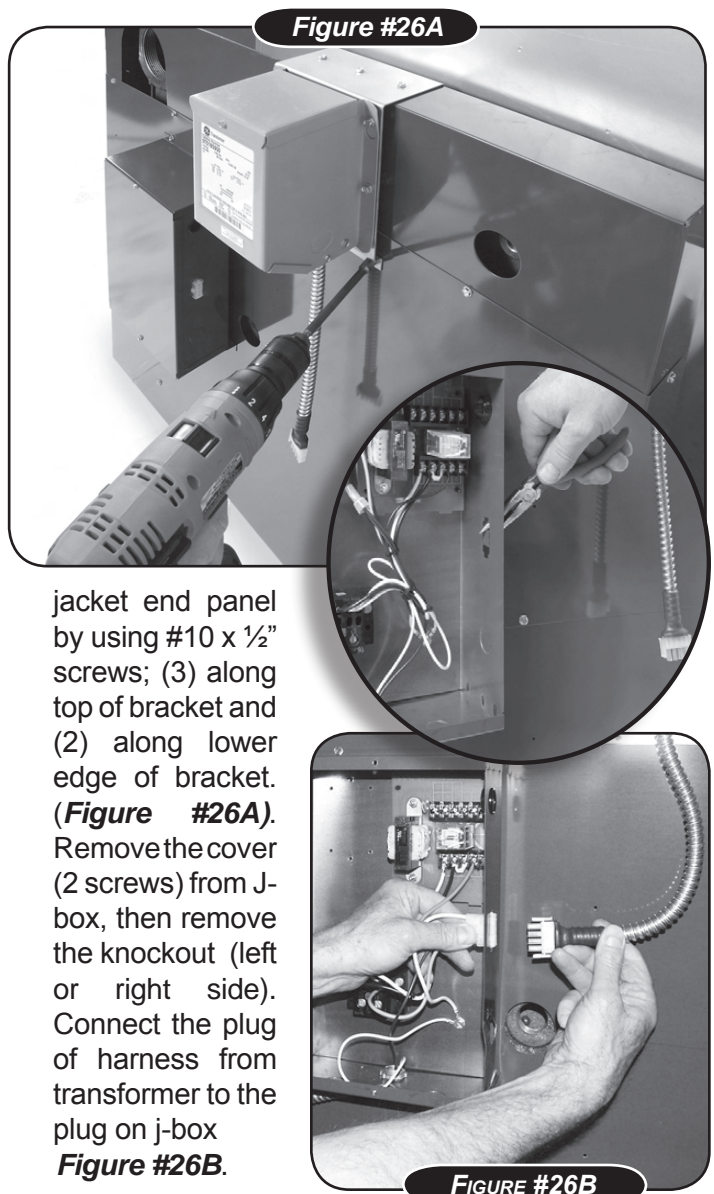

jacket end panel by using #10 x 1/2" screws; (3) along top of bracket and (2) along lower edge of bracket. (**Figure #26A**). Remove the cover (2 screws) from J-box, then remove the knockout (left or right side). Connect the plug of harness from transformer to the plug on j-box **Figure #26B**.

CAST IRON HOT WATER OR STEAM BOILER

CONTROL MOUNTING AND INSTALLATION

4. Orient harness of control panel assembly so the correct (female) plug is toward the j-box and will connect to the j-box harness **Figure #27A**. Secure harness to control panel with zip-ties and #10 x 1/2" screws

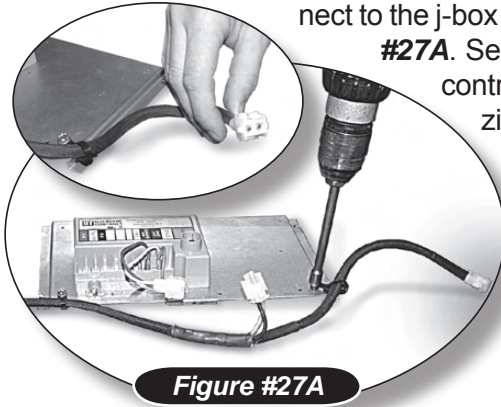


Figure #27A

Figure #27A. Connect plugs on harnesses **Figure #27B**.

Figure #27B



5. Attach control panel to intermediate jacket panel aligning with holes. Use (4) #10 x 1/2" screws. Connect plugs on control panel to j-box (**Figure #28**).

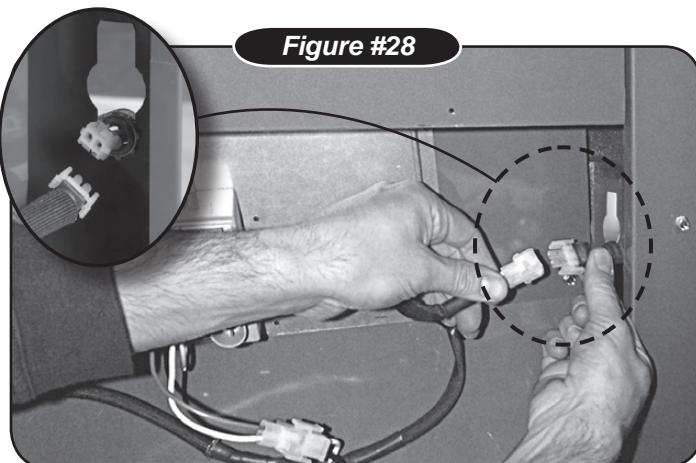


Figure #28

6. On multiple base boilers, mount remaining control panels to intermediate jacket panels following steps 4 & 5.
7. On each base, connect gas valve harness and pilot spark wire to control (**Figures #29A & #29B**).

Figure #29A


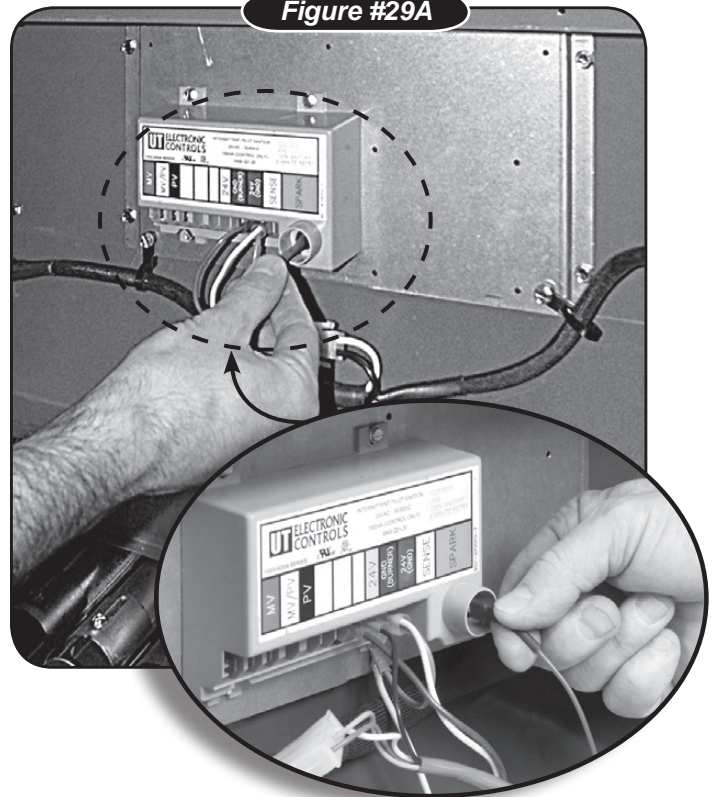


Figure #29B

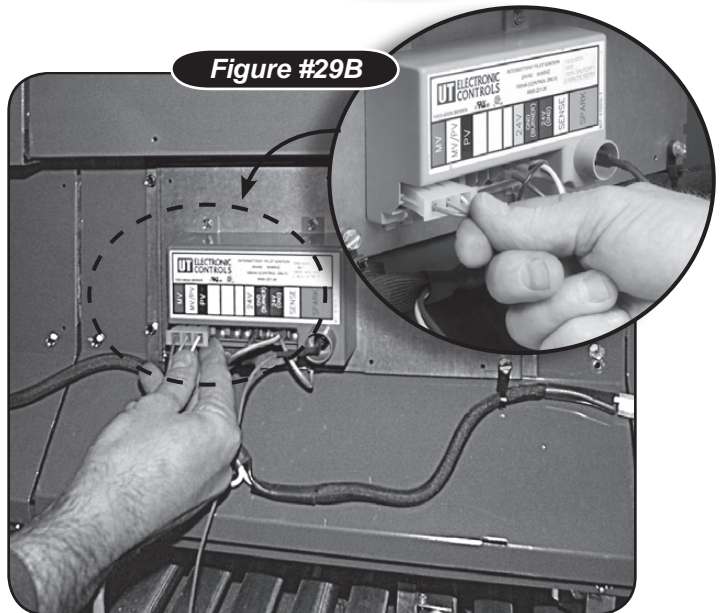


CAST IRON HOT WATER OR STEAM BOILER

TAPPINGS

Illustration shows the end section and the various tappings provided. Tappings are the same in both right and left end sections, except for the drain valve tapping which is $\frac{3}{4}$ " left end, and $1\frac{1}{4}$ " right end.

OPENING	SIZE	STEAM	WATER
A	4"	Supply and Return	Supply and Return
B	$\frac{1}{2}$ "	Primary LWCO and Gauge Glass Set	Plugged
C	$1\frac{1}{2}$ "	Drain, Left End	Drain, Left End
C	$\frac{3}{4}$ "	Drain, Right End	Drain, Right End
D	$\frac{1}{2}$ "	Plugged	Limit Control
E	1"	Accessories	Accessories
*F	1"	Pop Safety Valve	Pressure Relief Valve
G	$\frac{3}{4}$ "	Plugged or Electronic (Probe Type) LWCO	Plugged

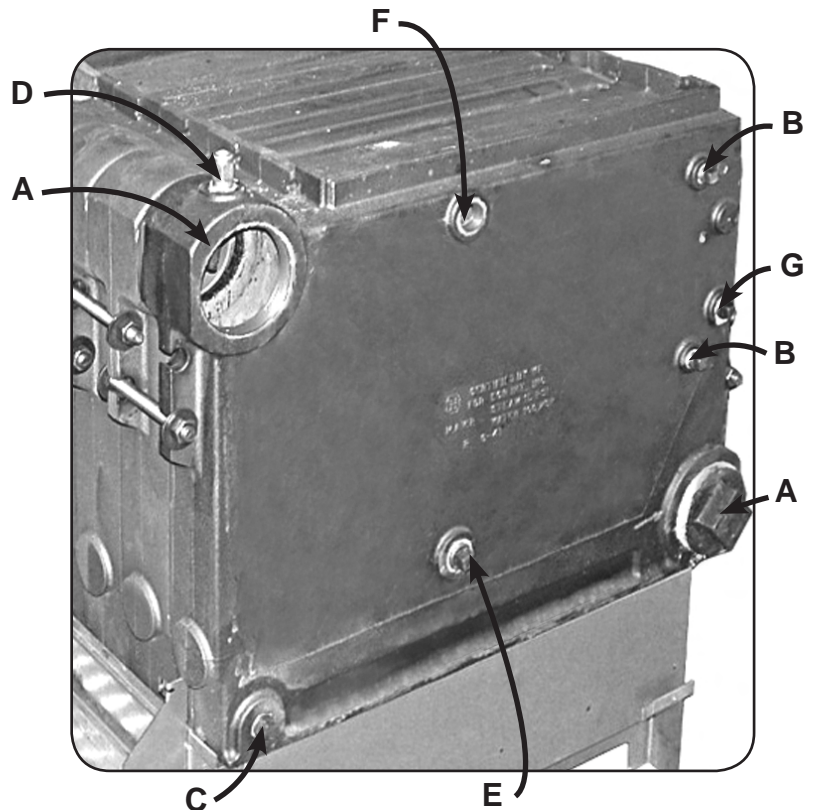

*If opening F is to be used for something other than the Pop Safety Valve or Pressure Relief Valve, or the Safety/Relief valve is larger than 1", the Safety/Relief Valve must be installed in the Header Piping as near the boiler as possible

BOILER TRIM

The following controls are supplied as standard equipment. Details of their function and operation will be found in the section on Controls and Adjustments.

WATER TRIM

1. Water temperature high limit control
2. Combination temperature - pressure gauge
3. Pressure relief valve (30 lbs.)

WATER TRIM ASSEMBLY

Locate water trim controls per chart and illustration above.

STEAM TRIM


1. Low Water Cut-Off (mounted externally) with blow-off valve
2. High Pressure Limit Control
3. Pressure Gauge
4. Water Gauge Glass Set
5. Siphon Loop
6. Pop Safety Valve (15 lbs.)

STEAM TRIM ASSEMBLY

Assemble Steam Trim, Low Water Cut-Off, High Pressure Limit Control, Pressure Gauge, Water Gauge Glass Set and Siphon Loop, as shown in **Figures #30**. See Illustration and Chart above for location of controls.

NOTE:

No shutoff of any description shall be placed between the pressure relief valve and the boiler, or on discharge pipes between such safety valves and the atmosphere. Installation of the pressure relief valve shall conform to the requirements of the ANSI/ASME Boiler and Pressure Vessel Code, Section IV.

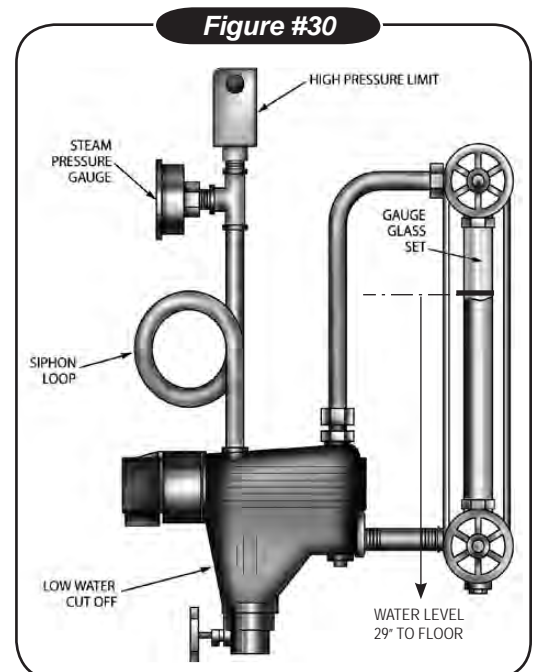

CAST IRON HOT WATER OR STEAM BOILER

BOILER PIPING

BOILERS USED WITH REFRIGERATION SYSTEM

When the boiler is installed in connection with a refrigeration system, it must be piped so that the chilled medium is piped in parallel with the heating boiler with appropriate valves to prevent the chilled medium from entering the heating system. An example of such piping is shown in **Figure #31**. Valve A and B open for heating, closed for cooling. Valves C and D closed for heating, open for cooling.

When hot water boilers are connected to heating coils located in air handling units where they may be exposed to refrigerated air circulation on the boiler piping, the boiler piping system shall be equipped with flow control valves or other automatic means to prevent gravity circulation of the boiler water during the cooling cycle.


WATER BOILER PIPING (Figures 32)

Supply and return connections to the hot water boiler should be located so that the water will thoroughly circulate throughout the entire boiler. Each installation has a preferred piping arrangement according to the requirements of the particular system and choice of arrangements and sizes of headers should be decided upon by the installer's heating engineer or with standard engineering practice. When using only one supply and one return connection, return must be connected at opposite end of boiler from flow connection, on all boilers 600,000 Btu/hr input and larger.

HIGH LIMIT

The immersion well for the high limit control must be mounted at flow outlet of boiler. This may be either right or left hand. The temperature and pressure gages should be mounted at the outlet as well, and may be the opposite and of the high limit control.

Figure #31

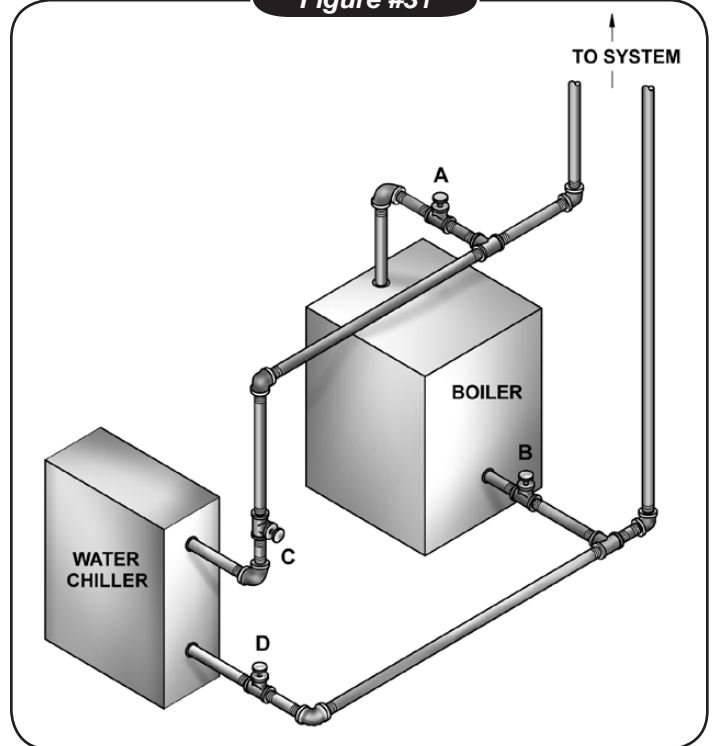

PIPE SIZING

Piping connection sizes are important to control proper water velocity at the inlet and outlet connections to the water boiler. It is recommended that the following pipe sizes be used for flow rates shown and that the boiler being headered to tapings at both ends, where one pipe connection will not be adequate to hold water velocities below 3.33 feet per second.

FLOW RATE GPM	PIPE SIZE
35 - 50	2½"
51 - 76	3"
77 - 131	4"
132 - 205	5"
206 - 300	6"

Figure #32


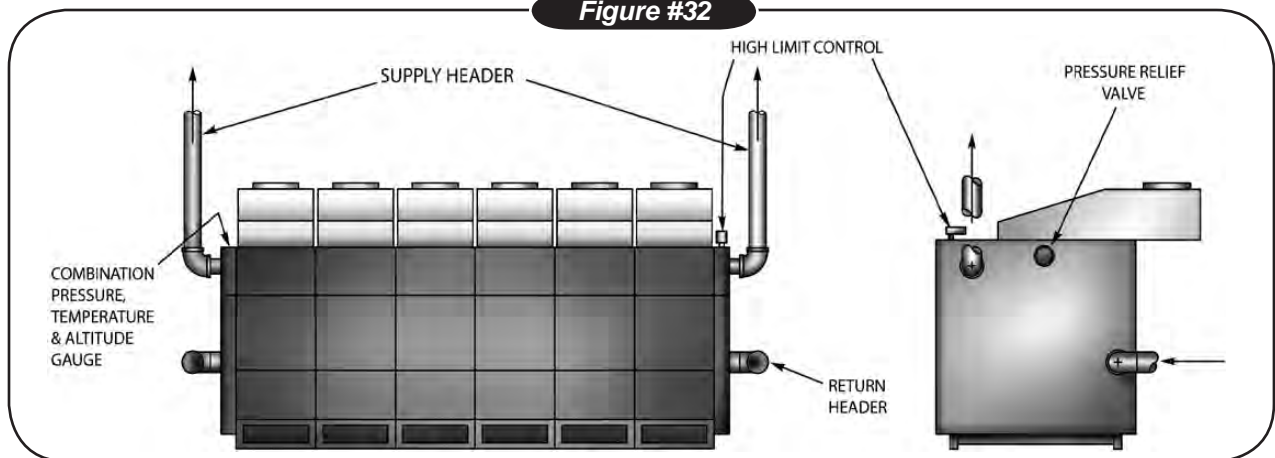



Figure #33

STEAM BOILERS - SERIES S
BOILER TAPPINGS ARE AVAILABLE FOR ALL CONNECTIONS SHOWN


NOTE: Mount electrical supply on opposite side.

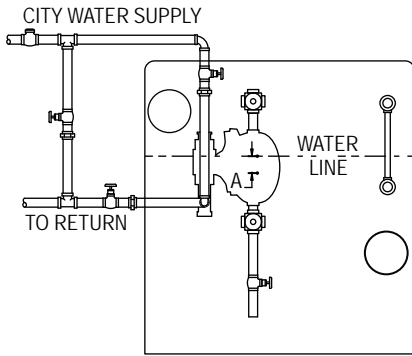

McDONNELL FEEDER CUTOFF COMBINATION

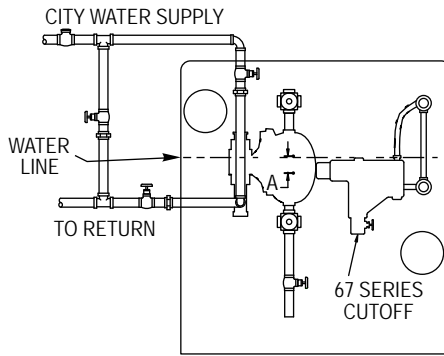

SEPERATE McDONNELL FEEDER AND SEPERATE McDONNELL LOW-WATER CUTOFF

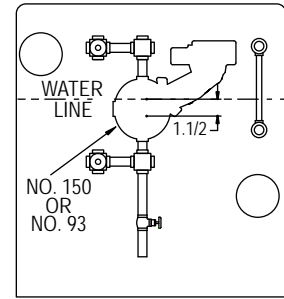

McDONNELL PUMP CONTROL AND LOW-WATER CUTOFF USED WITH CONDENSATE RECEIVER AND ELECTRIC BOILER FEED PUMP

BOILER SIZE	USE
300 THRU 1500	No. 47-2* Control Mounts in Gauge Glass Tappings
1600 THRU 3000	No. 51.2* Control Mounts in 1-inch Tappings

NOTE: For multiple boiler installation with gravity return, use feeder Cutoff Combination or separate feeder and separate cutoff on each boiler.

FOR CLOSED HEATING SYSTEMS
 DIMENSION A = 2 • 2 ½

*These items available through your Distributor.

BOILER SIZE	USE
300 THRU 1500	No. 247 mechanical feeder or No. 101-24V electric feeder with transformer - for use on closed heating systems only.
1600 THRU 3000	No. 51.2*

NOTE: For multiple installation with condensate tank and single boiler feed pump, use No. 93 on each boiler to operate motorized valve in each boiler feed line.


FOR CLOSED HEATING SYSTEMS
 DIMENSION A - 2 = 2 ½ inches

FOR PROCESS OR PARTIAL PROCESS SYSTEMS
 DIMENSION A - 1 = 1 ½ inches


Figure #34

WATER BOILERS - SERIES W
BOILER TAPPINGS ARE AVAILABLE FOR ALL CONNECTIONS SHOWN WITH EXCEPTION OF NO. 764 WHICH MOUNTS IN PIPING


NOTE: Mount electrical supply on opposite side.

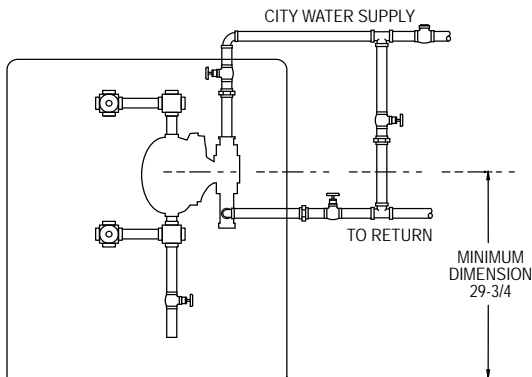

McDONNELL FEEDER CUT-OFF COMBINATION

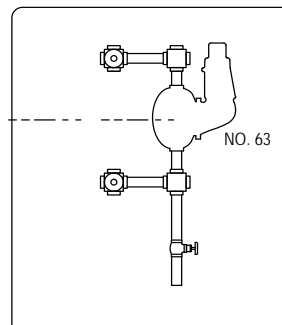

McDONNELL LOW-WATER CUT-OFF

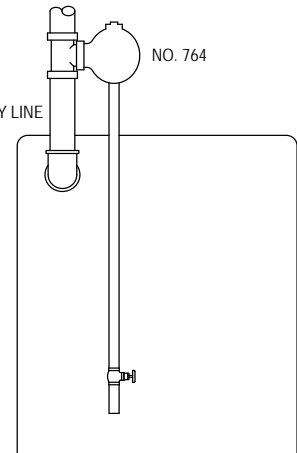

For boilers with up to 75-psi relief valve setting**

BOILER SIZE	USE
ALL SIZES	No. 53-2

For boilers with 30-psi relief valve setting

BOILER SIZE	USE
300 THRU 1500	No. 247-2
1600 THRU 3000	No. 51-2*

For boilers with 75-to 100-psi relief valve setting

BOILER SIZE	USE
ALL SIZES	No. 150

For all boilers upto 50-psi relief valve setting

BOILER SIZE	USE
ALL SIZES	No. 63*
ALL SIZES	NO. 764*


*These items available through your Distributor.
 ** Water supply pressure must exceed relief valve setting by at least 20 psi.

CAST IRON HOT WATER OR STEAM BOILER

BOILER PIPING *Continued*

Figure #35

STEAM BOILER PIPING

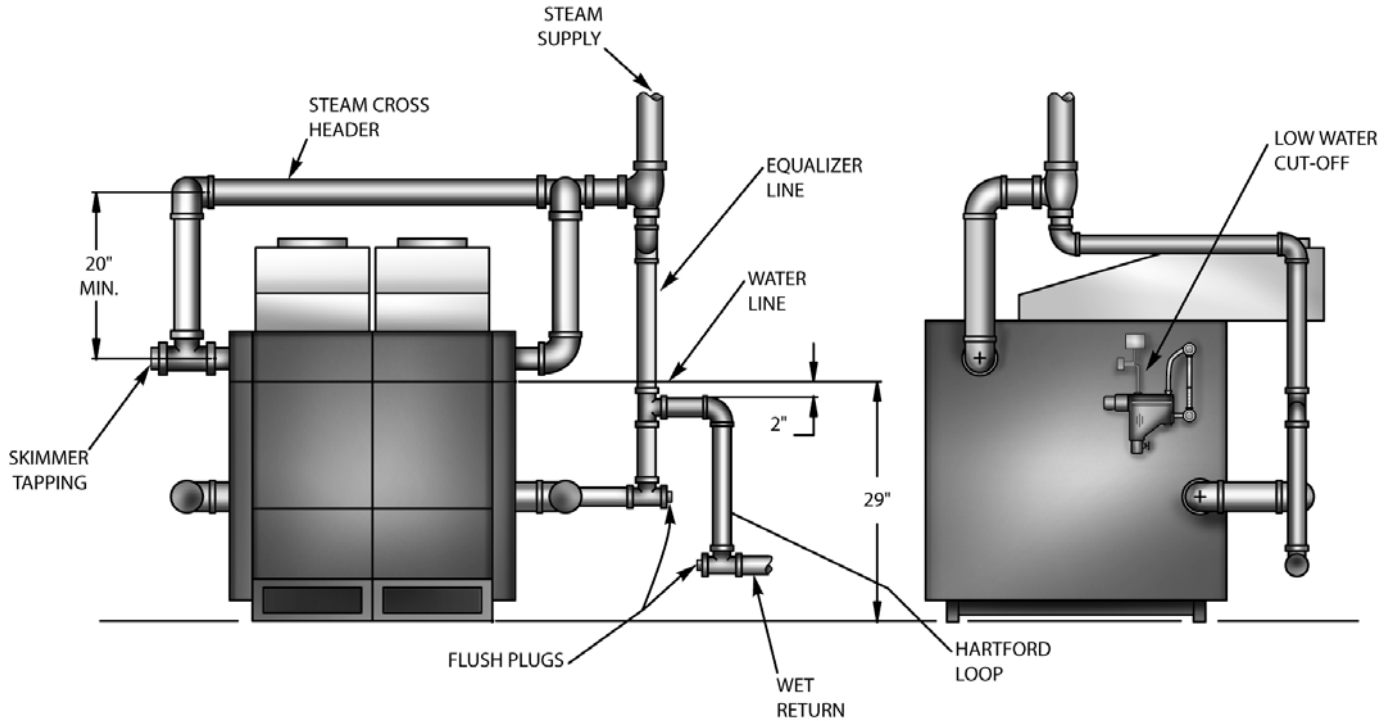

POP SAFETY VALVE SHOULD BE FIELD INSTALLED AS CLOSE AS POSSIBLE TO BOILER

STEAM BOILER PIPING (Figure #35)

A full size steam header is recommended on all steam systems as shown above. On Boiler Models 300, 400 and 500 the full header may be eliminated and a single steam header taken off either side of the boiler provided the system is clean and properly designed.

Risers should be a full 4" and at least 20" in height. Use skimmer tee as shown.

The area of the Main Steam Cross Header Pipe should be equal to or larger than the total area of the Steam Supply Mains leading from the Header and should never be smaller than Supply Tappings on Boiler. The Return Header should be piped to both ends of the Boiler. The area of the Return Header should be equal to the total area of the Return Mains or larger.

Steam cross headers must be piped with swing joints, or be equipped with a slip joint connector, in order to prevent expansion and contraction of steam header from damaging boiler.

Each installation has a preferred piping arrangement according to the requirements of the particular system and choice of arrangements and sizes of Headers should be decided upon by the installer's heating engineer or with standard engineering practice.

⚠ WARNING ⚠

NEVER INSTALL A SHUT-OFF OR STEAM VALVE BETWEEN THE POP SAFETY VALVE AND THE BOILER.

Steam Piping Size			
Model	Header	Riser	Equalizer
300 to 900	4"	4"	2"
1000 to 1900	4"	4"	2 1/2"
2000 to 2500	4"	4"	3"
2600 to 3000	4"	4"	4"

CAST IRON HOT WATER OR STEAM BOILER

CONNECTING GAS SERVICE

Connect gas service from meter to control assembly(s) in accordance with ANSI Z223.1-latest revision and local codes or utility. On multiple base boilers, connect gas service with branch lines from common main. Individual branch lines must be the same size as the inlet to the gas valve. A ground joint union should be installed in each branch line for easy servicing of gas controls. A drip leg or trap should be installed at the bottom of a vertical section of piping at the inlet to each branch line, **Figure #36**. A pipe compound resistant to the action of liquefied petroleum gases must be used on all threaded pipe connections.

The main gas supply line should be adequate to prevent undue pressure drop. See **Chart #5** for pipe sizes for gas mains.

To check for leaks in gas piping, use a soap and water solution or other approved method, **DO NOT USE AN OPEN FLAME**.

The boiler must be disconnected from the gas supply piping system during any pressure testing of that system. Test the gas connection to the boiler before placing the boiler in operation. See **Chart #4** for appropriate minimum and maximum gas supply pressures.

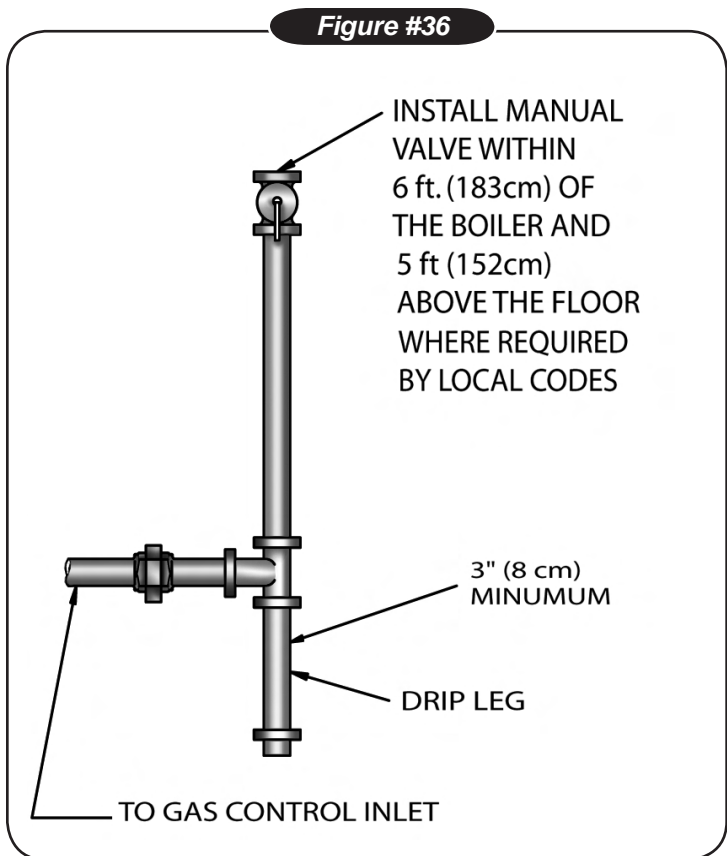


Chart #4						
Minimum Gas Supply Pressure						
Models	5.0 inches w.c.					
		300	500	600	1000	1300
	2000	2100	2500	2600	3000	
Models	5.3 inches w.c.					
	400	700	800	900	1100	1200
	1400	1600	1700	1800	1900	2200
	2300	2400	2700	2800	2900	
All Models	Maximum Gas Supply Pressure					
	14.0 inches w.c.					
All Models	Manifold Pressure					
	3.5 inches w.c.					

Chart #5									
TABLE OF PIPE SIZES IN INCHES FOR GAS MAINS (NATURAL GAS)									
Boiler No	20'	30'	40'	50'	60'	80'	100'	125'	150'
300	1¼	1¼	1¼	1¼	1¼	1¼	1½	1½	1½
400	1¼	1¼	1¼	1¼	1½	1½	1½	1½	2
500	1¼	1¼	1¼	1½	1½	1½	2	2	2
600	1¼	1½	1½	1½	2	2	2	2	2
700	1¼	1½	1½	2	2	2	2	2	2½
800	1½	1½	2	2	2	2	2	2½	2½
900	1½	2	2	2	2	2	2½	2½	2½
1000	1½	2	2	2	2	2½	2½	2½	2½
1100	2	2	2	2	2	2½	2½	2½	2½
1200	2	2	2	2	2½	2½	2½	2½	3
1300	2	2	2	2½	2½	2½	2½	3	3
1400	2	2	2	2½	2½	2½	3	3	3
1500	2	2	2½	2½	2½	2½	3	3	3
1600	2	2	2½	2½	2½	2½	3	3	3
1700	2	2½	2½	2½	2½	3	3	3	3
1800	2	2½	2½	2½	2½	3	3	3	3
1900	2	2½	2½	2½	3	3	3	3	3
2000	2	2½	2½	2½	3	3	3	3	3
2100	2½	2½	2½	3	3	3	3	3	4
2200	2½	2½	2½	3	3	3	3	4	4
2300	2½	2½	3	3	3	3	3	4	4
2400	2½	2½	3	3	3	3	3	4	4
2500	2½	3	3	3	3	3	4	4	4
2600	3	3	3	3	3	4	4	4	4
2700	3	3	3	3	4	4	4	4	4
2800	3	3	3	4	4	4	4	4	4
2900	3	3	4	4	4	4	4	4	4
3000	3	4	4	4	4	4	4	4	4

CAST IRON HOT WATER OR STEAM BOILER

ELECTRICAL WIRING

Wiring connections are to be made in accordance with the National Electrical Code, ANSI/NFPA 70-2002 and/or local authority having jurisdiction. When an external electrical source is utilized, the boiler must be electrically grounded in accordance with these requirements. Install a fused disconnect switch between boiler and electrical panel in a convenient location. The wiring from high temperature limit control should be secured to the boiler jacket or gas piping to prevent an accidental disconnect from controls.

All wiring to gas valves must be taped securely to the gas supply lines or run in an appropriate conduit.



WARNING

TURN OFF ELECTRIC POWER AT FUSE BOX BEFORE MAKING ANY LINE VOLTAGE CONNECTION. FOLLOW LOCAL ELECTRICAL CODES.

INSTALLING THERMOSTAT

The thermostat location has an important effect on the operation of the boiler system. Be sure to follow the instructions included with the thermostat. Locate the thermostat about 5 feet above the floor on an inside wall. It should be sensing average temperature.

Keep thermostat(s) at desired room temperature. If windows are to be opened or heat is not needed, set thermostat(s) pointer to a lower setting.

PLACES TO AVOID LOCATING THERMOSTAT

PLACES TO AVOID LOCATING THERMOSTAT	
Dead Spots	Behind Doors
	Corners and Alcoves
Hot Spots	Concealed Pipes
	Fireplaces
	TV Sets
	Lamps
	Direct Sunlight
	Kitchens
Cold Spots	Concealed Pipes or Ducts
	Stairwells
	Drafts
	Unheated Rooms on other side of wall

ADJUST THERMOSTAT HEAT ANTICIPATOR

Suggested heat anticipator setting is .90 amps (set accordingly). Then follow instructions packaged with thermostat for the final adjustment, **checking thermostat operation**. When set above temperature indicated on the thermometer, boiler burners should ignite. Make certain the thermostat(s) turns off the boiler when room temperature reaches the selected setting and starts the boiler operating when room temperature falls a few degrees.

Finally, set the thermostat for the desired temperature. Special conditions in building and the location of the thermostat will govern this setting.

STAGE FIRING MULTIPLE BASE BOILERS

Multiple base hot water boilers are ideal for stage firing. Many controls are available for sequencing or stage firing multiple base hot water boilers. We offer Argo AMB Outdoor Reset Stage Fire Control Packages that will sequence up to eight bases, with lead boiler rotation, adjustable reset ratio, set point boiler rotation, and microprocessor control. This control will fire bases as required to maintain supply water temperature at a desired set point, which is automatically varied based on outdoor air temperature. Consult the boiler manufacturer for more information.




CAUTION

Label all wires prior to disconnection when servicing controls. Wiring errors can cause improper and dangerous operation. Verify proper operation after servicing.


CAST IRON HOT WATER OR STEAM BOILER

Figure #37

COMMERCIAL BOILER, 1, 2 & 3 BASE

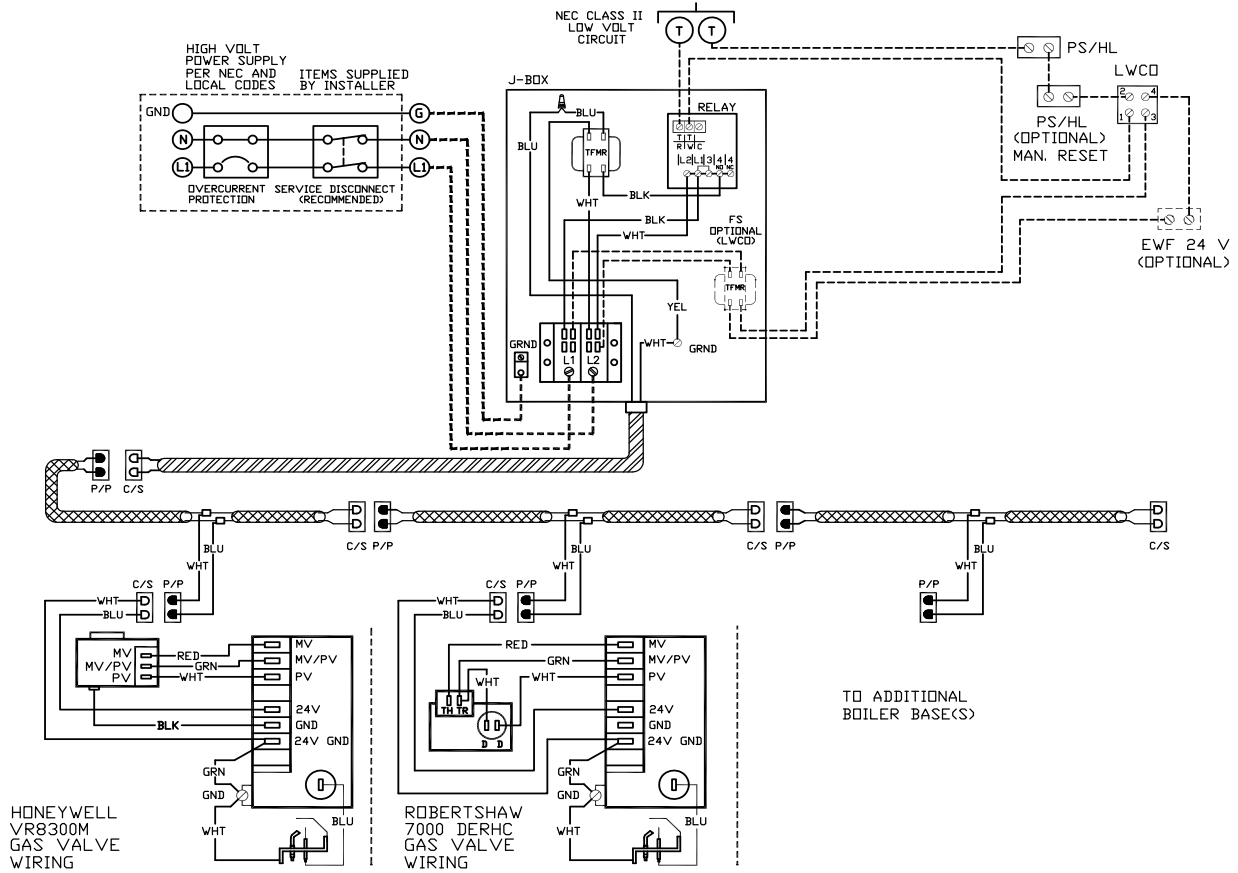

WIRING SCHEMATIC

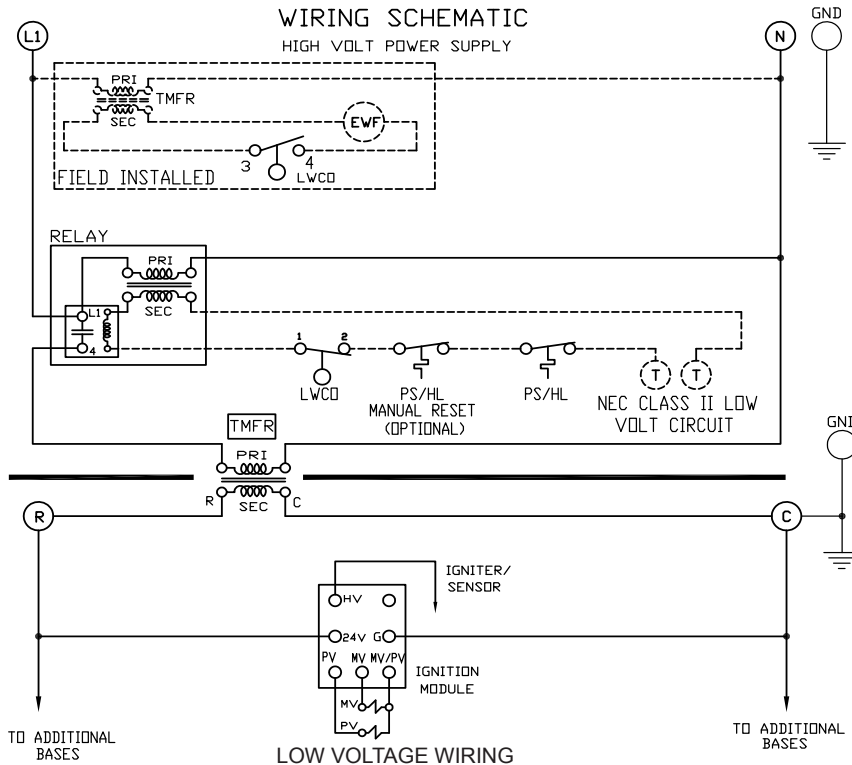

LEGEND


- LWCD = LOW WATER CUT OFF
- FS = FIELD SUPPLIED
- HL = HIGH LIMIT
- MV = MAIN VALVE
- PV = PILOT VALVE
- PSS = PILOT SAFETY SHUTOFF
- WTS = WATER TEMPERATURE SENSOR
- EWF = ELECTRIC WATER FEEDER
- P/P = PLUG/PIN
- C/S = CAP/SOCKET

- HIGH VOLT FIELD INSTALLED
- LOW VOLT FIELD INSTALLED

CAST IRON HOT WATER OR STEAM BOILER


Figure #38

COMMERCIAL BOILER, 4, 5 & 6 BASE

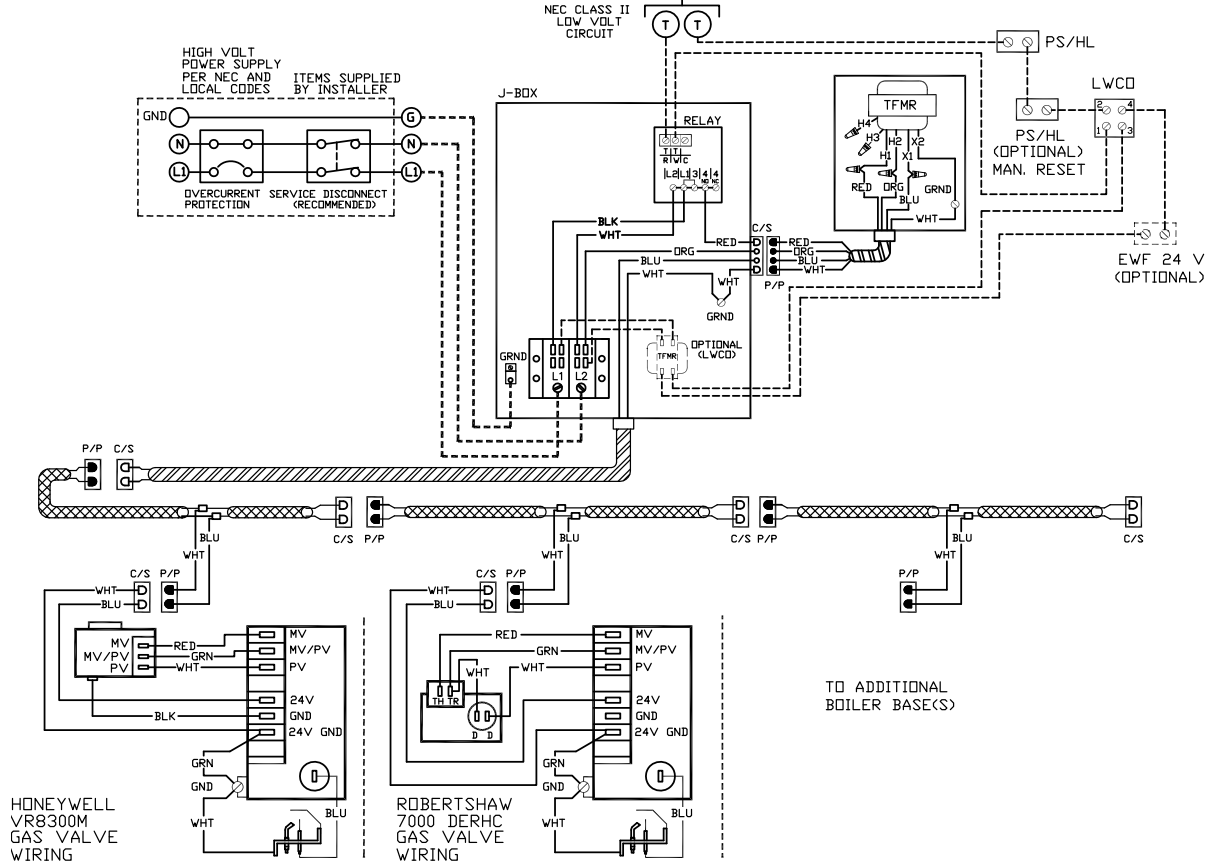

WIRING SCHEMATIC

HIGH VOLT POWER SUPPLY

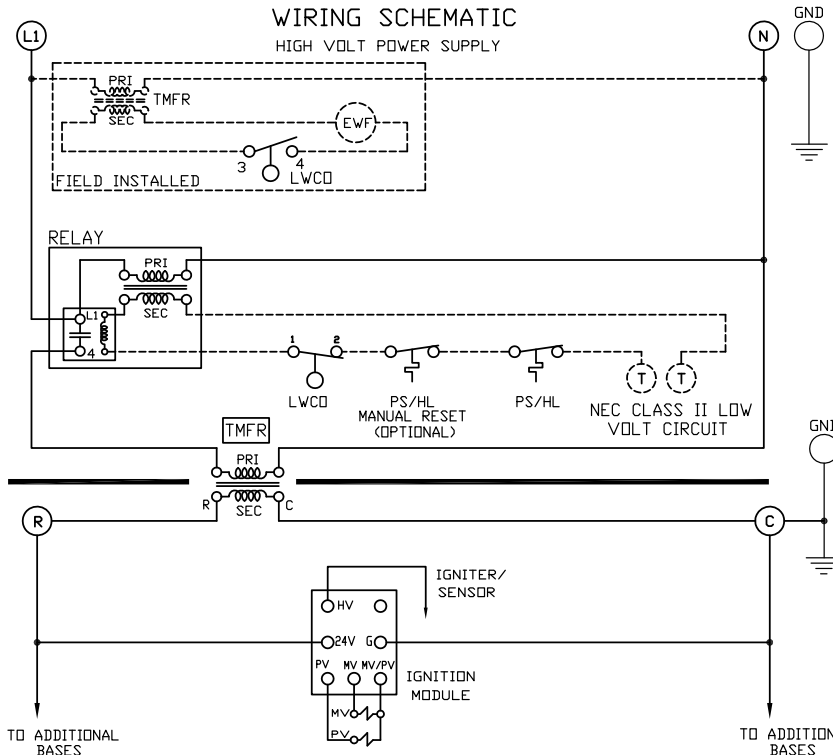

LEGEND

- LWCD = LOW WATER CUT OFF
- FS = FIELD SUPPLIED
- PS = PRESSURE SWITCH
- HL = HIGH LIMIT
- PRI = PRIORITY
- MV = MAIN VALVE
- PV = PILOT VALVE
- WTS = WATER TEMPERATURE SENSOR
- EWF = ELECTRIC WATER FEEDER
- P/P = PLUG/PIN
- C/S = CAP/SOCKET

- HIGH VOLT FIELD INSTALLED
- LOW VOLT FIELD INSTALLED

LOW VOLTAGE WIRING

OPERATION AND SERVICE

CONTROL FUNCTIONS AND OPERATION

The control module performs the following basic functions:

1. Opens and closes the first (pilot) operator of the gas valve.
2. Provides a spark for igniting pilot burner.
3. Senses the pilot burner flame.
4. Shuts off the spark after pilot flame is lit.
5. Opens and closes the second (main) operator.

These functions occur in two stages - trial for pilot ignition and main burner operation as described below.

TRIAL FOR PILOT IGNITION

On every call for heat (system start), the control performs an internal safe-start check. If a flame simulating condition is present, the system will not start.

During a normal start, the control opens the first (pilot) valve operator of the gas control, which allows gas to flow to the pilot burner. At the same time, the electronic spark generator in the control produces a 15,000 Volt spark pulse output (open circuit). This voltage produces a spark at the igniter sensor rod which ignites the pilot burner. If the pilot flame does not light or the presence of the pilot flame is not detected back through the flamerod, the control will not open the second (Main) valve operator of the gas control. The control will continue to try to ignite the pilot burner until either a flame is detected or the thermostat (controller) is set down below a call for heat.

MAIN BURNER OPERATION

When the pilot flame is established, a flame rectification circuit is completed to the burner ground. The control flame sensing circuit detects the flame current, shuts off the spark generator and opens the second (Main) valve operator to allow gas to flow to the main burners. The pilot flame ignites the main burner conventionally.

IMPORTANT: The electronic control module cannot be repaired. If the troubleshooting procedure indicates a malfunction in the control, the control must be replaced. Intermittent Pilot systems should be serviced only by trained, experienced service technicians.

PRELIMINARY CHECK

The following visual checks should be made before troubleshooting and after maintenance.

1. Check power switch.
2. Manual shutoff cocks in the gas line to the boiler must be open.

3. Make sure all wiring connections are clean and tight.
4. Review the control's normal sequence of operation.

SYSTEM TROUBLESHOOTING

Start the system by setting the thermostat or controller above room temperature and observe the system response.

Establish the type of system malfunction or deviation from normal operation by using the Pilot System Troubleshooting Table, in the following section.

Use the table by following the questions in the boxes. If the condition is true (answer is yes), go down to next box. If the condition is not true (answer is no), go to the box alongside.

Continue checking and answering conditions in each box until a problem and/or the repair is explained. Use the Component Checks section, see below, as necessary, to perform system checks.

After any maintenance or repair, the troubleshooting sequence should be repeated until the procedure ends with normal system operation.

COMPONENT CHECKS CHECK SPARK IGNITION CIRCUIT

The Electronic module and step-up transformer in the control provides spark ignition at 15,000 V (open circuit). This circuit can be checked at the control module as follows:

1. Turn off manual gas cock to prevent the flow of gas.
2. Disconnect the ignition cable at the control stud terminal to isolate the circuit from the pilot burner/igniter-sensor, and prepare a short jumper lead using heavily insulated wire, such as ignition wire.
3. Energize the control and touch one end of the jumper firmly to the control ground terminal (GND). (**Do not disconnect the existing ground lead.**) Move the free end slowly toward the stud terminal to establish a spark and then pull the lead wire slowly away from the stud. Note the length of the gap at which arcing discontinues.
4. An arc length of 1/8 inch (3.2 mm) or more indicates satisfactory voltage output. If no arc can be established or the maximum gap is less than 1/8 inch (3.2 mm), replace the control.



DO NOT TOUCH EITHER END OF JUMPER OR STUD TERMINAL. THIS IS A VERY HIGH VOLTAGE CIRCUIT AND ELECTRICAL SHOCK CAN RESULT.

OPERATION AND SERVICE

IGNITION CABLE CHECK

Cable must not run in continuous contact with a metal surface or spark voltage will be greatly reduced. Connections to the stud terminal on the control and on the igniter-sensor must be clean and tight. Loose connections may not conduct a flame current even though the ignition spark is satisfactory. Check the electrical continuity of the cable.

CHECK GROUNDING

A common ground is required for the pilot burner/igniter-sensor mounting bracket, and the GND terminal of the control. If the ground is poor or erratic, safety shutdown may occur occasionally even though operation is normal at the time of the checkout. Therefore, if nuisance shutdowns occur, be sure to check the grounding.

STARTUP AND CHECKOUT

NOTE: *If any component in the system fails, the system will not operate. If the system does not perform as outlined in Start System, below, refer to the Pilot System Trouble-shooting Table.*

START SYSTEM

1. Turn on power to the control(s) and turn off gas supply.
2. Check control(s) operation as follows:
 - a) Set the Thermostat or controller above room temperature to call for heat.
 - b) Watch for spark at the pilot burner(s).
3. Turn on gas supply.
4. System should start as follows:
 - a) Spark will turn on and pilot gas valve will open at once. Pilot burner(s) should ignite after gas reaches the pilot burner(s).
 - b) Spark ignition should cut off when pilot flame is established.
 - c) Main gas valve should open and main burners should ignite after gas reaches the burner ports.

NOTE: *Lightoff may not be satisfactory until the gas input and combustion air have been adjusted.*



WARNING

DO NOT OMIT THIS TEST


With main burners in operation, paint pipe joints, pilot tubing, connections, screws, and valve(s) gaskets with a rich soap and water solution. Bubbles indicate gas leakage. To stop leak, tighten joints and screws or replace gaskets. Never use a flame to check for gas leaks.

PILOT FLAME ADJUSTMENT


The pilot flame should envelop 3/8 to 1/2 inch of the tip of the insulated rod on the igniter-sensor. If adjustment is required, remove the pilot adjustment cover screw and turn the inner adjustment screw clockwise to decrease or counterclockwise to increase the pilot flame. Be sure to replace cover screw after adjustment to prevent possible gas leakage.

Figure #41

PROPER FLAME ADJUSTMENT

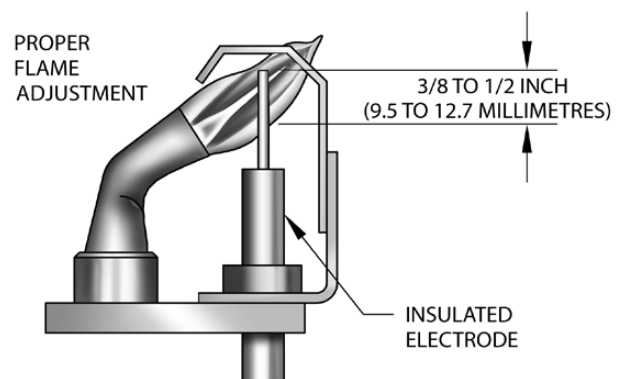

PILOT SYSTEM TROUBLESHOOTING TABLE

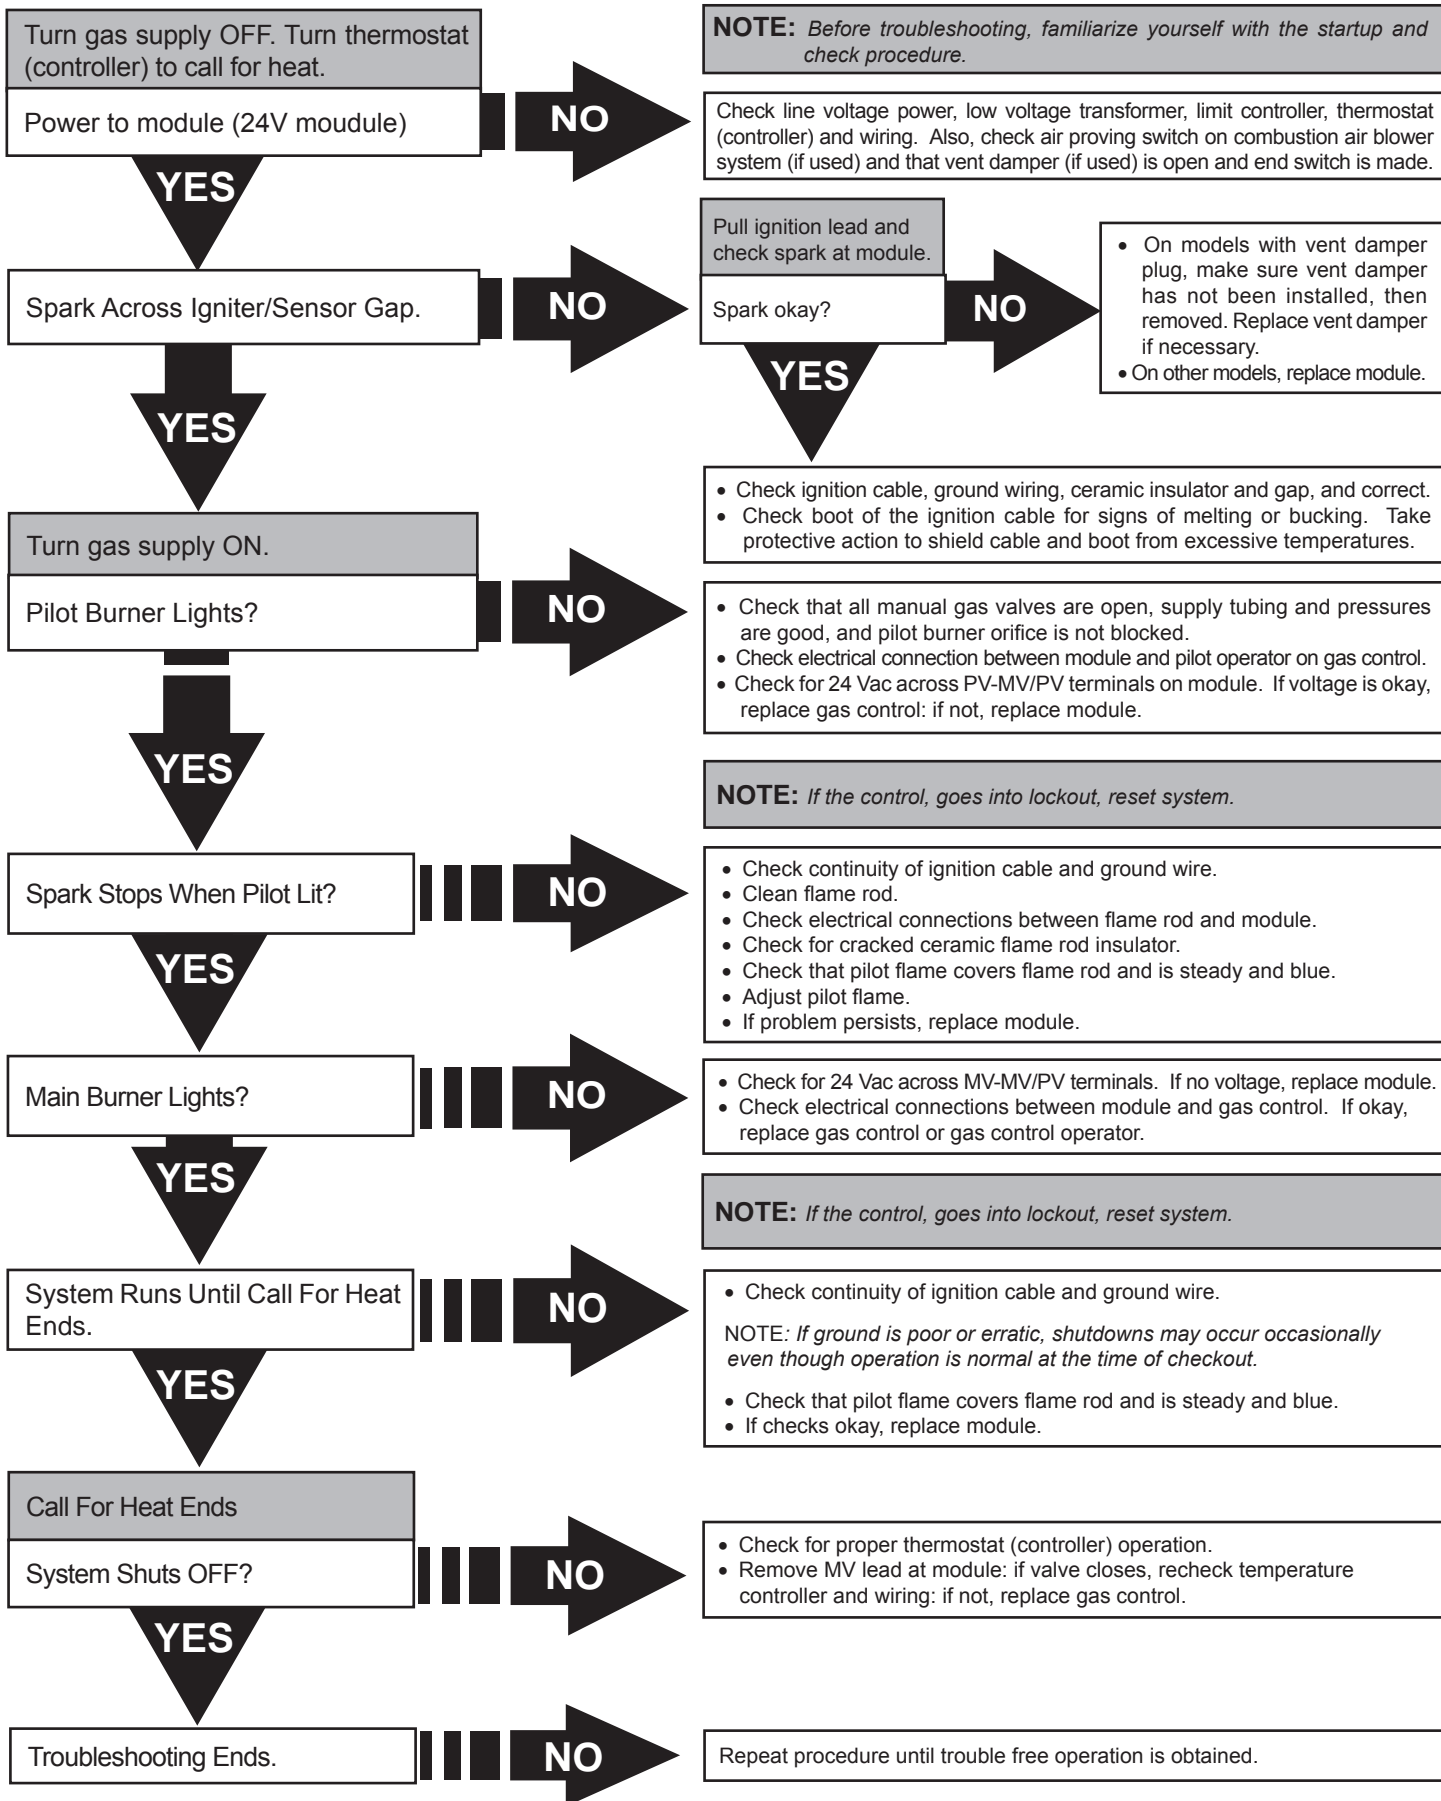

CHECKING AND ADJUSTING

CHECK BURNER INPUT

Check boiler for proper Btu input rate.



CAUTION

Do not exceed the Input rate stamped on the nameplate of the boiler located on the End Jacket Panel.

Make certain primary air supply to the Main burners is properly adjusted for complete combustion.



WARNING

If boiler is shut down for service, the gas and electric must be off for 5 minutes before relighting.

To check boiler for proper Btu Input proceed as follows:

With main burners operating, measure the gas Input to the boiler by reading the meter. Be sure all other appliances connected to the same meter are shut off. Rate of gas flow (cu. ft. per hour) multiplied by the Btu value of the gas should check with the Btu Input shown on the nameplate of the boiler. If it is not within +/- 2%, adjust Pressure Regulator to obtain the desired flow (stem for adjustment is under the cap in the top of the regulator). **TURN CLOCKWISE TO INCREASE INPUT AND COUNTERCLOCKWISE TO DECREASE THE INPUT RATE.**

NOTE: The adjustment screw is plastic and may require slightly greater turning force than metal threads.

Be sure to replace Regulator Cap.

HIGH LIMIT CONTROL

While the boiler is operating, set the high limit control below boiler water temperature and the main burners should shut off. Return the control to the normal setting and the main burners should start again.

PRESSURE RELIEF VALVE

You must have a pressure relief valve on the boiler. The Relief Valve on water boilers is set at 30 psig, (50 psig optional.) Run a pipe from the pressure relief valve outlet to an open drain. This pipe must be of same size as outlet on valve and open end must not be threaded. This drain must be run in an area not subject to freezing. Failure to do so may cause water damage or injury should valve release.

If valve discharge occurs, or if valve fails to open as described above, contact an authorized contractor or qualified service technician to replace the relief valve and inspect the heating


system to determine the cause, as this may indicate an equipment malfunction.

This valve should be tested every month during periods of boiler operation, and at the beginning and end of any extended non-service period. Prior to testing, make certain discharge pipe is properly connected to valve outlet and arranged so as to contain and safely dispose of boiler discharge. Test at normal system operating pressure. Hold the trip lever fully open for at least five seconds in order to flush free any sediment that may lodge on the valve seat. Then permit the valve to snap shut.

BURNER AND PILOT FLAME

We recommend that you make a periodic visual check of the burners and pilot flame (**Figure #42**). During this visual check look for any deterioration from corrosion or other sources of the burners, pilot burners and boiler base frame. Also be sure the boiler base interior and exterior are clean. This visual check should be made once every month during the heating season by the owner and once a year by a competent service technician to assure safe and trouble-free operation.

Figure #42

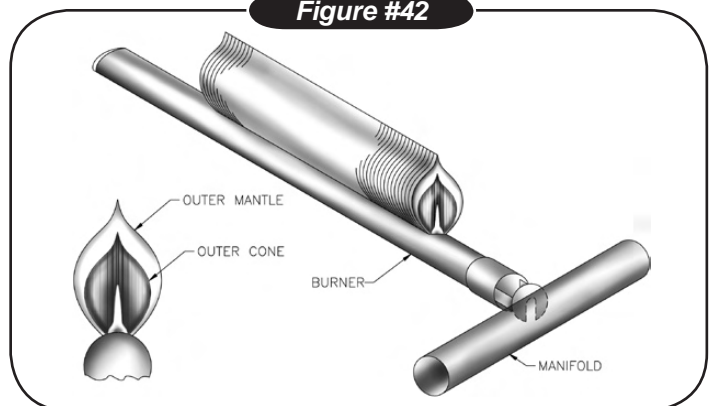

BOILER FLUE PASSAGES

Under normal operating conditions, with the burners adjusted properly, it should not be necessary to clean the boiler flue gas passages. However, to assure trouble-free operation, we recommend that you have the flue passages, burner adjustments and operation of the boiler controls checked once each year by a competent service technician. If it becomes necessary to clean flue passages, first remove the burners and pilot(s) from the boiler. Next refer to **Figure #13** in the **Installing Draft Hood Section** in the front of this instruction and remove the clean-cut cover panel on the draft hood. This will expose the flue passages. Clean flue passageways between the sections with flexible handle wire brush. Remove all dirt from bottom of boiler and reassemble all parts. Be sure to check tightness of pilot connection(s) and adjustment of pilot(s) and burner flames after reassembly.

CHECKING AND ADJUSTING

VENTING SYSTEM

The vent system is a very important part of the heating system. No boiler, however efficient its design, can perform satisfactorily if the chimney that serves it is inadequate. Check your chimney to make sure that it is the right size, properly constructed, clean and in good condition to ensure proper combustion and THAT NO HAZARD WILL DEVELOP You must also provide enough FRESH AIR FOR COMBUSTION. LACK OF ENOUGH OXYGEN WILL CREATE A HAZARD. If your building is of tight construction, it may be necessary to add a FRESH AIR DUCT to provide the OXYGEN required (*Refer to Chart #2 in the front of this manual*).

AT LEAST ONCE A MONTH DURING HEATING SEASON check to see that the sections of vent pipe are secure at all joints and fittings. There should be at least two (2) sheet metal screws per joint.

Check to see that the vent pipe slopes at least 1/4" per foot up from the boiler to the chimney. The vent pipe should be securely fastened to prevent sagging.

The Vent Pipe should also be checked for any deterioration from corrosion or any other sources. *Refer to Venting and Combustion Air instructions in the front of this manual.*

CLEANING AND MAINTENANCE

CLEANING THE NEW STEAM BOILER

New steam boilers must be cleaned previous to or during the first few days of use in order to ensure efficient operation. The grease or oil used to lubricate the cutting tools or push nipples during the erection of new piping systems picks up sand and dirt causing a scum of fine particles and grease to accumulate on the surface of the water in all new boilers, The heavier particles carried in the grease may settle to the bottom of the boiler and form sludge. This condition, if permitted to remain in the boiler, tends to prevent the generation of steam, produces foaming and causes an unsteady water line. This unavoidable accumulation of oil and grease should be removed by blowing off the boiler as follows:

1. Install a surface blow-off connection of at least 1¼' nominal pipe size in boiler using the Skimming Tee shown in **Figure #35**. The blow-off line should extend to within 18" of the floor or to the sewer.
 - a. Insert a valve in the line close to the boiler.
2. Bring the water line to the center of the outlet.
 - a. Raise the temperature to a point just below steaming.
 - b. While the burners are on, open the valve in the skim line and then slowly feed clean water into the boiler adjusting the inlet water so that the boiler water remains hot.
 - c. Continue skimming until the water is clean.

3. Close valves in boiler feed line and skim line.
4. Bring the pressure in the boiler to about 10 lbs.
 - a. Turn off the burners.
 - b. Open the bottom drain valve permitting all the water to drain from boiler.
5. After the boiler has cooled, fill and flush out several times.
6. Fill to proper water level and ready for normal service.

NOTE: Use of soda or any alkali, vinegar or any acid is not recommended for cleaning heating boilers because it is difficult to completely remove them and injury may occur after the cleaning process has been completed.

BOILER WATER TREATMENT

In closed hot water heating systems, negligible amounts of make up water are used, and water treatment is not required.

In steam systems where the system is tight, free from leaks, and all the steam is returned to the boiler as condensate, the amount of make up water is small. Again, water treatment is not required.

CLEANING AND MAINTENANCE

On steam systems with less than 90% of the steam being returned as condensate, or with very hard or corrosive make up water, treatment may be desirable. Follow the recommendations of the ASME (American Society of Mechanical Engineers) Boiler and Pressure Vessel Code, Section VI, latest version.

BETWEEN HEATING SEASONS

Boilers should not be drained between heating seasons. Boilers in closed hot water heating systems may be left as is. Steam boilers should be entirely filled with water during the summer months to exclude air.