

# **APPLICATION GUIDE FOR USE WITH**

## **HEATING ONLY & COMBI**

**MODELS:**  
**MAH-125**  
**MAC-150**  
**DCC-150**  
**DCB-125**

This manual has been prepared for use with the appropriate Installation, Operation and Maintenance Manual.



**Manufactured for:  
ECR International, Inc.  
2201 Dwyer Avenue, Utica NY 13501  
web site: [www.ecrinternational.com](http://www.ecrinternational.com)**

PN 240011430 REV A [04/30/2016]

## TABLE OF CONTENTS

<b>IMPORTANT SAFETY INFORMATION .....</b>	<b>3</b>
<b>HEATING ONLY - HYDRONIC PIPING .....</b>	<b>4</b>
Primary/Secondary, Zoned, With Zone Valves, (Optional) Indirect Tank .....	5
Primary/Secondary, Zoned, WITH ZONE PUMPS, (Optional) Indirect Tank .....	6
Primary/Secondary, Series Loop Pumping, (Optional) Indirect Tank.....	7
<b>WIRING DIAGRAMS .....</b>	<b>8</b>
Heating Only Boiler No Indirect Tank .....	9
Heating Only Boiler With Indirect Tank And Sensor .....	9
Zoned System, With Multiple Zone Valves, Without Indirect Tank.....	11
Zoned System, With Multiple Zone Valves, With Indirect Tank And Sensor .....	12
Boiler With Multiple Zone Pumps, Without Indirect Tank (DHW) .....	14
Boiler With Multiple Zone Pumps, With Indirect Tank (DHW) .....	15
<b>COMBI- Hydronic Piping .....</b>	<b>16</b>
<b>    COMBI- ANTI-SCALD PIPING.....</b>	<b>17</b>
Primary/Secondary, Zoned, With Zone Valves And System Pump .....	18
Primary/Secondary, Zoned, With Zone Pumps .....	19
Primary/Secondary, Series Loop Pumping.....	20
<b>WIRING DIAGRAMS .....</b>	<b>21</b>
Combi Boiler Single Zone with System Supply Pump.....	21
Combi Boiler with Multi-Zone Valves .....	22
Combi Boiler with Multi-Zone , with Multi-Zone Pumps .....	23
Boiler Interface Relay for External Central Heating System Pump Operation.....	24
Optional Equipment .....	26
Available pump head for central heating.....	26
Outdoor Air Sensor & Indirect Tank Sensor Data.....	27
Accessories.....	28
Outdoor Temperature Sensor Kit.....	28
Indirect Storage Tank Sensor Kit.....	29
Heating Only Boiler - Wiring Diagram .....	30
Combi Boiler - Wiring Diagram .....	31
Altitude Effects On Boiler Performance.....	32
Solder Fittings Notice .....	33
Warning Primary/Secondary Closely Spaced Tees .....	34
Application Table - Indirect Tank Sizing .....	35

## IMPORTANT SAFETY INFORMATION

### 1. General

Boiler installation shall be completed by qualified agency. See Installation, Operation & Maintenance Manual for additional information.

#### **WARNING**

Fire, explosion, asphyxiation and electrical shock hazard. Improper installation could result in death or serious injury. Read this manual and understand all requirements before beginning installation.

### 2. Become familiar with symbols identifying potential hazards.



This is the safety alert symbol. Symbol alerts you to potential personal injury hazards. Obey all safety messages following this symbol to avoid possible injury or death.

#### **DANGER**

Indicates a hazardous situation which, if not avoided, WILL result in death or serious injury.

#### **WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### **CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### 3. Installation shall conform to requirements of authority having jurisdiction or in absence of such requirements:

- *United States*

- National Fuel Gas Code, ANSI Z223.1/NFPA 54.
- National Electrical Code, NFPA 70.

- *Canada*

- Natural Gas and Propane Installation Code, CAN/CSA B149.1.
- Canadian Electrical Code, Part I, Safety Standard for Electrical Installations, CSA C22.1

### 4. Where required by authority having jurisdiction, installation shall conform to Standard for Controls and Safety Devices for Automatically Fired Boilers, ANSI/ASME CSD-1.

Additional manual reset low water cutoff or high limit may be required.

### 5. Requirements for Commonwealth of Massachusetts:

Boiler installation must conform to Commonwealth of Massachusetts code 248 CMR which includes but is not limited to:

- Installation by licensed plumber or gas fitter.

# HEATING ONLY - HYDRONIC PIPING

**Note**

Illustrations are meant to show system piping concept only. Installer is responsible for all equipment and detailing required by authority having jurisdiction.

**Note**


Arrange piping to prevent water dripping onto boiler.

Piping installation, materials, and joining methods shall conform to requirements of authority having jurisdiction or in absence of such requirements:

- USA - National Fuel Gas Code, ANSI Z223.1/NFPA 54
- Canada - Natural Gas and Propane Installation Code, CAN/CSA B149.1

**Manufacturer requires all domestic hot water (DHW) installations use an anti-scald valve.** Local codes may require additional equipment (expansion tank, relief valves, etc.) Select and size equipment to suit installation and meet code requirements.

## Piping Legend

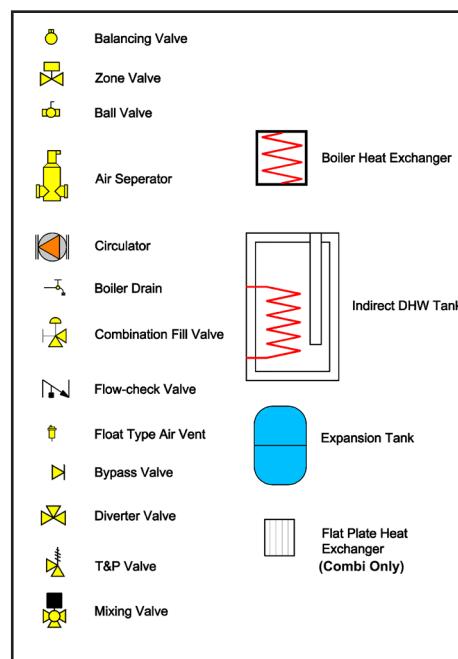


## Quick Reference Chart - Heating Only Boiler

Hydronic Piping Description	Page
Single Boiler Primary/Secondary, Zoned System, WITH ZONE VALVES, and Optional Indirect Tank (Fig. 1)	5
Single Boiler Primary/Secondary, Zoned, WITH ZONE PUMPS, and (Optional) Indirect Tank (Fig. 2)	6
Single Boiler Primary/Secondary Series Loop PUMPING and Optional Indirect Tank (Fig. 3)	7
Wiring Description	Page
Heating Only Boiler <b>NO</b> Indirect Tank, Single Zone ( Fig. 4)	9
Heating Only Boiler <b>WITH</b> Indirect Tank and Sensor, Single Zone ( Fig. 5)	9
Heating Only Boiler with Multiple Zone Valves, <b>WITHOUT</b> Indirect Tank ( Fig. 6)	11
Heating Only Boiler with Multiple ZONE VALVES, <b>WITH</b> Indirect Tank and Sensor ( Fig. 7)	12
Heating Only Boiler with Multiple ZONE PUMPS, <b>WITHOUT</b> Indirect Tank (DHW) ( Fig. 8)	14
Heating Only Boiler with Multiple ZONE PUMPS, <b>WITH</b> Indirect Tank (DHW) ( Fig. 9)	15
Application Tables For : Heating Only Boiler With Indirect Hot Water Tank	28

## HEATING ONLY - HYDRONIC PIPING


**FIGURE 1 - Primary/Secondary, Zoned, WITH ZONE VALVES, (Optional) Indirect Tank**

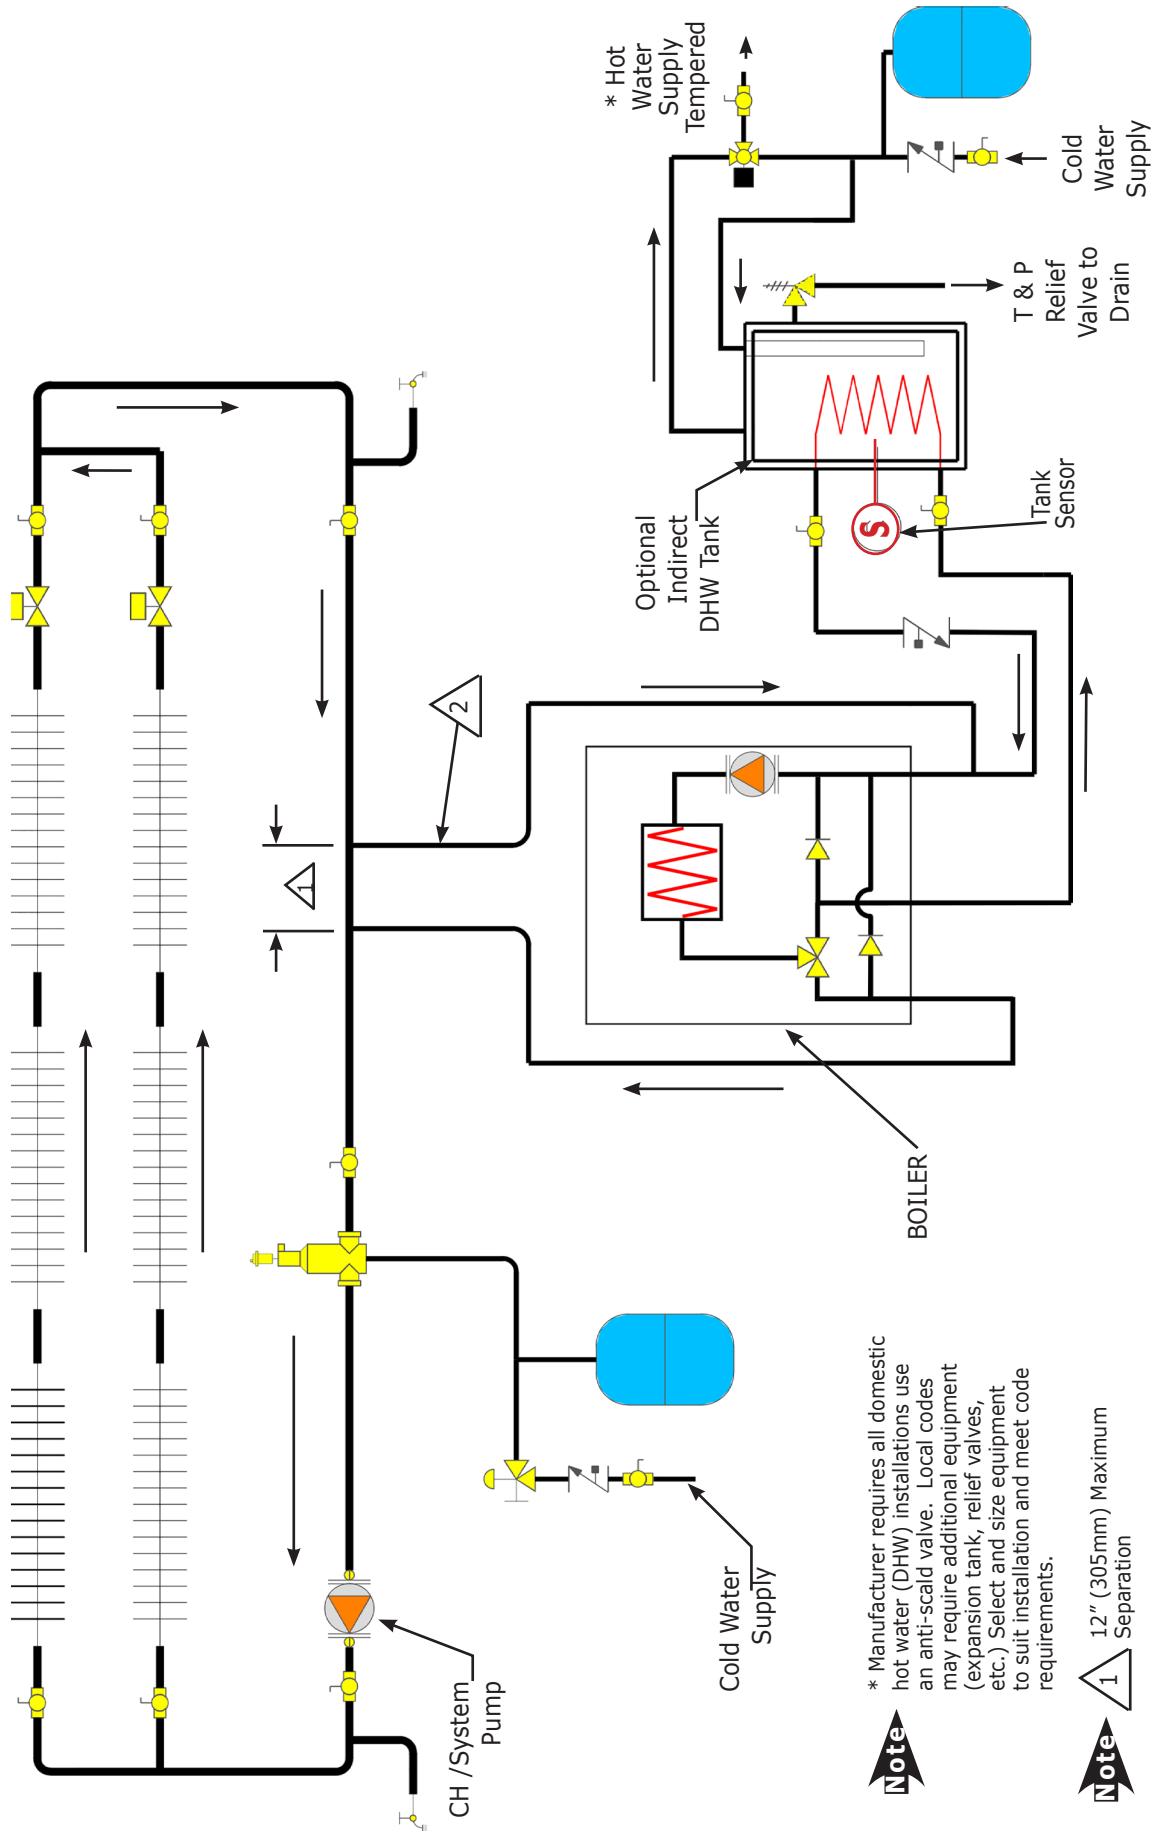

\* Manufacturer requires all domestic hot water (DHW) installations use an anti-scald valve. Local codes may require additional equipment (expansion tank, relief valves, etc.) Select and size equipment to suit installation and meet code requirements.

## HEATING ONLY - HYDRONIC PIPING

**FIGURE 2 - Primary/Secondary, Zoned, WITH ZONE PUMPS, (Optional) Indirect Tank**

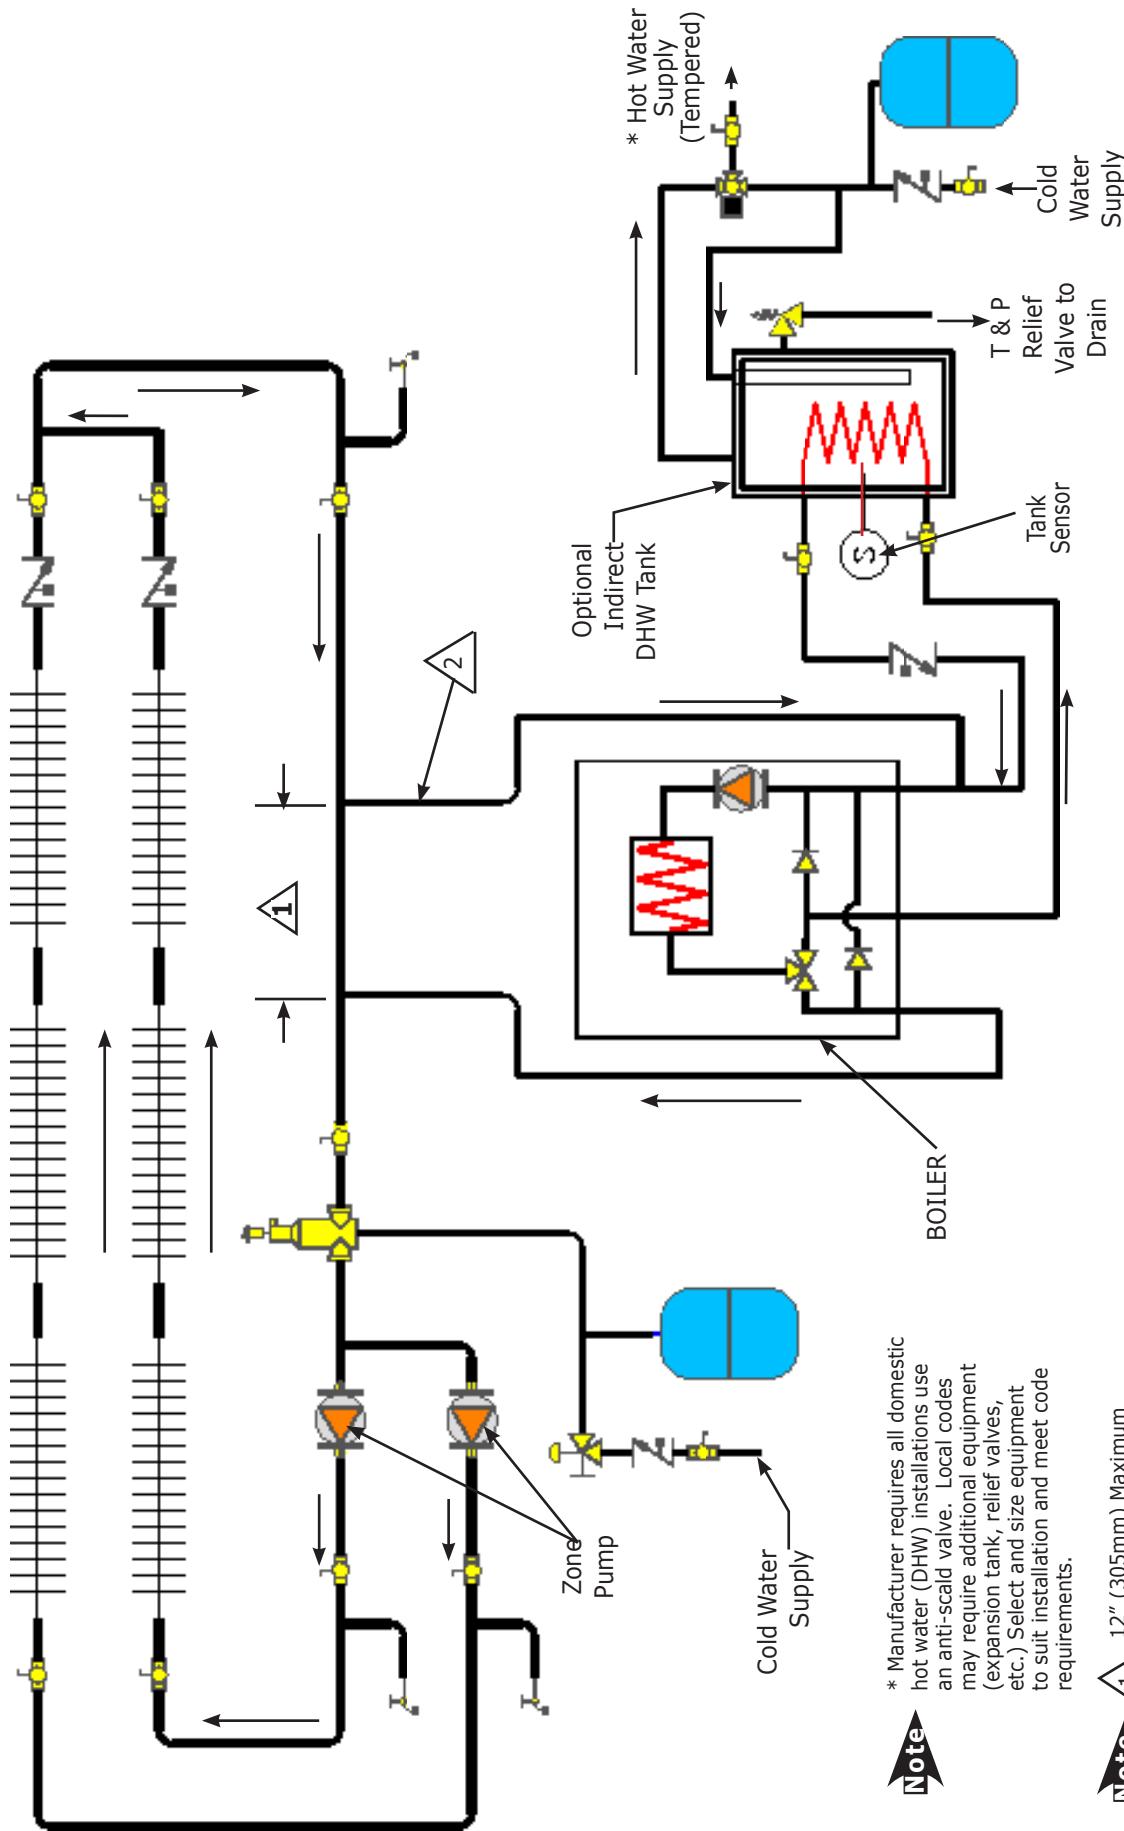

\* Manufacturer requires all domestic hot water (DHW) installations use an anti-scald valve. Local codes may require additional equipment (expansion tank, relief valves, etc.) Select and size equipment to suit installation and meet code requirements.




Limit **combined** supply and return pipe lengths to maximum total linear length of 20 ft. (6.1 m) between boiler and closely spaced tees, when minimum 3/4" NPT pipe size is used. Linear length may be increased if supply and return pipe size is increased to limit pressure drop.



See wiring Figures 8 and 9.

## HEATING ONLY - HYDRONIC PIPING

**FIGURE 3 - Primary/Secondary, Series Loop Pumping, (Optional) Indirect Tank**

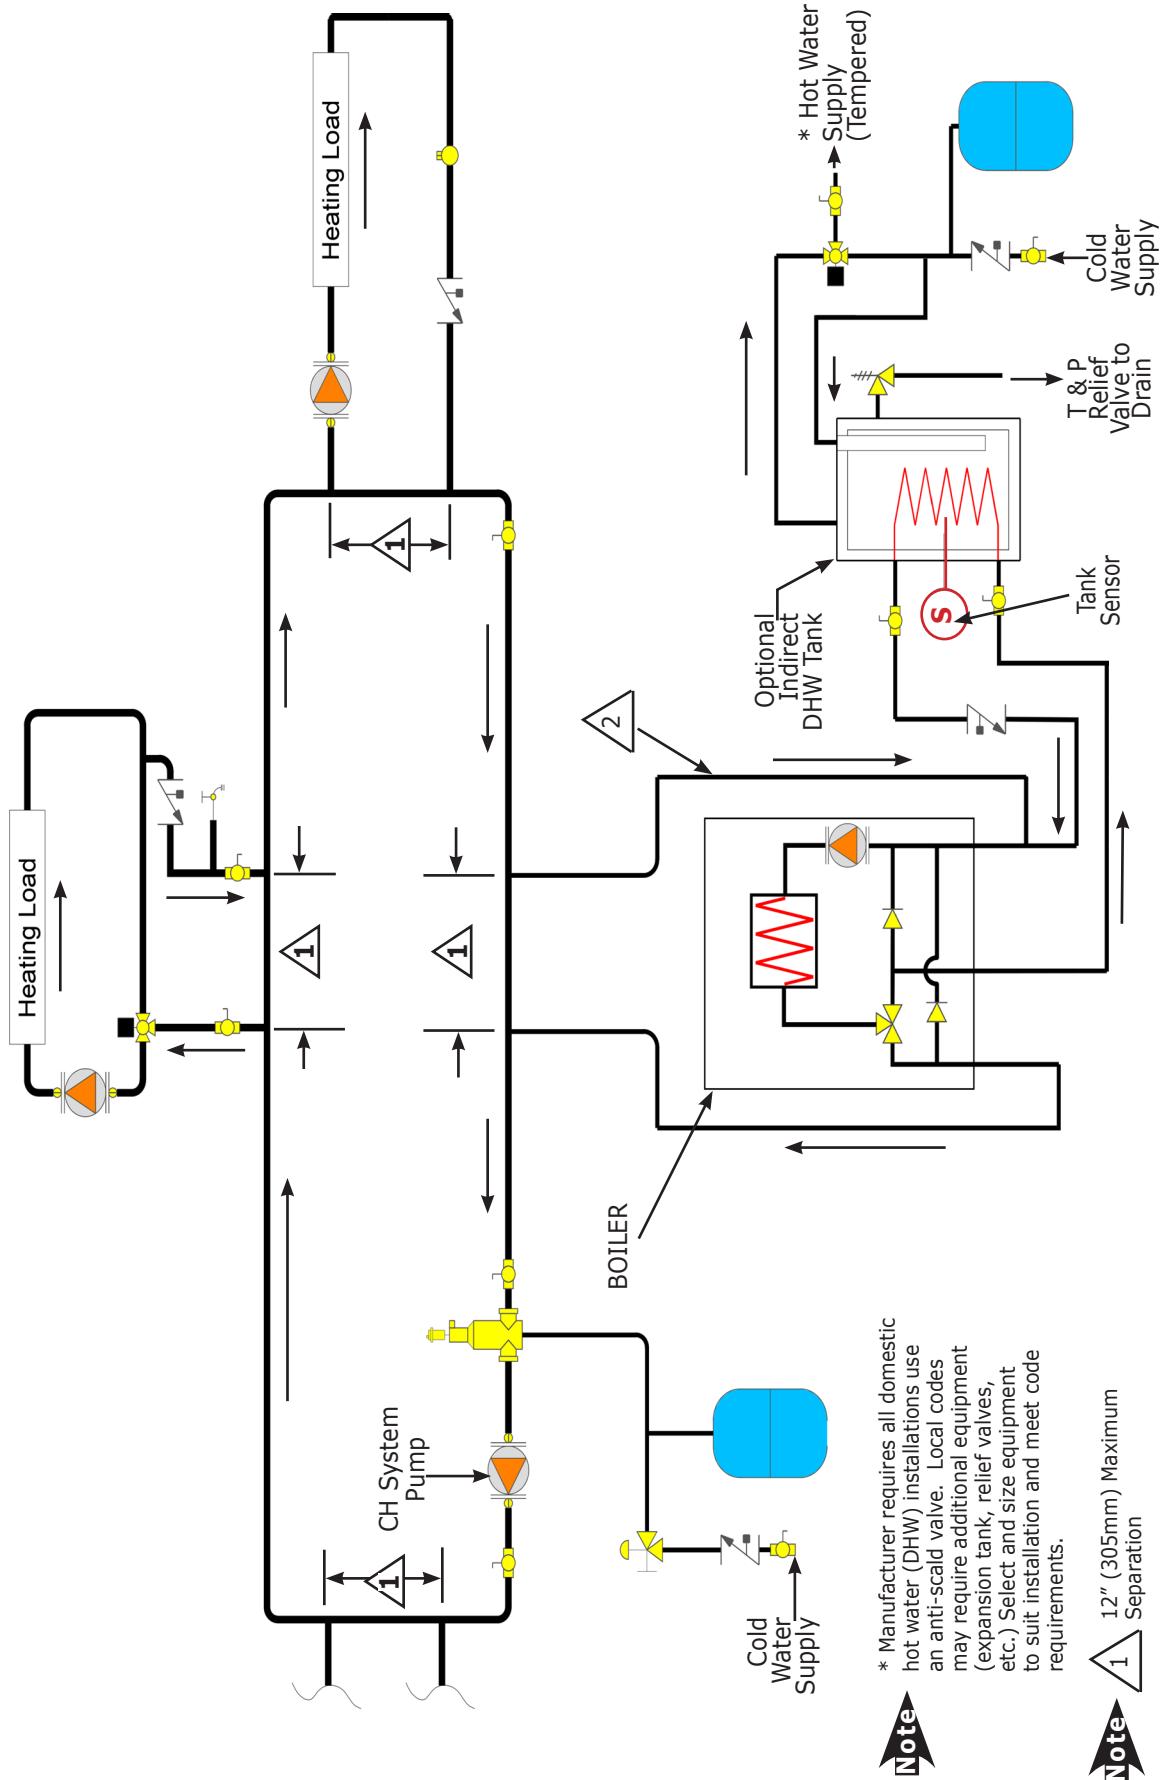

\* Manufacturer requires all domestic hot water (DHW) installations use an anti-scald valve. Local codes may require additional equipment (expansion tank, relief valves, etc.) Select and size equipment to suit installation and meet code requirements.



**Note** 1 12" (305mm) Maximum Separation



**Note** Limit **combined** supply and return pipe lengths to maximum total linear length of 20 ft. (6.1 m) between boiler and closely spaced tees, when minimum 3/4" NPT pipe size is used. Linear length may be increased if supply and return pipe size is increased to limit pressure drop.

Use external pump relay and Argo Zone Control to interface system pump to boiler.

See wiring Figures 8, 9 and 16.

### Boiler Wiring Diagrams

All field wiring shall conform to the authority having jurisdiction or, in the absence of such requirements to:

**USA:** National Electrical Code, ANSI/NFPA 70,

**Canada:** Canadian Electrical Code, Part I, CSA

C22.1: Safety Standard for Electrical Installations.

Note

**DO NOT** use 120 V thermostat terminals (M1- #1 and #2).

**DO NOT** wire DHW mechanical thermostat to Argo Control or Heating Only Boiler control.

Use **ONLY** DHW Tank Sensor (M2-terminals #9 and #10).

### A. Indirect Storage Tank is NOT used:


- Connect M2 terminals #6 and #7 to Argo AR822 (T-T) terminals.
- See Wiring Figures 4 and 16.

### B. System Pump is used:

- For Single Zone, Multi Zone and Series Loop Piping See instructions and wiring diagrams. See Figures 4,5,6,7 and 16


### C. Use of Indirect Storage Tank (DHW):

- Indirect storage tank, use only tank sensor to interface with boiler. Wire sensor to M2 terminals #9 and #10.
- Use of booster pump to increase flow rate to indirect tank is not recommended by manufacturer.
- Locate tank as close to boiler as possible.
- Size DHW tank, piping, and system to use only internal boiler pump.
- See available pump head/flow rate chart, page 26 of this manual.
- Change PO3 parameter on boiler control from 08 to 05. See Parameter Setting, in the Installation, Operation, and Maintenance Manual, Section 14.
- See Wiring Figure 5.

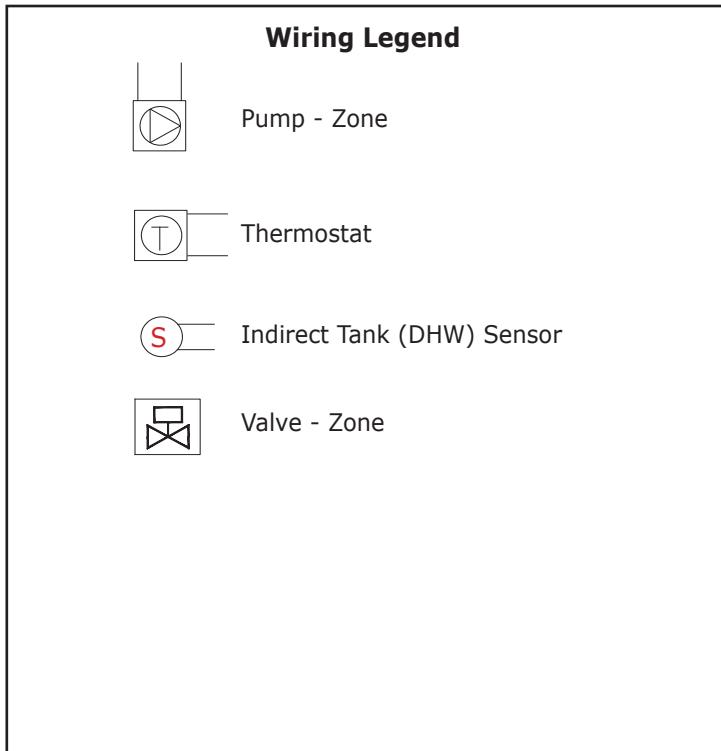


## HEATING ONLY - WIRING DIAGRAMS

**FIGURE 4 - Heating Only Boiler NO Indirect Tank- Single Zone**

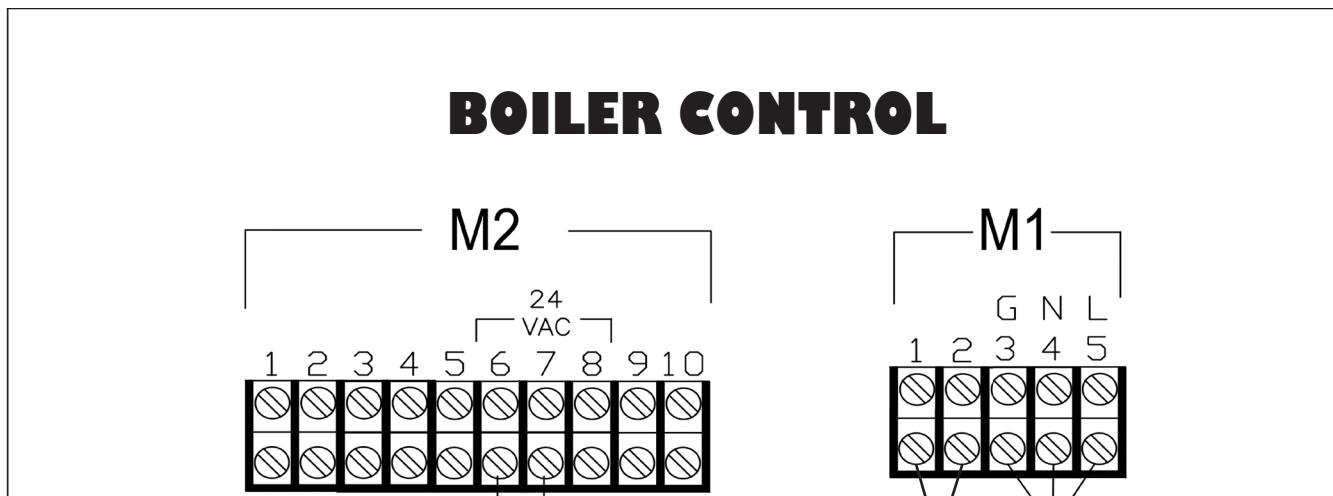

**FIGURE 5 - Heating Only Boiler WITH Indirect Tank and Sensor Single Zone**

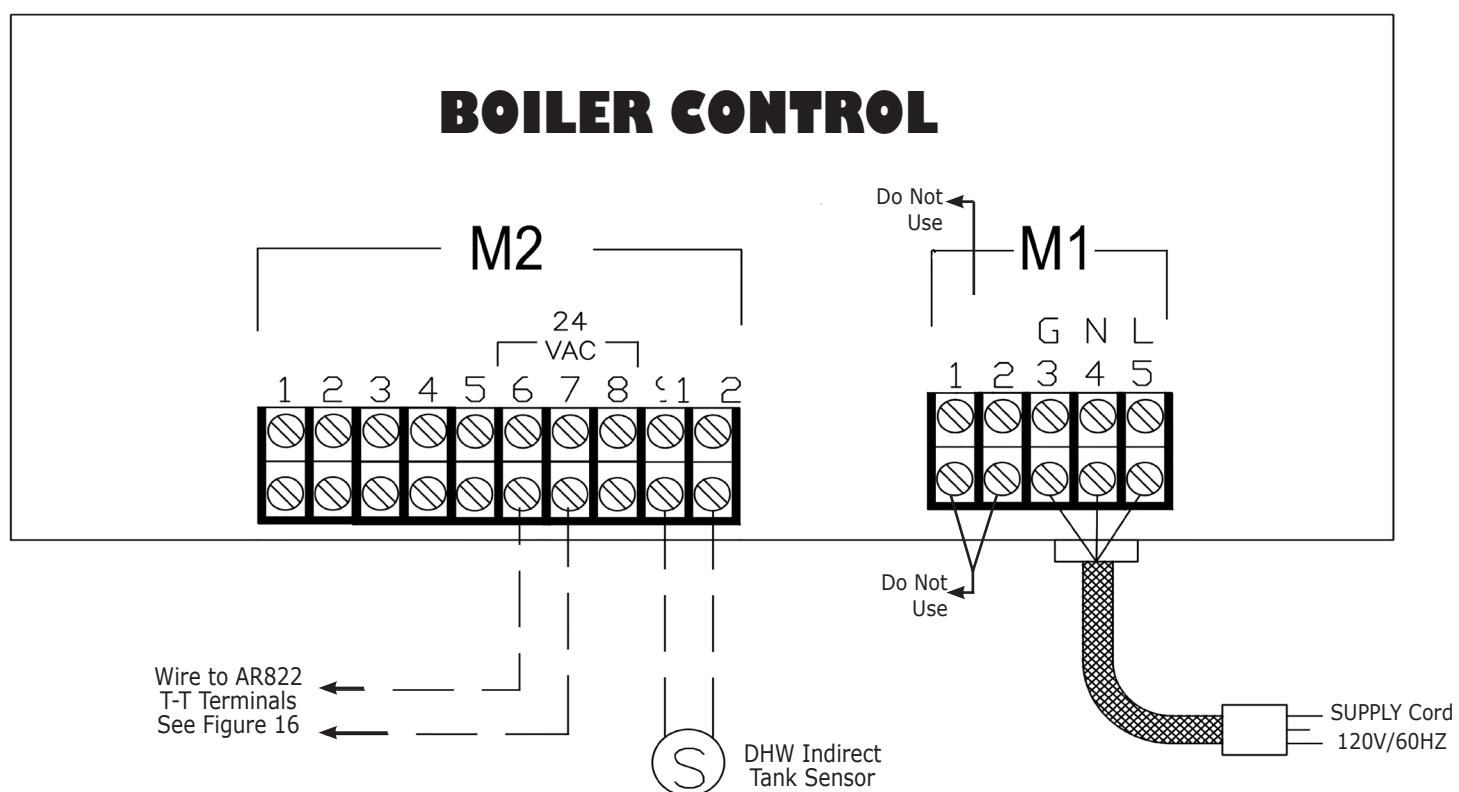

**Change PO3 parameter on boiler control from 08 to 05**

## HEATING ONLY- WIRING DIAGRAM

### D. Multi-Zoned Valve System:

1. If only Central Heating is required on multi-zone valve application :
  - Connect Boiler call for heat contacts M2 (24 VAC) terminals #6 and #7 to Argo Zone control X-X terminals.
  - Zone thermostats and valves are wired to Argo Control.
  - Central Heating (CH) system pump is wired to Argo Primary Pump terminals.
  - See wiring Figure 6.
  
2. If DHW tank is applied to Multi-Zone Valve application - use Indirect Tank Sensor:
  - Attach Indirect Tank sensor to boiler control M2 terminals #9 & #10. Boiler control will set priority for DHW operation.
  - Wire Boiler call for heat contacts M2 (24 VAC) terminals #6 & #7 to Argo Zone control X-X Terminals.
  - Zone thermostats and valves are wired to Argo Control.
  - Central Heating (CH) system pump is wired to Argo Primary Pump terminals.
  - Change PO3 parameter on boiler control from 08 to 05. See Parameter Setting, in the Installation, Operation, and Maintenance Manual, Section 14.
  - See wiring Figure 7.



**DO NOT** use 120 V thermostat terminals (M1- #1 and #2) .




**DO NOT** wire DHW mechanical thermostat to Argo Control or Heating Only Boiler control.



Set Argo priority switch to **OFF** position.

## HEATING ONLY - WIRING DIAGRAM


**FIGURE 6 - Zoned System, with Multiple ZONE VALVES, WITHOUT Indirect Tank**

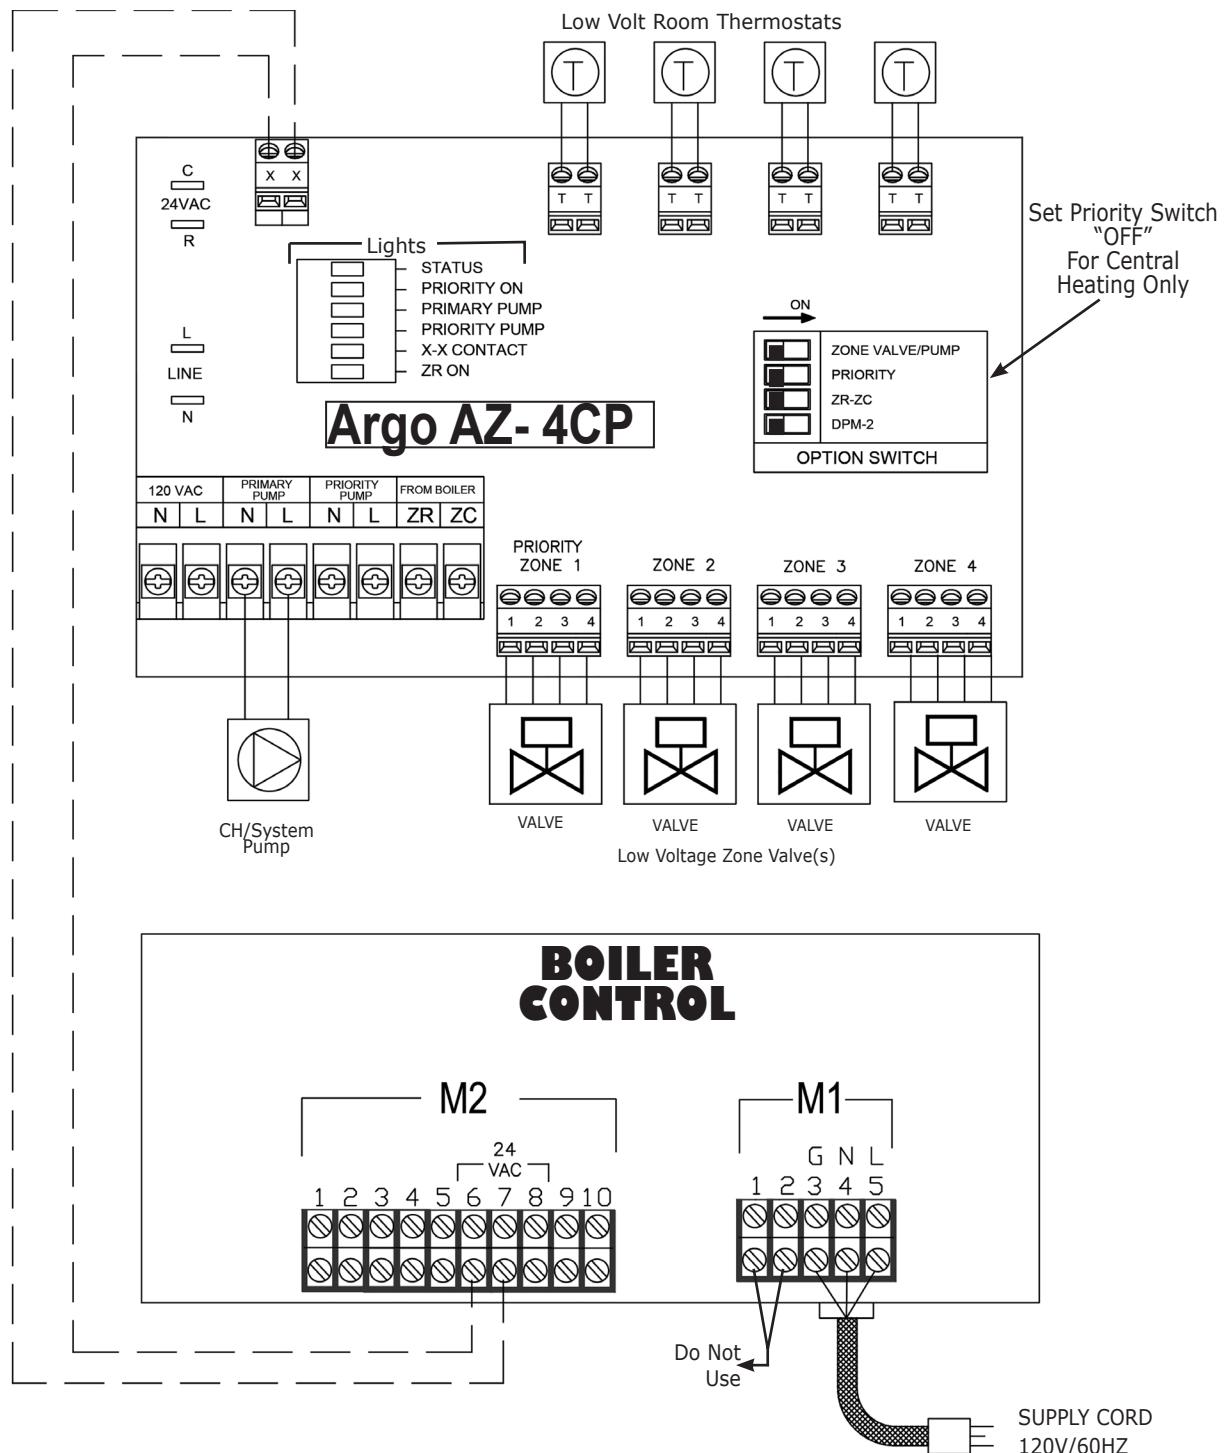

**DO NOT** use 120V Thermostat Terminals M1 (#1 and #2).

## HEATING ONLY - WIRING DIAGRAM

**FIGURE 7 - Zoned System, with Multiple ZONE VALVES, WITH Indirect Tank and Sensor**

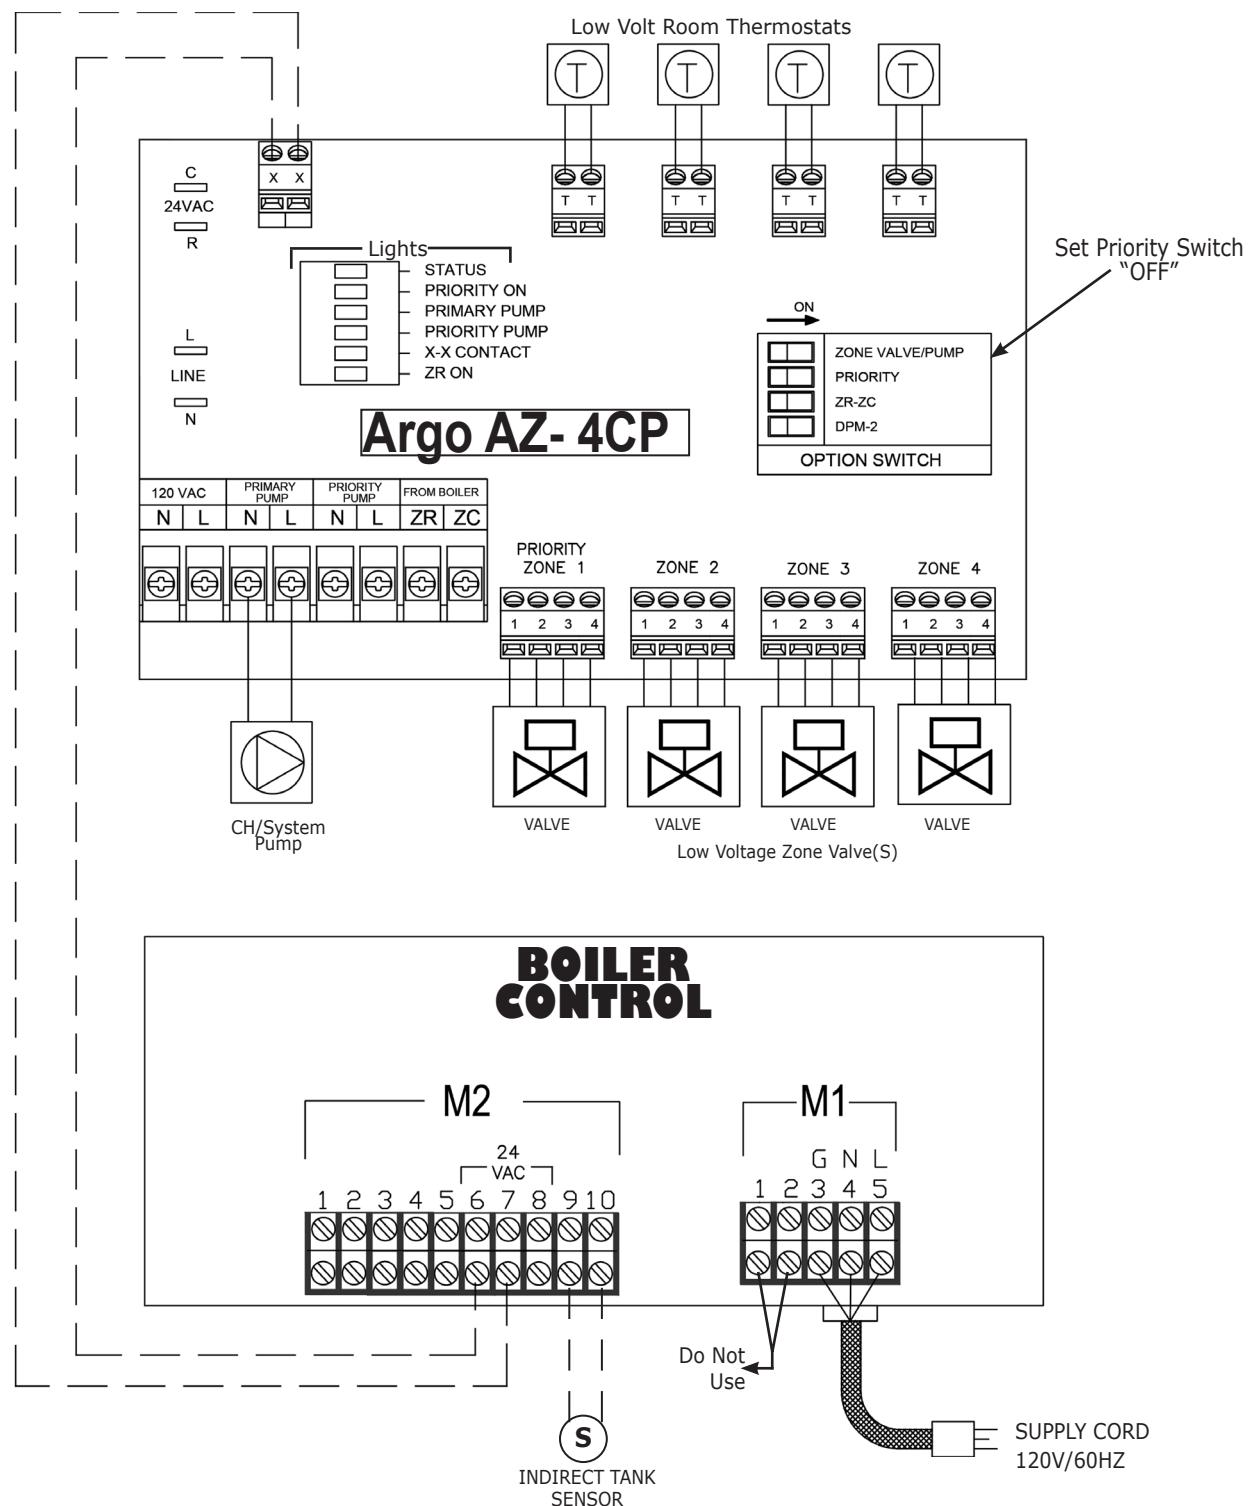

**DO NOT** use 120V Thermostat Terminals M1 (#1 and #2).

**Change PO3 parameter on boiler control from 08 to 05**

## HEATING ONLY - WIRING DIAGRAM

### E. Multi-Zone Pump System Using Argo ARM Controller:

**1 - If Indirect Storage Tank **IS NOT** applied to a multi-zoned piping system:**

- Boiler thermostat contacts (M2 Terminals #6 and #7) are wired to Argo ARM Zone Pump Control Terminals (X-X)
- Zone thermostats and zone pumps are wired to ARGO Controller
- Priority Switch OFF
- CH Heating only
- See Wiring Figure 8

**2 - If Indirect Storage Tank **IS** applied to multi-zoned pump piping assembly:**

- Indirect storage tank sensor is used to regulate storage tank temperature. Wire sensor to M2 terminals #9 and #10.
- Use of booster pump to increase flow rate to indirect tank is not recommended by manufacturer.
- Locate tank close to boiler as possible and size DHW tank/piping/system to use only the internal boiler pump.
- See available pump/head/flow rate chart page 26 of this manual.
- DHW circuit is controlled by boiler control and is Priority heat demand.
- Set Argo priority switch "OFF". Zone 1 priority **IS NOT** used.
- See wiring Figure 9

**3 - If Series Loop Piping is applied:**

Wire system pump to Argo AR822 Relay and interface with boiler M2 (terminals #6 and #7) and Argo ARM Zone Control. See wiring Figures 8, 9 and 16.



**DO NOT** use 120 V thermostat terminals (M1- #1 and #2).




**DO NOT** wire DHW mechanical thermostat to Argo Control or Heating Only Boiler control.

Use **ONLY** DHW Tank Sensor (M2-terminals #9 and #10).

## HEATING ONLY - WIRING DIAGRAM


**FIGURE 8 - Boiler WITH MULTIPLE ZONE PUMPS, WITHOUT Indirect Tank (DHW)**

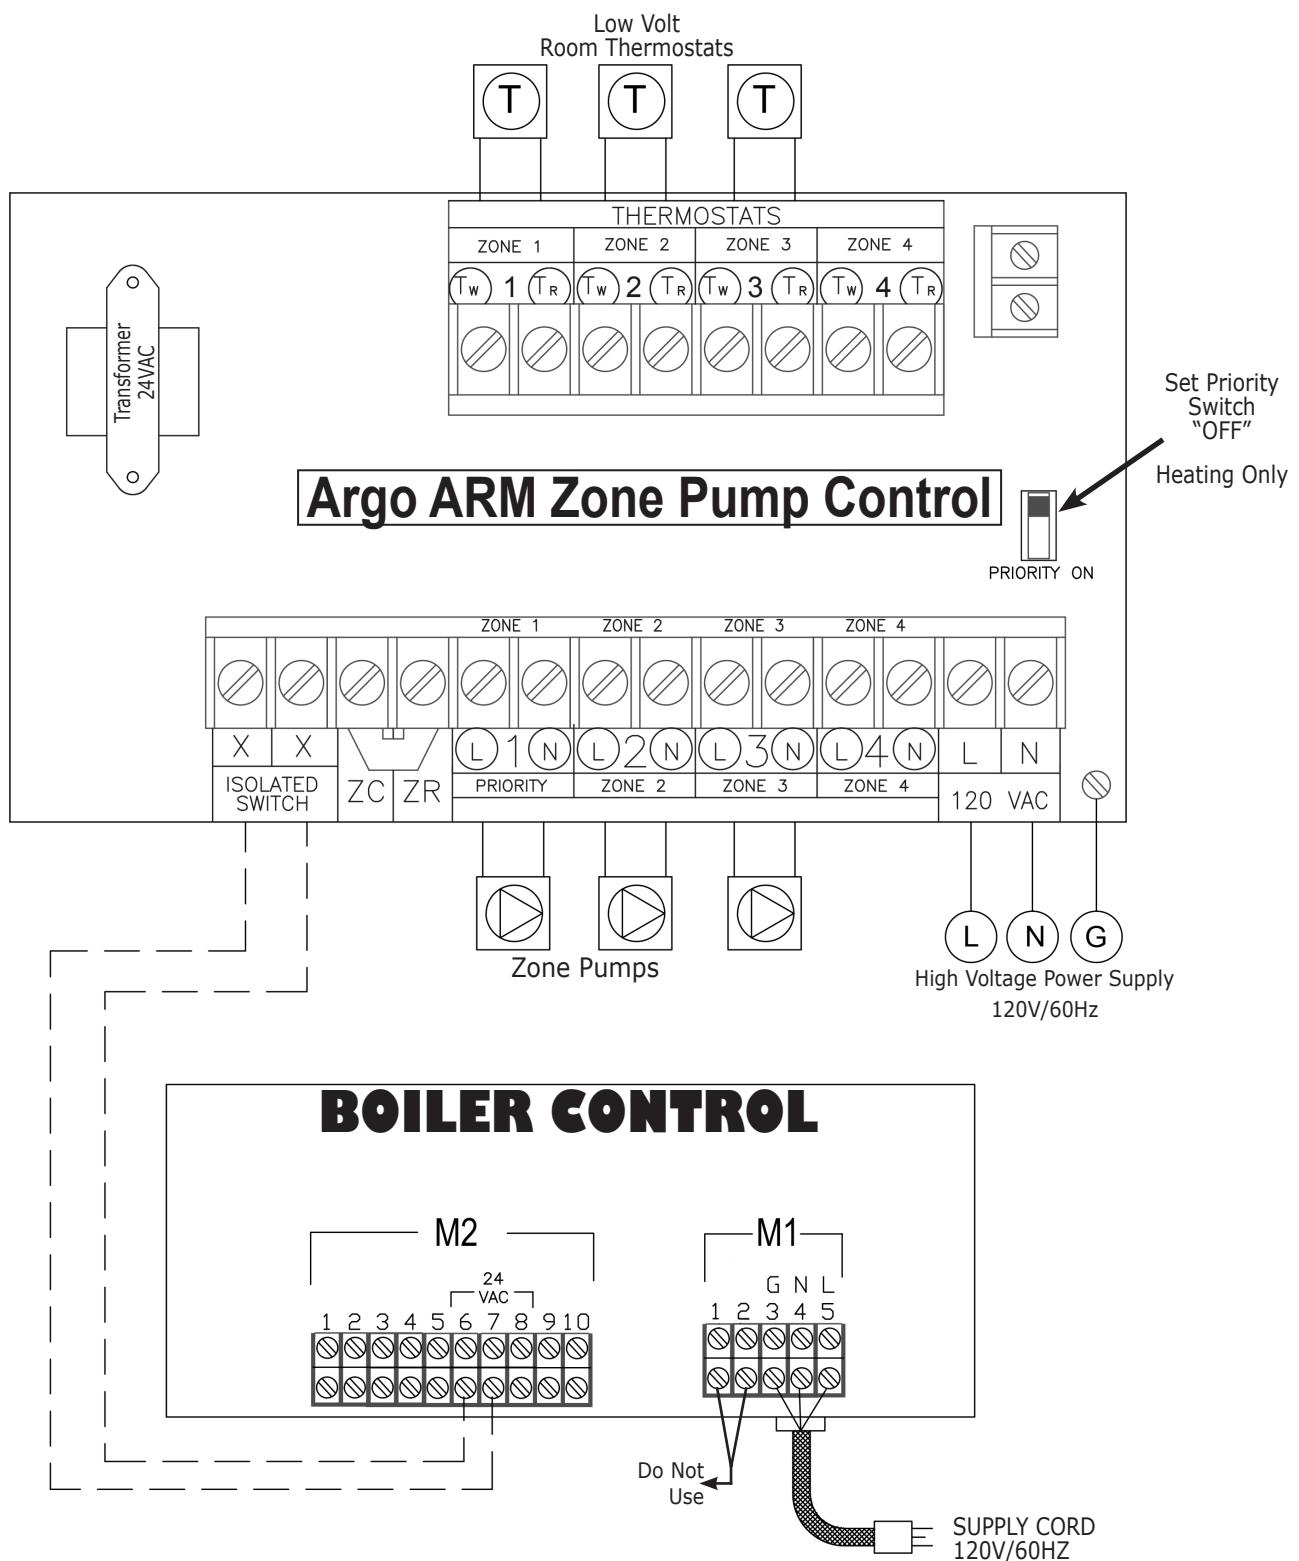

**DO NOT** use 120V Thermostat Terminals M1 (#1 and #2).

## HEATING ONLY - WIRING DIAGRAM

**FIGURE 9 - Boiler WITH MULTIPLE ZONE PUMPS, WITH Indirect Tank (DHW)**

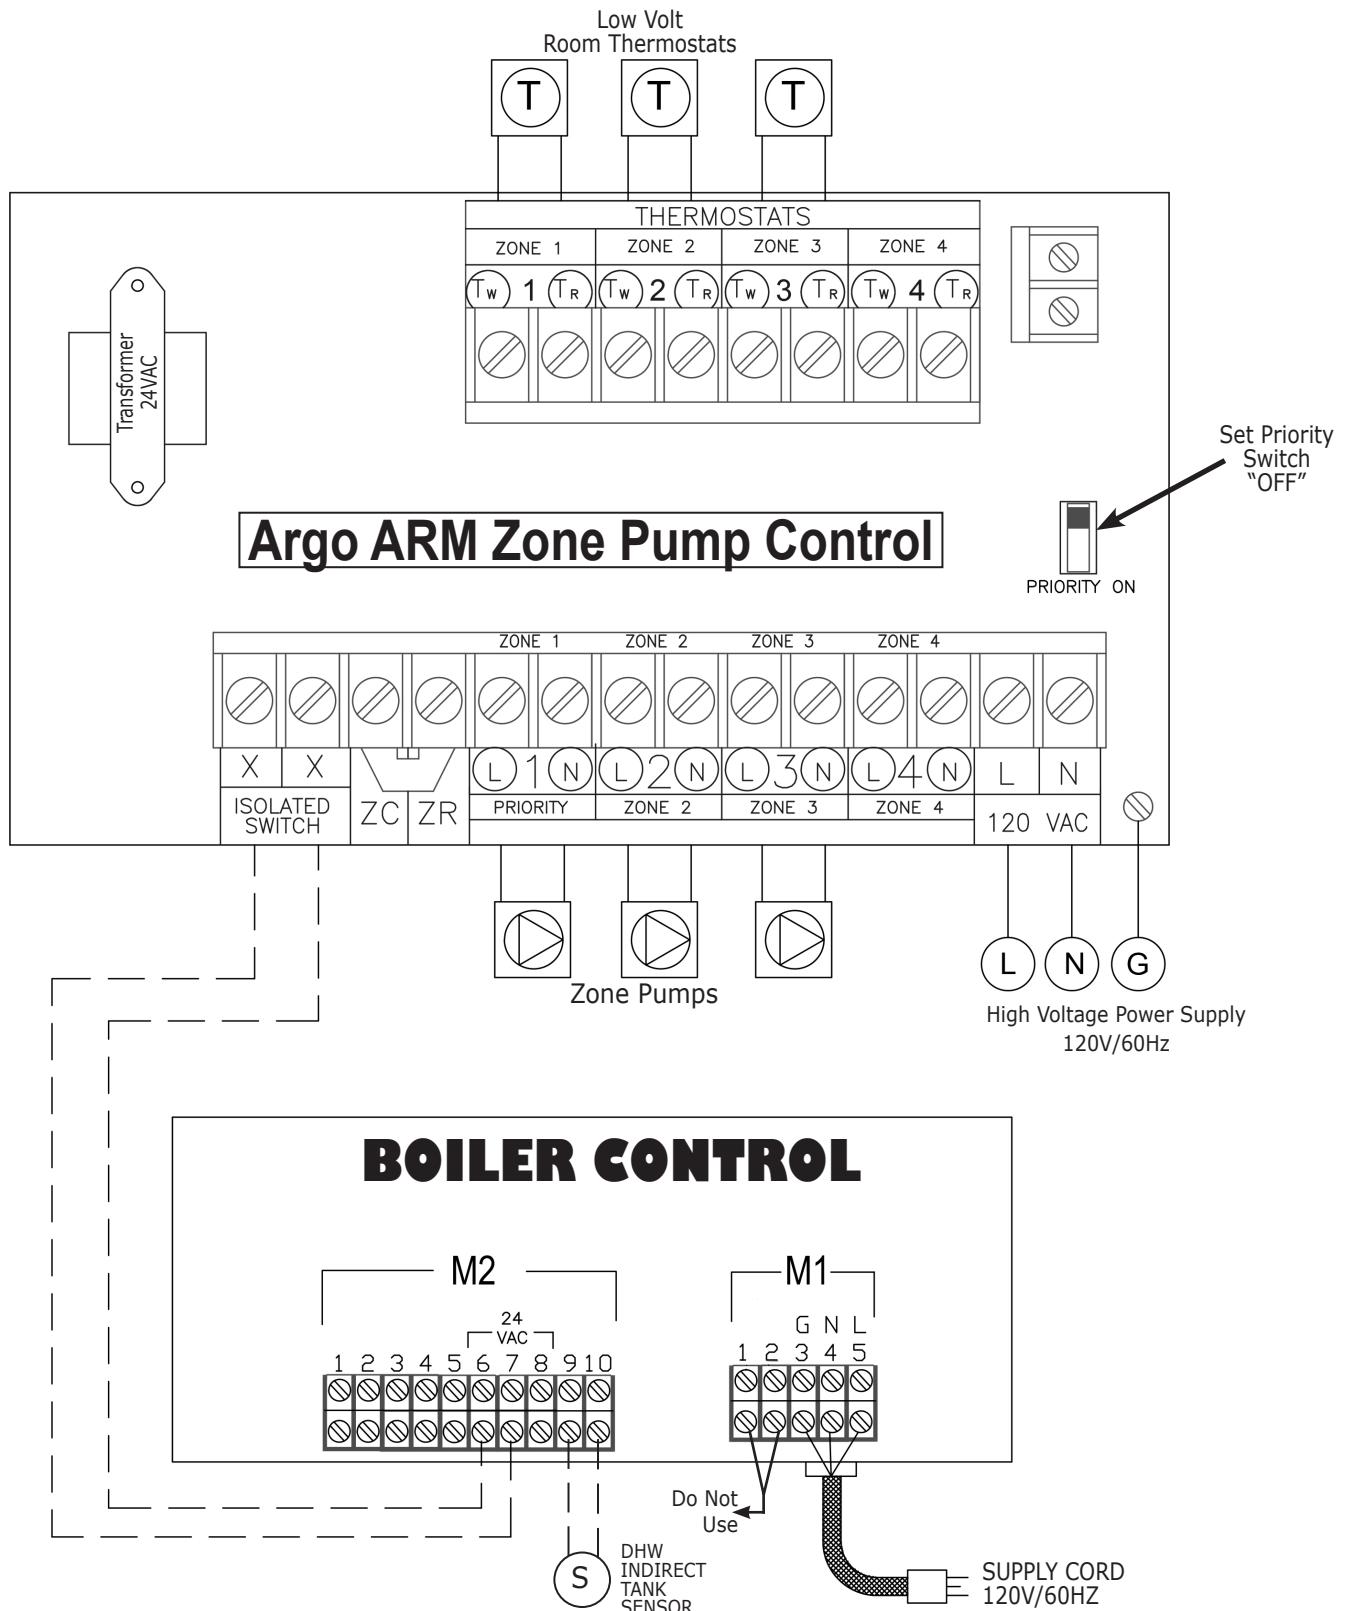

**DO NOT** use 120V Thermostat Terminals M1 (#1 and #2).

**Change P03 parameter on boiler control from 08 to 05**

## COMBI- HYDRONIC PIPING

**A.** Piping installation, materials, and joining methods shall conform to requirements of authority having jurisdiction or in absence of such requirements:

- USA - National Fuel Gas Code, ANSI Z223.1/NFPA 54
- Canada - Natural Gas and Propane Installation Code, CAN/CSA B149.1

**Note**

Arrange piping to prevent water dripping onto boiler.

**B. Manufacturer requires all domestic hot water (DHW)**

**installations use an anti-scald valve.** Local codes may require additional equipment (expansion tank, relief valves, etc.) Select and size equipment to suit installation and meet code requirements.

### Quick Reference Chart - Combi Boiler



Hydronic Piping Description	Page
<b>ANTI-SCALD WARNING AND PIPING RECOMMENDATION</b>	<b>17</b>
Combi Primary/Secondary Zoned System WITH ZONE VALVES and System Pump (Fig. 10)	18
Combi Primary/Secondary Zoned WITH ZONE PUMPS (Fig. 11)	19
Combi Primary/Secondary Series Loop PUMPING (Fig. 12)	20
Wiring Description	Page
Combi Boiler with System Supply Pump, Single Zone (Fig. 13)	21
Combi Boiler with Multiple Zone Valves (Fig. 14)	22
Combi Boiler with Multiple Zone Pumps (Fig. 15)	23



# WARNING


Burn and scald hazard!  
Manufacturer requires installation  
of field supplied anti-scald valve.  
Failure to follow these instructions could  
result in death or serious injury.

## COMBI - DHW ANTI-SCALD PIPING

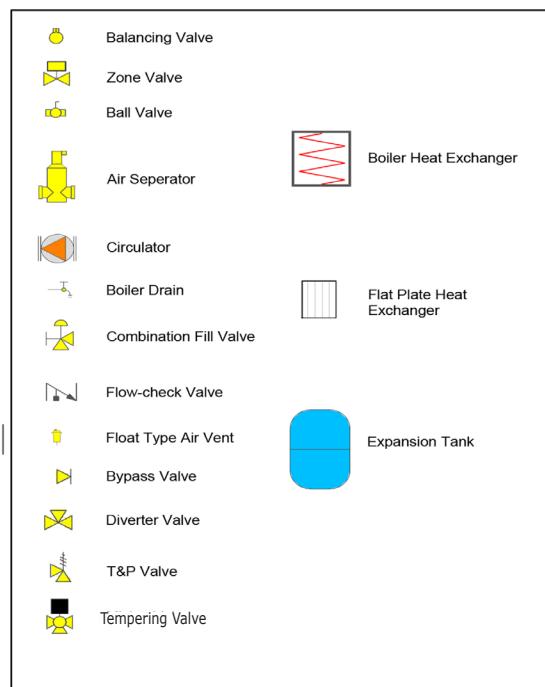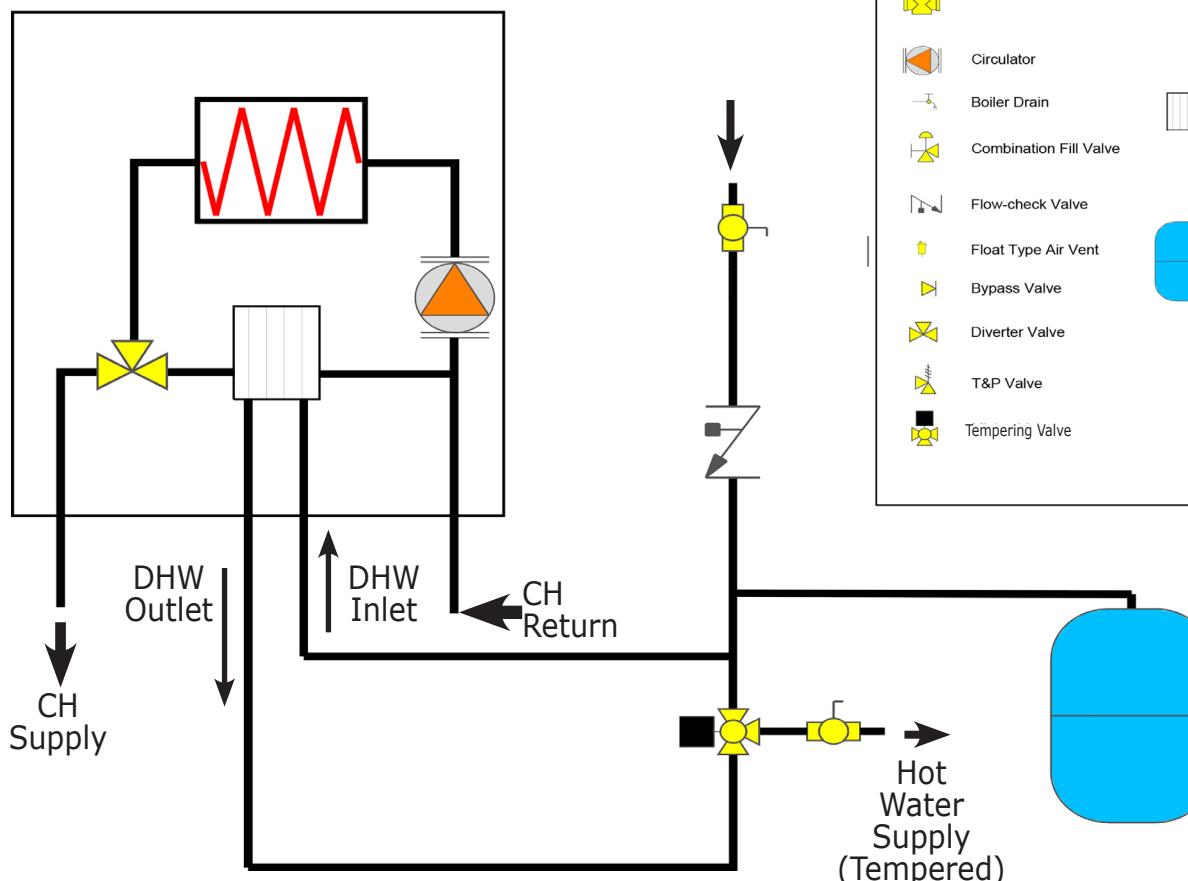

## COMBI - HYDRONIC PIPING


**FIGURE 10 - Combi - Primary/Secondary, Zoned, WITH ZONE VALVES and System Pump**

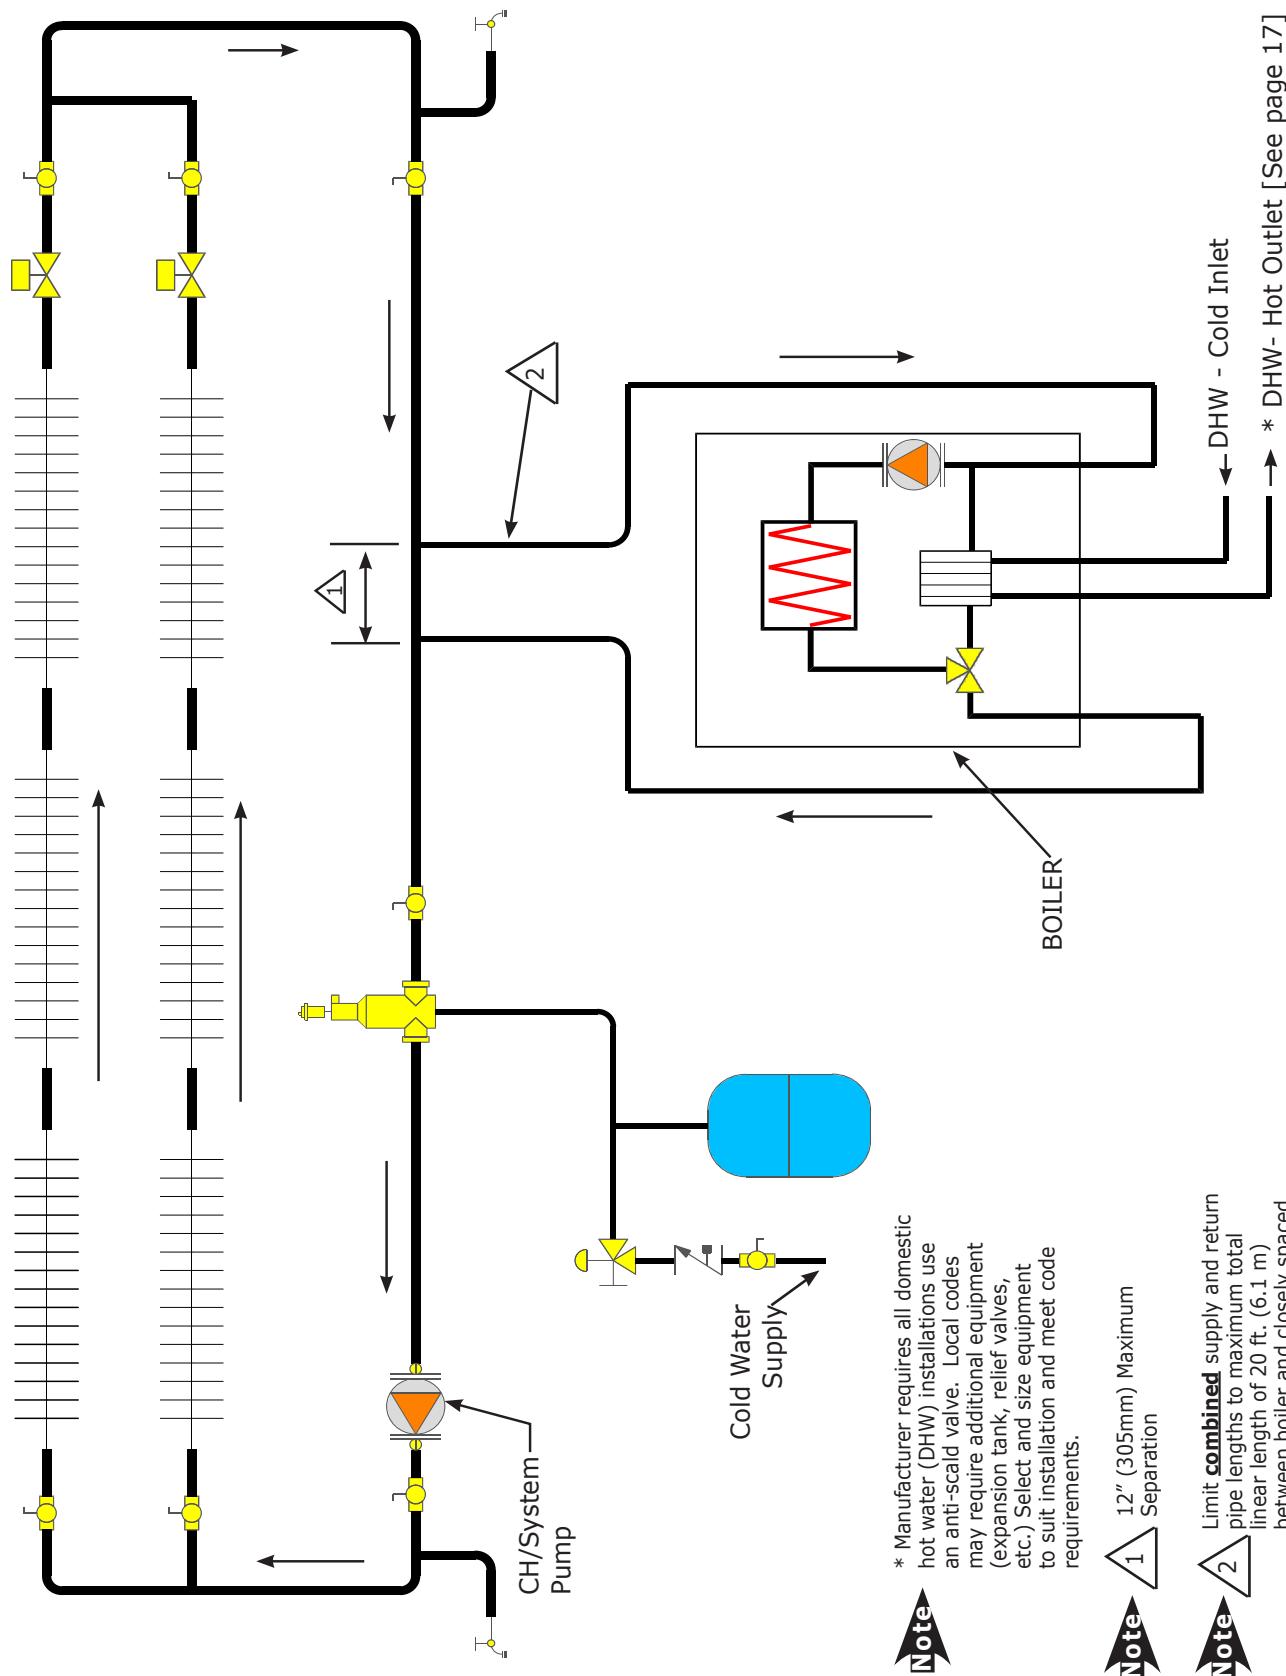

See wiring Figure 14.  
Use with external system pump relay or Argo Zone Control to interface System Pump to boiler.

## COMBI - HYDRONIC PIPING

**FIGURE 11 - Combi - Primary/Secondary, Zoned, WITH ZONE PUMPS**

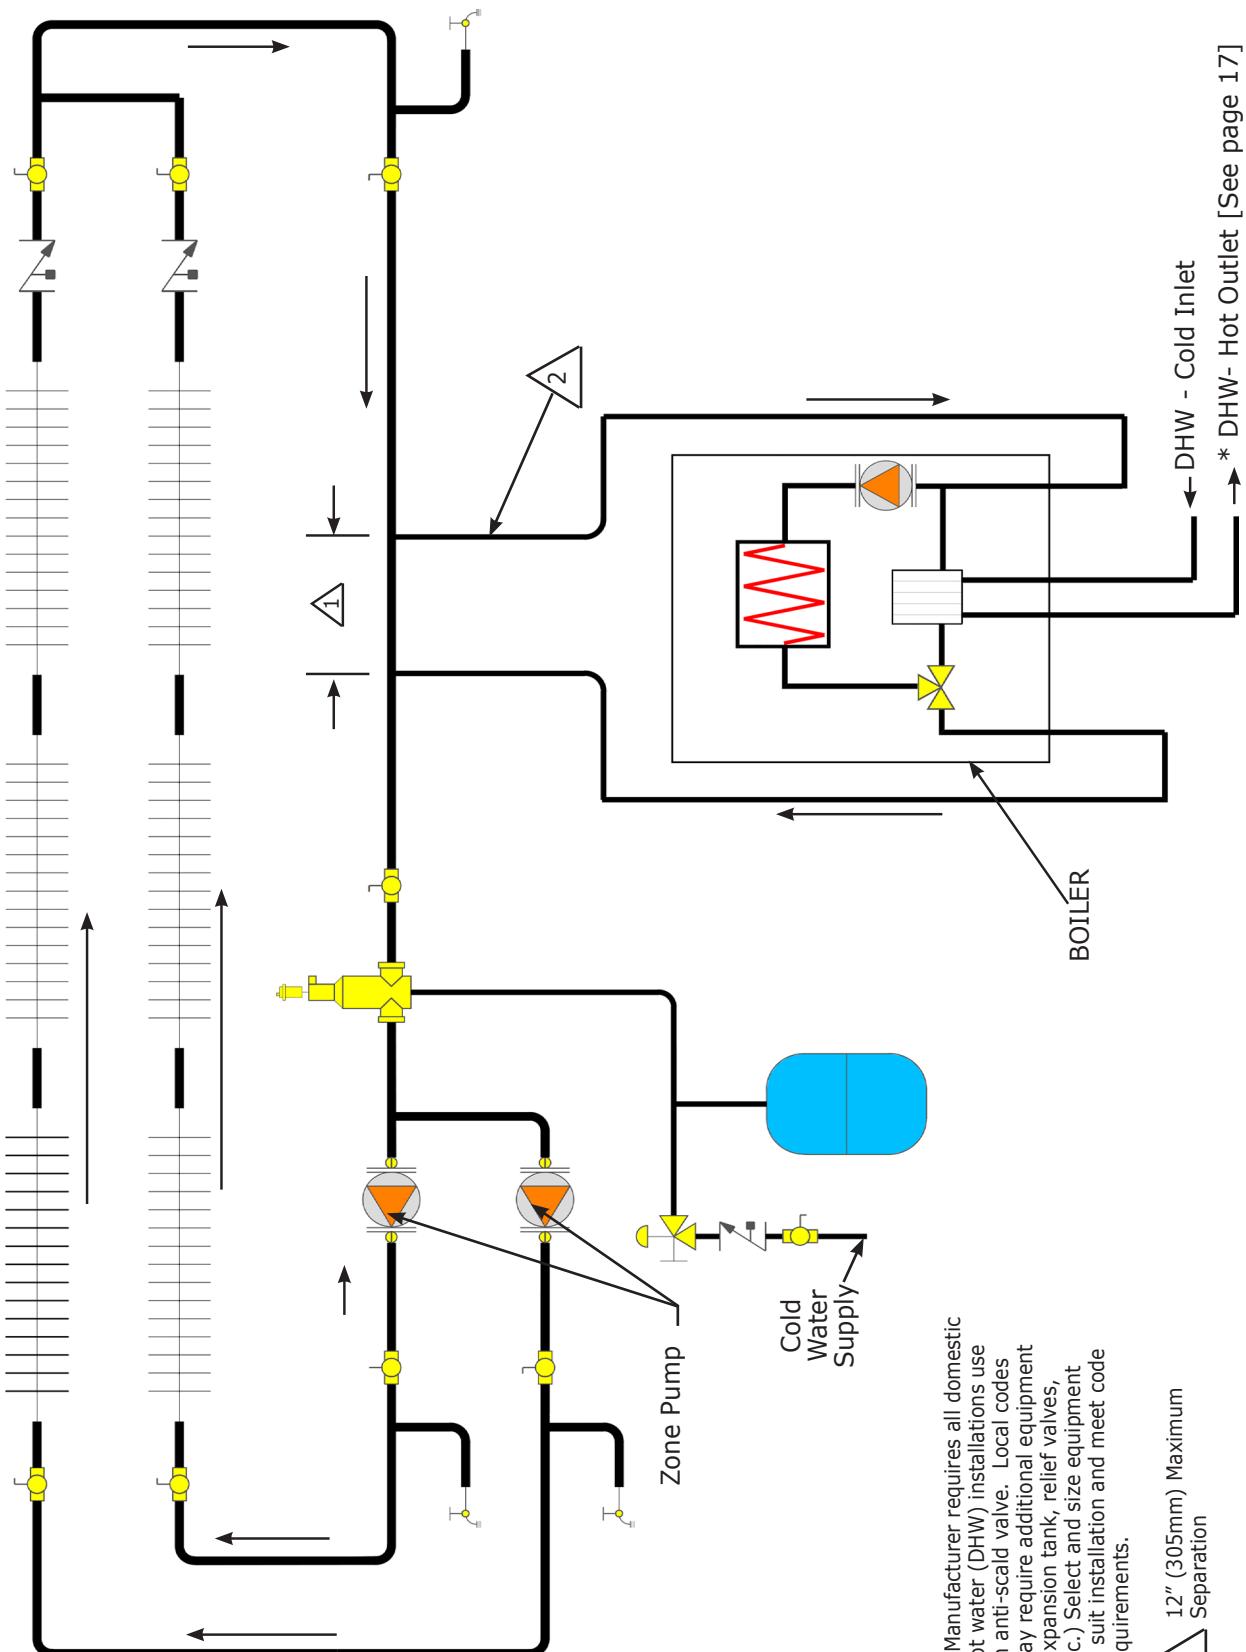

\* Manufacturer requires all domestic hot water (DHW) installations use an anti-scald valve. Local codes may require additional equipment (expansion tank, relief valves, etc.) Select and size equipment to suit installation and meet code requirements.

**Note**


**Note** 1 12" (305mm) Maximum Separation

**Note** 2 Limit **combined** supply and return pipe lengths to maximum total linear length of 20 ft. (6.1 m) between boiler and closely spaced tees, when minimum 3/4" NPT pipe size is used. Linear length may be increased if supply and return pipe size is increased to limit pressure drop.

See wiring Figures 15 and 16.

## COMBI - HYDRONIC PIPING

**FIGURE 12 - Combi - Primary/Secondary, Series Loop PUMPING**

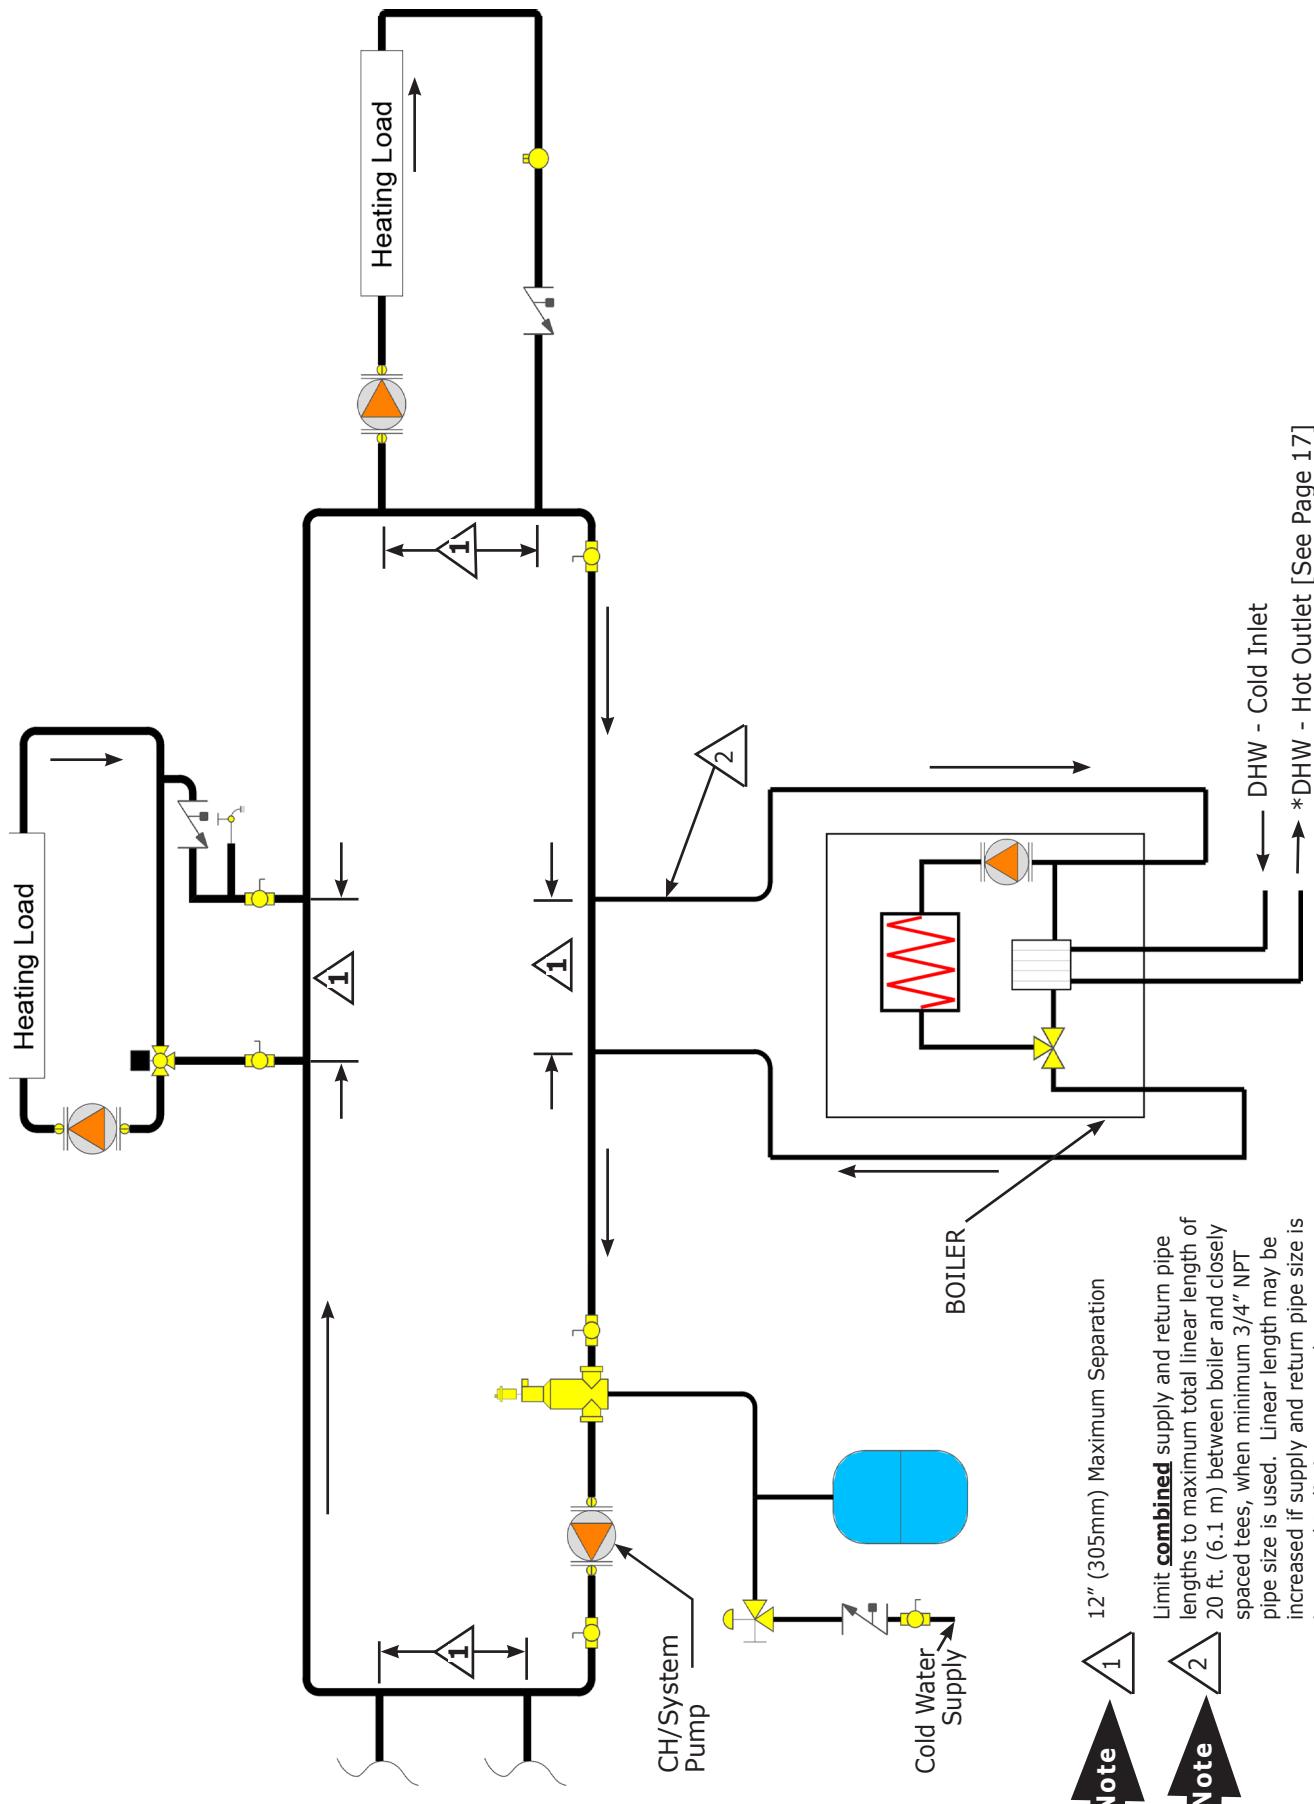

## COMBI BOILER - WIRING DIAGRAMS

### 1. Wiring Diagrams

All field wiring shall conform to the authority having jurisdiction or, in the absence of such requirements to:



**DO NOT** use 120 V thermostat terminals (M1- #1 and #2).

**USA:** National Electrical Code, ANSI/NFPA 70,

**Canada:** Canadian Electrical Code, Part I, CSA

C22.1: Safety Standard for Electrical Installations.


- 2.** Connect M2 terminals #6 and #7 to Argo AR822 (T-T) terminals. See Figure 13.

### 3. System Pump is Used:

- For Single Zone piping use - External pump relay (AR822) to interface central heating system pump operation with either Heating Only or Combi Boiler Control. See Figure 16.
- For Multi Zone Valve piping - Wire system pump to Argo AZ primary pump terminals. See Figure 14.
- Multi Zone Pump/Series Loop (Only) - see Piping Figure 16. External pump - Instruction and Wiring.

**FIGURE 13 - Combi Boiler with System Supply Pump - Single Zone**

### COMBI BOILER CONTROL

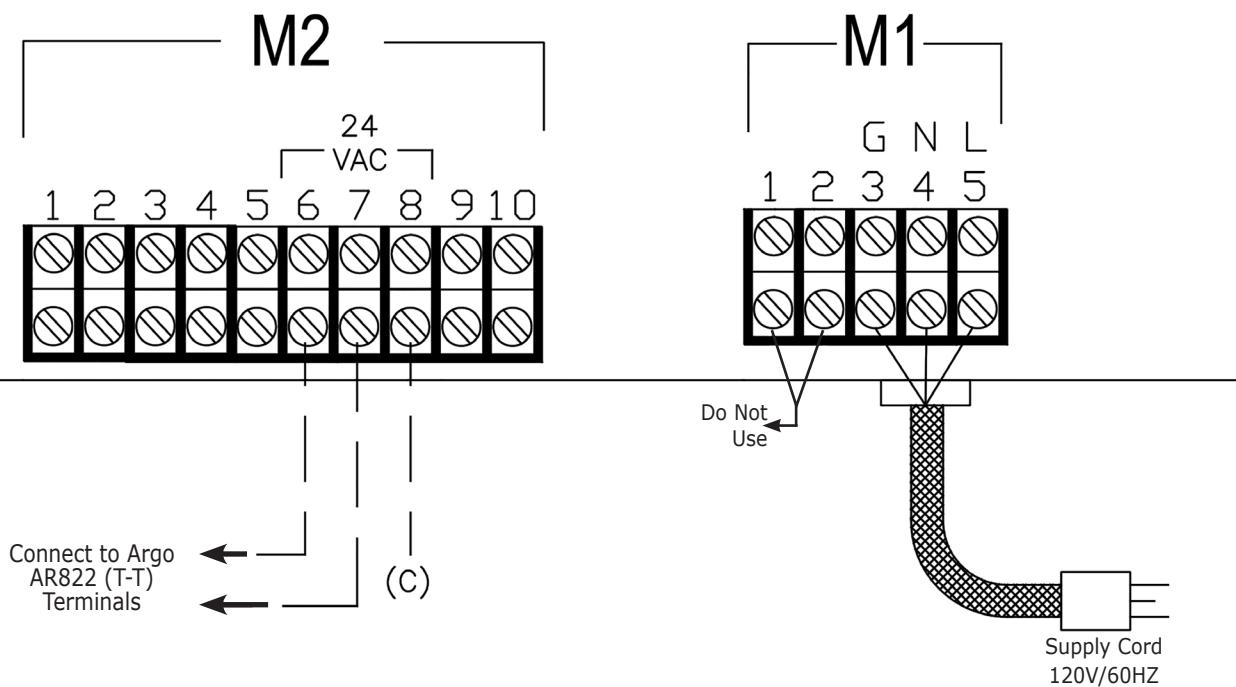

## COMBI BOILER - WIRING DIAGRAMS


### 4. Use of Multi-Zone Valve System

Boiler call for heat contacts M2 terminals #6 and #7 are wired to Argo Zone Control (x-x) terminals. Zone thermostats and zone valves are wired to Argo Zone Controller. Connect CH/System Pump to Primary Pump terminals on Argo Control. See Figure 14.

Set Argo Priority Switch to OFF position. This disables priority operation and all zone valves will operate independently.

Refer to Argo Controller instructions for switch setting and operation information.

**FIGURE 14 - Combi Boiler with Multiple Zone Valves**

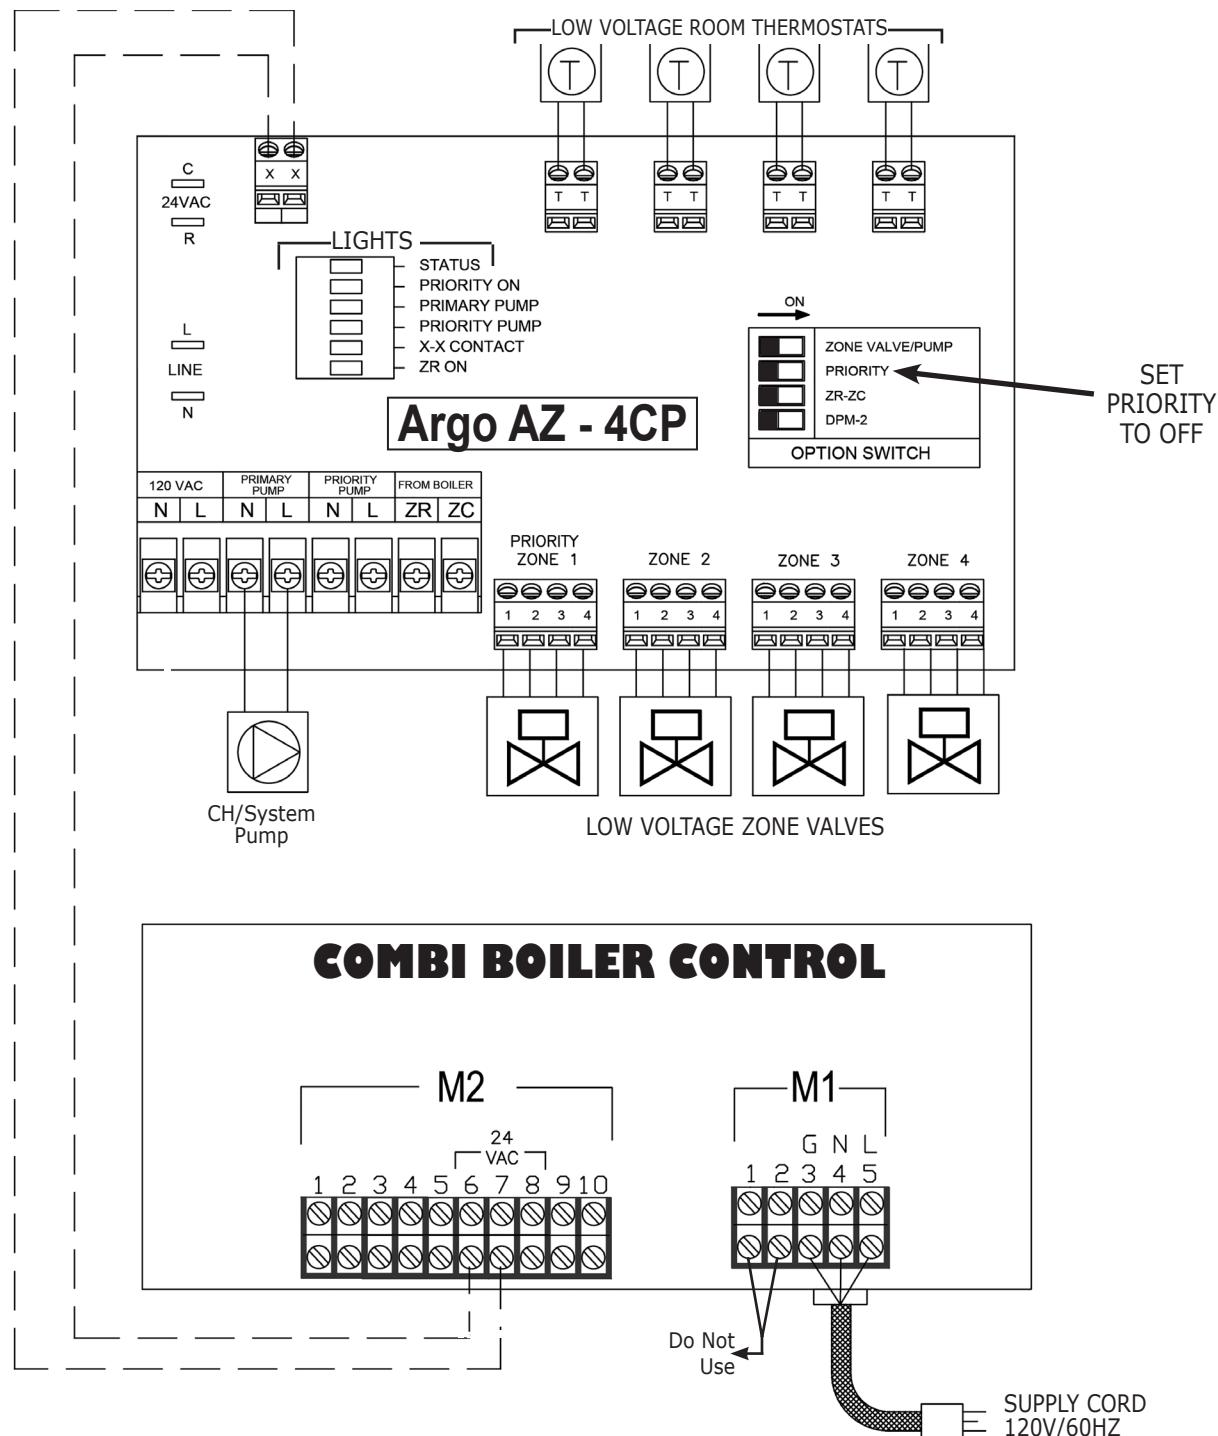


## COMBI BOILER - WIRING DIAGRAMS

### 5. Use of Multi-Zone Pump System

Boiler Thermostat contacts M2 terminals #6 and #7 are wired to Argo ARM Zone Pump Control terminals (x-x). Use Argo ARM Zone Pump Controller and wire as shown in Figure 15.

**FIGURE 15 - Combi Boiler with Multiple Zone PUMPS**

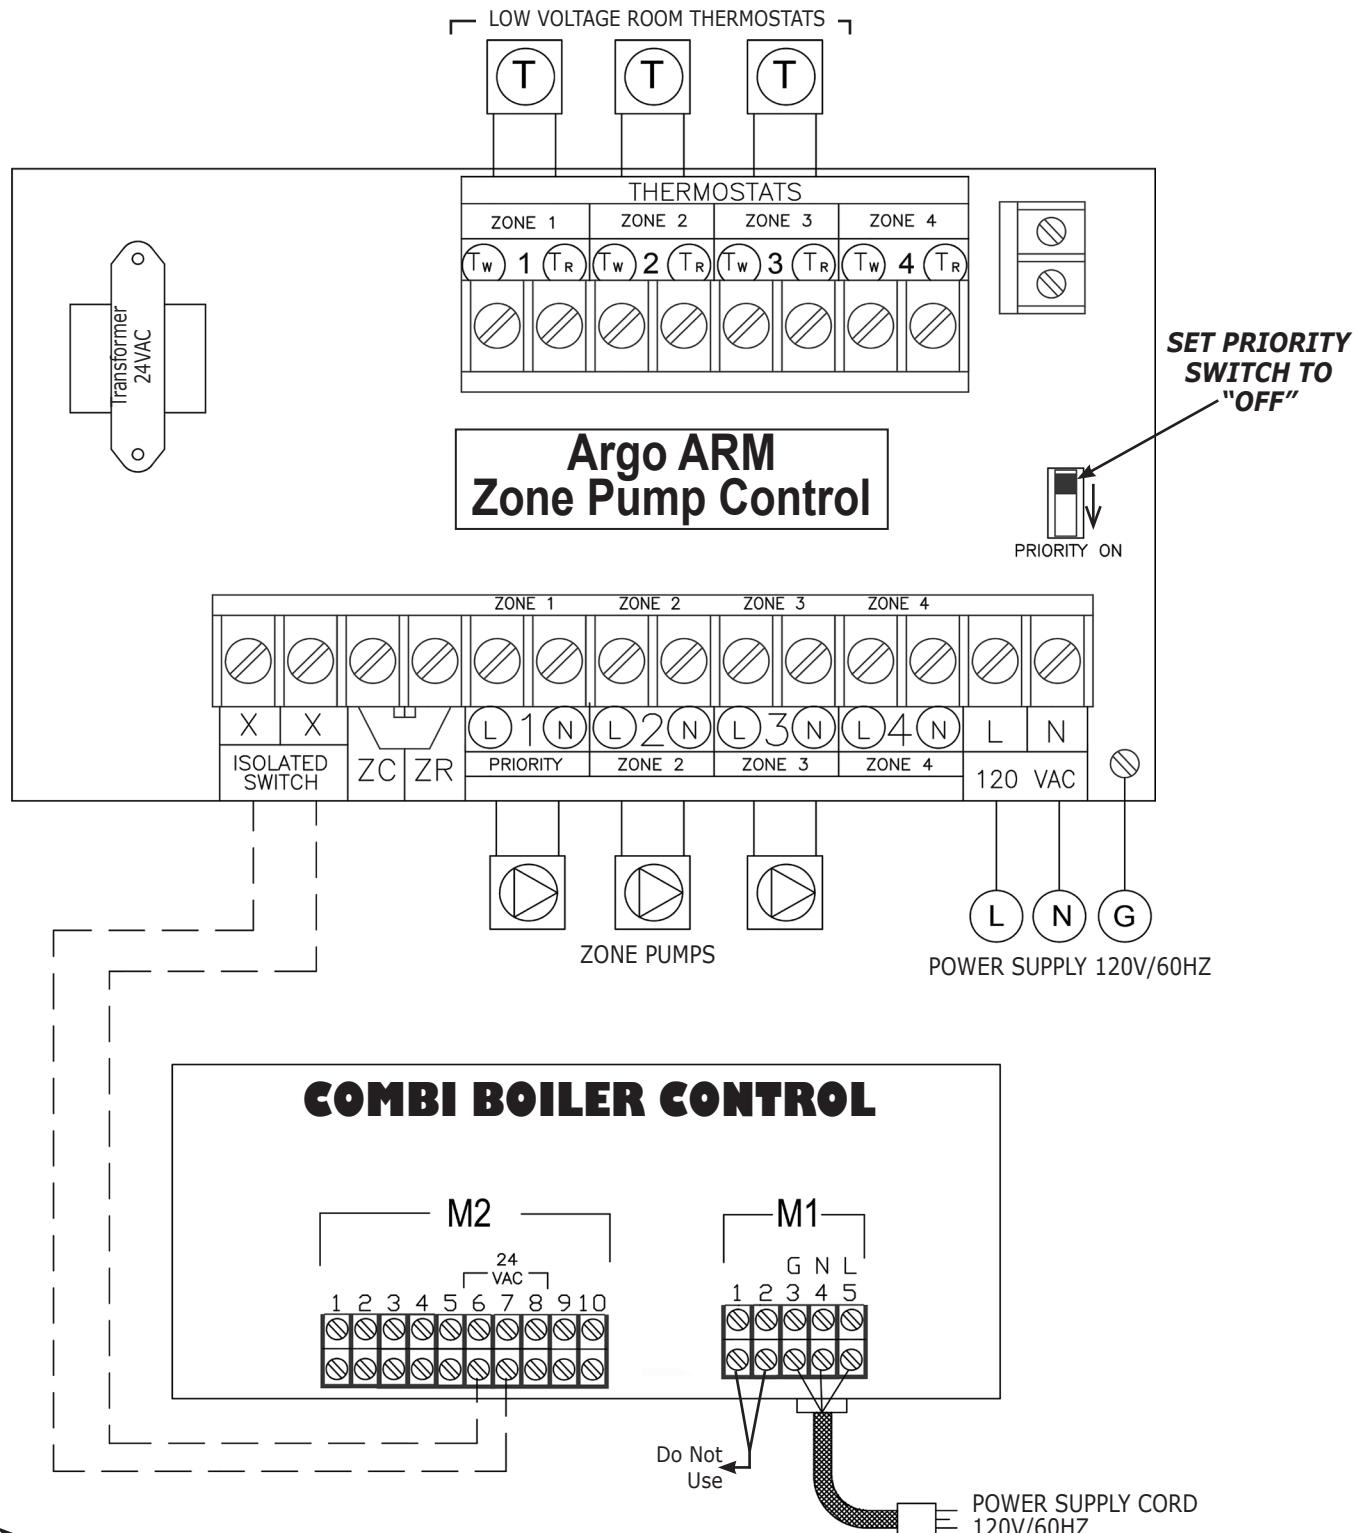

**Note**

**DO NOT** Use 120 V thermostat terminals M1 (#1 and #2).

## ADDITION OF AN EXTERNAL PUMP

# INSTRUCTIONS AND WIRING DIAGRAM FOR ADDING EXTERNAL PUMP TO HEATING ONLY AND COMBI BOILERS

Installation shall be completed by qualified agency.

### **⚠ WARNING**

Fire, explosion, asphyxiation and electrical shock hazard. Improper installation could result in death or serious injury. Read this instruction and understand all requirements, including requirements of authority having jurisdiction, before beginning installation. Installation not complete until appliance operation verified per Installation, Operation & Maintenance Manual provided with boiler.

1. Follow instructions to TURN OFF GAS TO APPLIANCE found on Operation Instructions label on boiler or in Installation, Operation & Maintenance Manual. Verify all electrical power to boiler is turned off.

### **⚠ WARNING**

Electric shock hazard. Turn OFF electrical power supply at service panel.

2. Verify all power to boiler is turned OFF at service panel.
3. Follow Installation, Operation & Maintenance manual to remove front jacket panel(s).

### **⚠ WARNING**

Burn hazard. Verify heat exchanger has cooled or use appropriate personal protection equipment.

4. Inspect combustion chamber through sight glass. Verify flame is not present.
5. See relay wiring attached.
6. Resume operation using OPERATING INSTRUCTIONS found on Operating Instructions label on boiler or in Installation, Operation & Maintenance Manual.
7. Verify proper operation by following START UP PROCEDURE in Installation, Operation & Maintenance Manual.
8. Follow Installation, Operation & Maintenance manual to install front jacket panel(s).

### **For Single Zone Piping:**

External pump relay (AR-822) is required to interface Central Heating (CH) system supply pump operation with Heating Only or Combi Boiler Control.

See External Pump - Instruction and Wiring, Figure 16.


### **For Multi-Zone Piping:**

1. Connect CH/System supply pump to Argo AZ Control primary pump contacts.
2. For Multi Zone/Series Loop Piping, see Figures 3 and 12: Use Argo AR822 Control AND Argo ARM Zone Control to sequence system pump to zone pumps and boiler operation. See Figure 16.

See : Heating Only Boiler - Wiring Figures 6 and 7  
Heating Only Boiler - Piping Figures 1 and 3.  
Combi Wiring - Figure 14  
Combi Boiler Piping - Figures 10 and 12.

## ADDITION OF AN EXTERNAL PUMP

**FIGURE 16 - External Pump/Relay Wiring Diagram , Heating Only And Combi Boilers - Single Zone, And Wiring External System Pump for Series Loop / Multi Zone Piping**

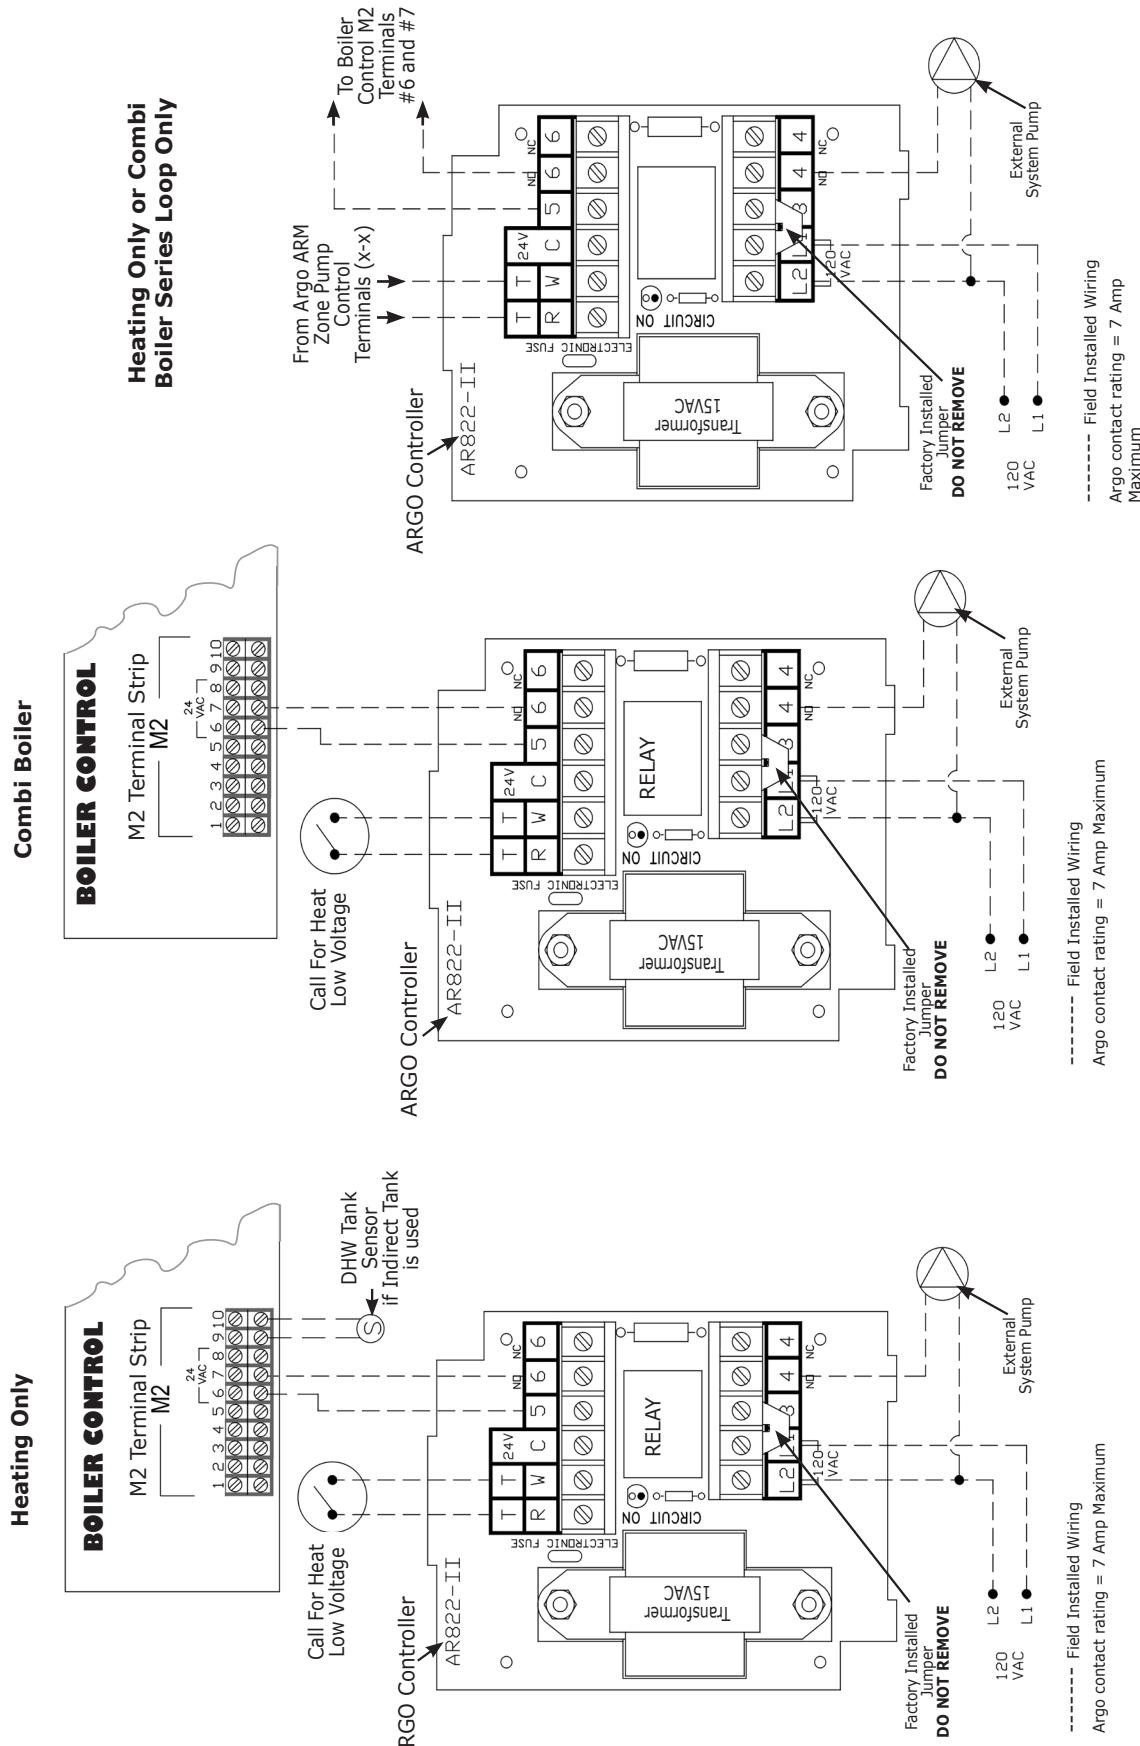



## AVAILABLE PUMP HEAD

### Available Pump Head

**Note**

The intended use of this pump is a boiler loop. Do not use as primary system pump.

<b>Q</b>	WATER FLOW RATE	<b>MIN</b>	Minimum speed of modulation
<b>H</b>	HEAD	<b>MAX</b>	Maximum speed of modulation

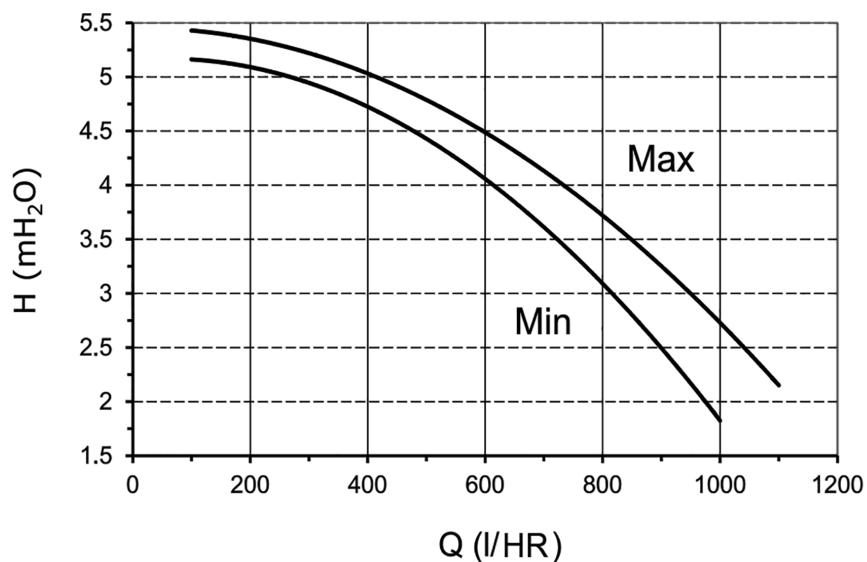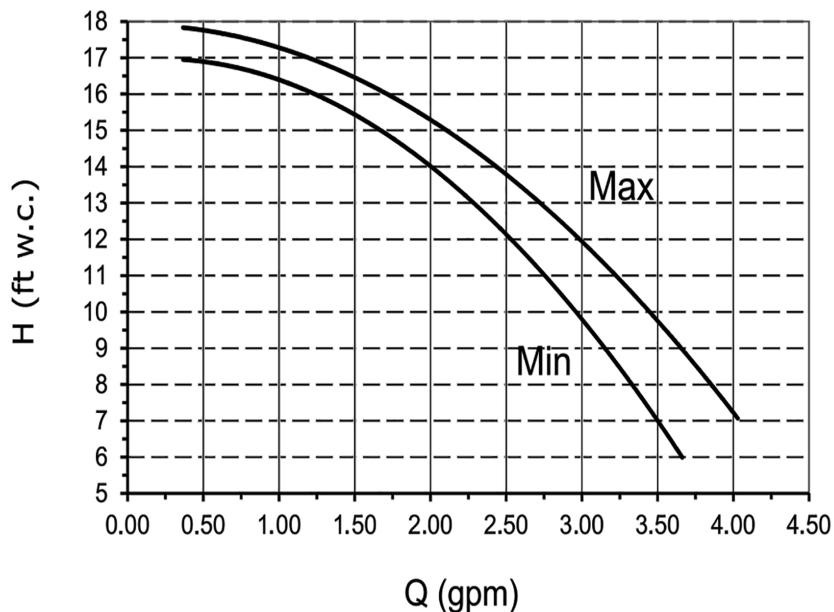

## OPTIONAL EQUIPMENT

### **Optional Equipment**

1. Outdoor Air Sensor, if used.
  - A. Boiler automatically recognizes sensor when used.
  - B. See Chart 1 for sensor data. Sensor part number BD710487302V
  - C. Locate outdoor sensor to protect against wind and direct sunlight. Mounting instructions provided with sensor.
  - D. Maximum wire length is 100 ft (30m) for 22 ga. wire, or 150 ft (45m) for 18 ga. wire.
  - E. Connect wires to M2 OUTDOOR SENSOR terminals 4 & 5. Wires are interchangeable. See Accessories.
  
2. Sensor for Indirect DHW Tank (Heating Only Boiler).
  - A. See Chart 2 for sensor data.

See Accessories section of this manual for wiring diagram.

**CHART 1 - OUTDOOR AIR SENSOR DATA**

T [°F]	R [Ohm]	T [°F]	R [Ohm]
-4.0	7,578	53.6	1,690
-2.2	7,193	55.4	1,621
-0.4	6,831	57.2	1,555
1.4	6,489	59.0	1,492
3.2	6,166	60.8	1,433
5.0	5,861	62.6	1,375
6.8	5,574	64.4	1,321
8.6	5,303	66.2	1,268
10.4	5,046	68.0	1,218
12.2	4,804	69.8	1,170
14.0	4,574	71.6	1,125
15.8	4,358	73.4	1,081
17.6	4,152	75.2	1,040
19.4	3,958	77.0	1,000
21.2	3,774	78.8	962
23.0	3,600	80.6	926
24.8	3,435	82.4	892
26.6	3,279	84.2	858
28.4	3,131	86.0	827
30.2	2,990	87.8	796
32.0	2,857	89.6	767
33.8	2,730	91.4	740
35.6	2,610	93.2	713
37.4	2,496	95.0	687
39.2	2,387	96.8	663
41.0	2,284	98.6	640
42.8	2,186	100.4	617
44.6	2,093	102.2	595
46.4	2,004	100.4	617
48.2	1,920	102.2	595
50.0	1,840	104.0	575
51.8	1,763	106.0	556

**CHART 2 - INDIRECT TANK SENSOR DATA**

T [°F]	R [Ohm]	T [°F]	R [Ohm]
32.0	32,505	86.0	8,060
33.8	30,898	87.8	7,726
35.6	29,381	89.6	7,407
37.4	27,946	91.4	7,103
39.2	26,590	93.2	6,813
41.0	25,308	95.0	6,537
42.8	24,094	96.8	6,273
44.6	22,946	98.6	6,021
46.4	21,859	100.4	5,781
48.2	20,829	102.2	5,551
50.0	19,854	104.0	5,332
51.8	18,930	105.8	5,123
53.6	18,054	107.6	4,923
55.4	17,223	109.4	4,732
57.2	16,436	111.2	4,549
59.0	15,689	113.0	4,374
60.8	14,980	114.8	4,207
62.6	14,306	116.6	4,047
64.4	13,667	118.4	3,894
66.2	13,060	120.2	3,748
68.0	12,483	122.0	3,608
69.8	11,935	123.8	3,473
71.6	11,414	125.6	3,345
73.4	10,919	127.4	3,222
75.2	10,447	129.2	3,104
77.0	9,999	131.0	2,991
78.8	9,572	132.8	2,882
80.6	9,166	134.6	2,778
82.4	8,779	136.4	2,679
84.2	8,411	138.2	2,583

## ACCESSORIES

### Accessories:




#### 1. Outdoor Temperature Sensor Kit - BD710487302V

Use Outdoor Sensor Kit with Heating Only or Combi Boilers. Wire Control to boiler M2 terminal strip terminals #4 and #5 as shown below.

Install/locate Control according to instructions supplied with sensor kit and Installation, Operation and Maintenance Manual (IOM).

#### Setting "Kt" Climate Curve:

When external sensor is connected to boiler the electronic board adjusts flow temperature calculated according to the set **Kt** coefficient. Select the required curve by pressing and buttons on Boiler Control Panel. See chart below for selecting appropriate curve (00 to 90).

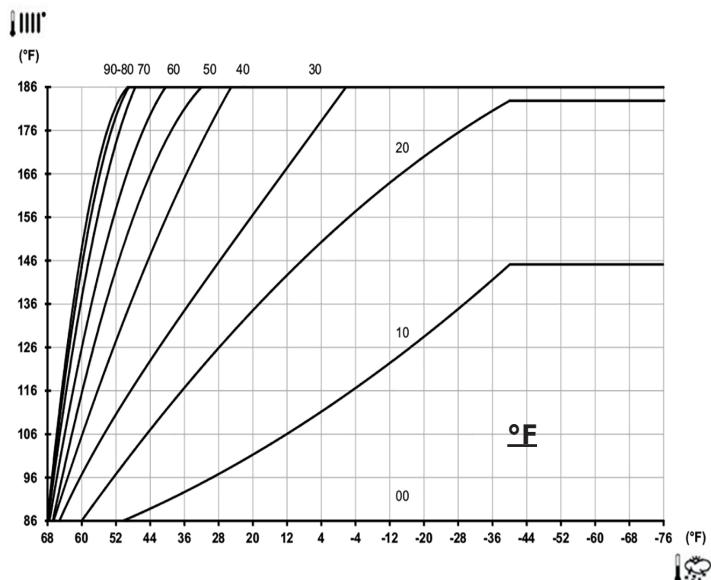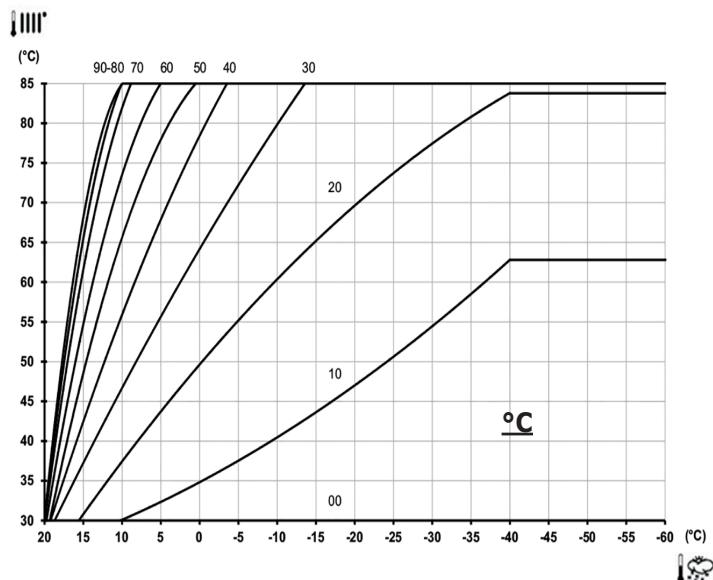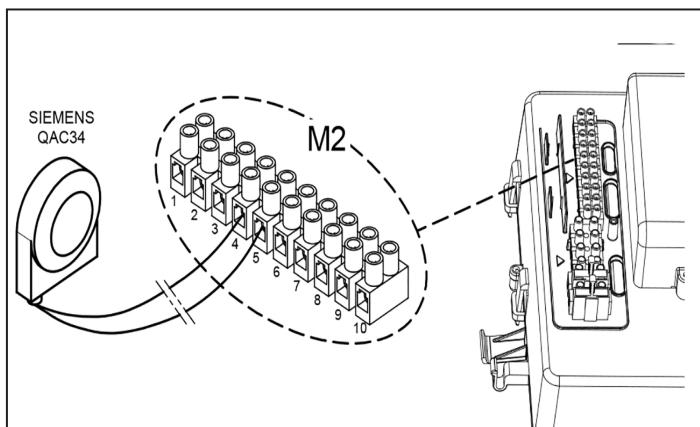


**Note** → For temperatures below -40°F (-40°C), maximum heating flow temperature set point no longer increases and curves on the graph become horizontal.

### Boiler Control Panel

#### BUTTONS Key

	DHW temperature adjustment (+ to increase the temperature and - to decrease it)
	Heating water temperature adjustment (+ to increase the temperature and - to decrease it)
	Boiler operating information
	Operating mode: DHW – DHW & Heating – Heating Only
	Off – Reset – Exit menu/functions

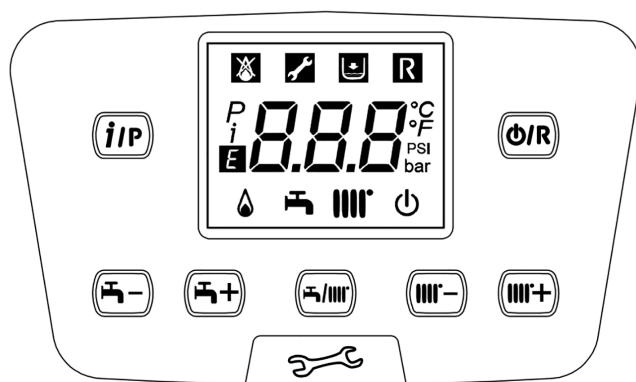

## ACCESSORIES

### 2. Indirect Storage Tank Sensor Kit

Heating Only boiler can be electrically connected to Indirect Storage Tank.

Diagram of hydraulic connection of external indirect storage tank is shown below.

Connect DHW priority sensor to terminals #9 and #10 on terminal block M2. The element of the sensor must be inserted in the sensor well located on the indirect storage tank.


Make sure the exchange capacity of the storage boiler coil is appropriate for power of the boiler. Adjust DHW temperature (+95°F...+140°F / +35°C...+60°C) by pressing buttons on boiler control panel.

#### Note

Parameter PO3 for Heating Only boiler, with no indirect tank remains Factory Set at 08. No change is required.

If adding an Indirect Tank to Heating Only Boiler - change PO3 parameter from 08 to 05. See Section 14, Parameter Settings, in boiler's Installation, Operation, and Maintenance Manual.

Parameter PO3 for COMBI boiler factory set at 00 requires no change.

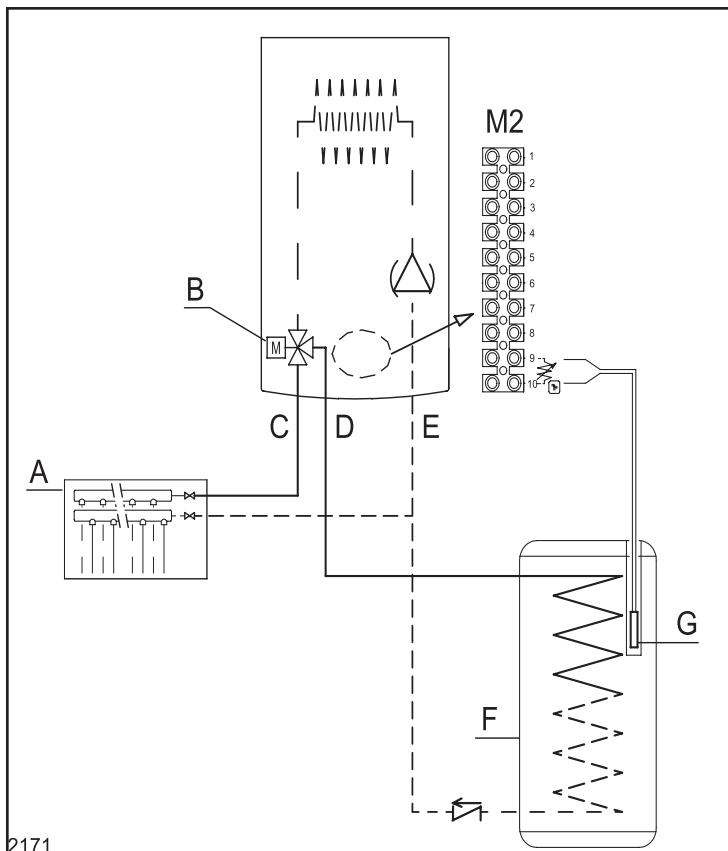


<b>A</b>	Heating System
<b>B</b>	Three way diverter valve
<b>C</b>	Heating water flow
<b>D</b>	Heating supply to DHW indirect storage tank coil
<b>E</b>	Heating water return
<b>F</b>	Tank
<b>G</b>	DHW priority sensor tank


#### BUTTONS Key

	DHW temperature adjustment (+ to increase the temperature and – to decrease it)
	Heating water temperature adjustment (+ to increase the temperature and – to decrease it)
	Boiler operating information
	Operating mode: DHW – DHW & Heating – Heating Only
	Off – Reset – Exit menu/functions

#### Boiler Control Panel

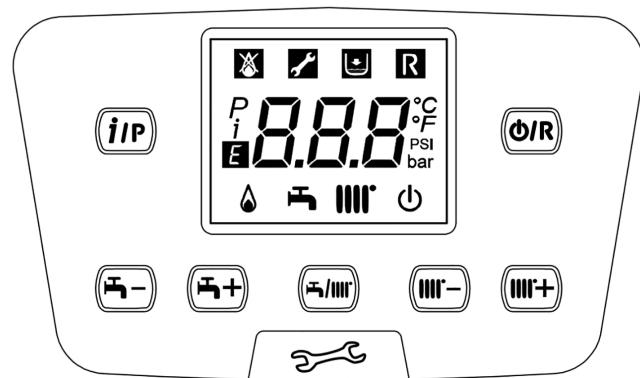


## HEATING ONLY BOILER - WIRING DIAGRAM

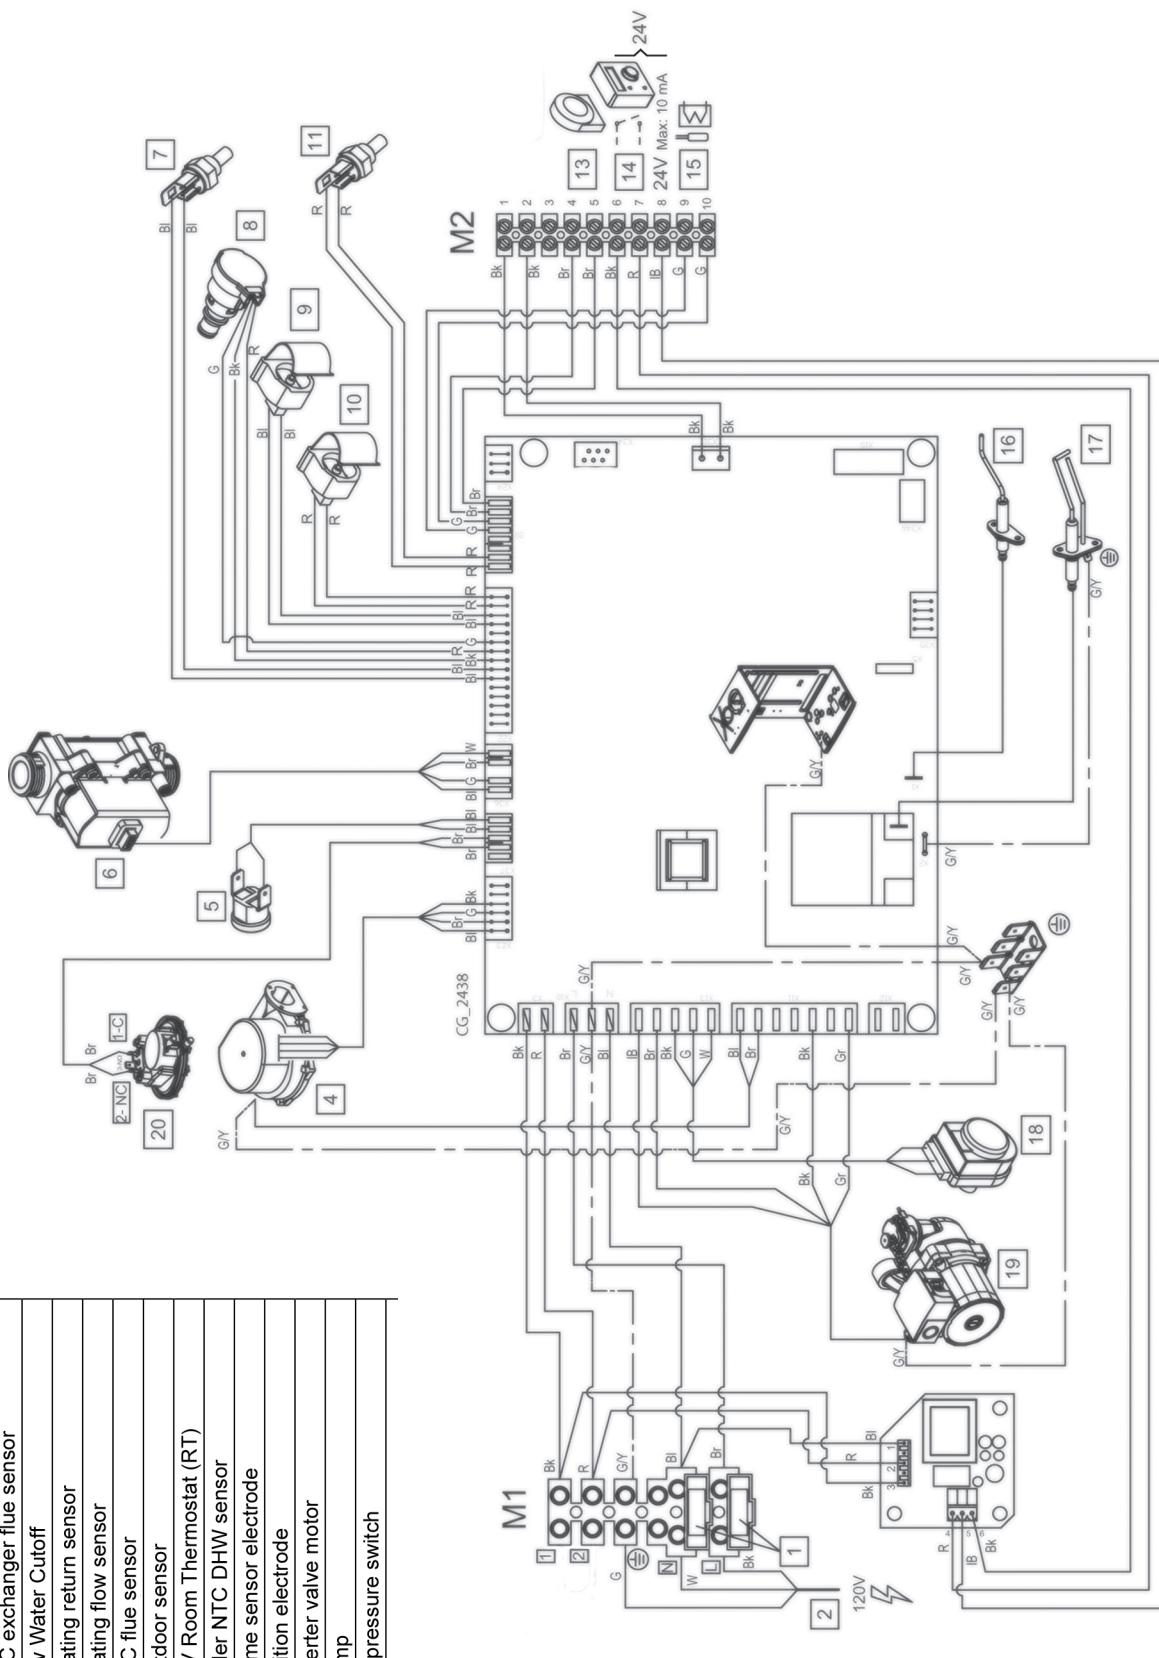


1	Fuses
2	120 V Power Supply
4	Fan
5	Central Heating Water Highlimit
6	Gas valve
7	NTC exchanger flue sensor
8	Low Water Cutoff
9	Heating return sensor
10	Heating flow sensor
11	NTC flue sensor
13	Outdoor sensor
14	24V Room Thermostat (RT)
15	Boiler NTC DHW sensor
16	Flame sensor electrode
17	Ignition electrode
18	Divert valve motor
19	Pump
20	Air pressure switch

# COMBI BOILER - WIRING DIAGRAM

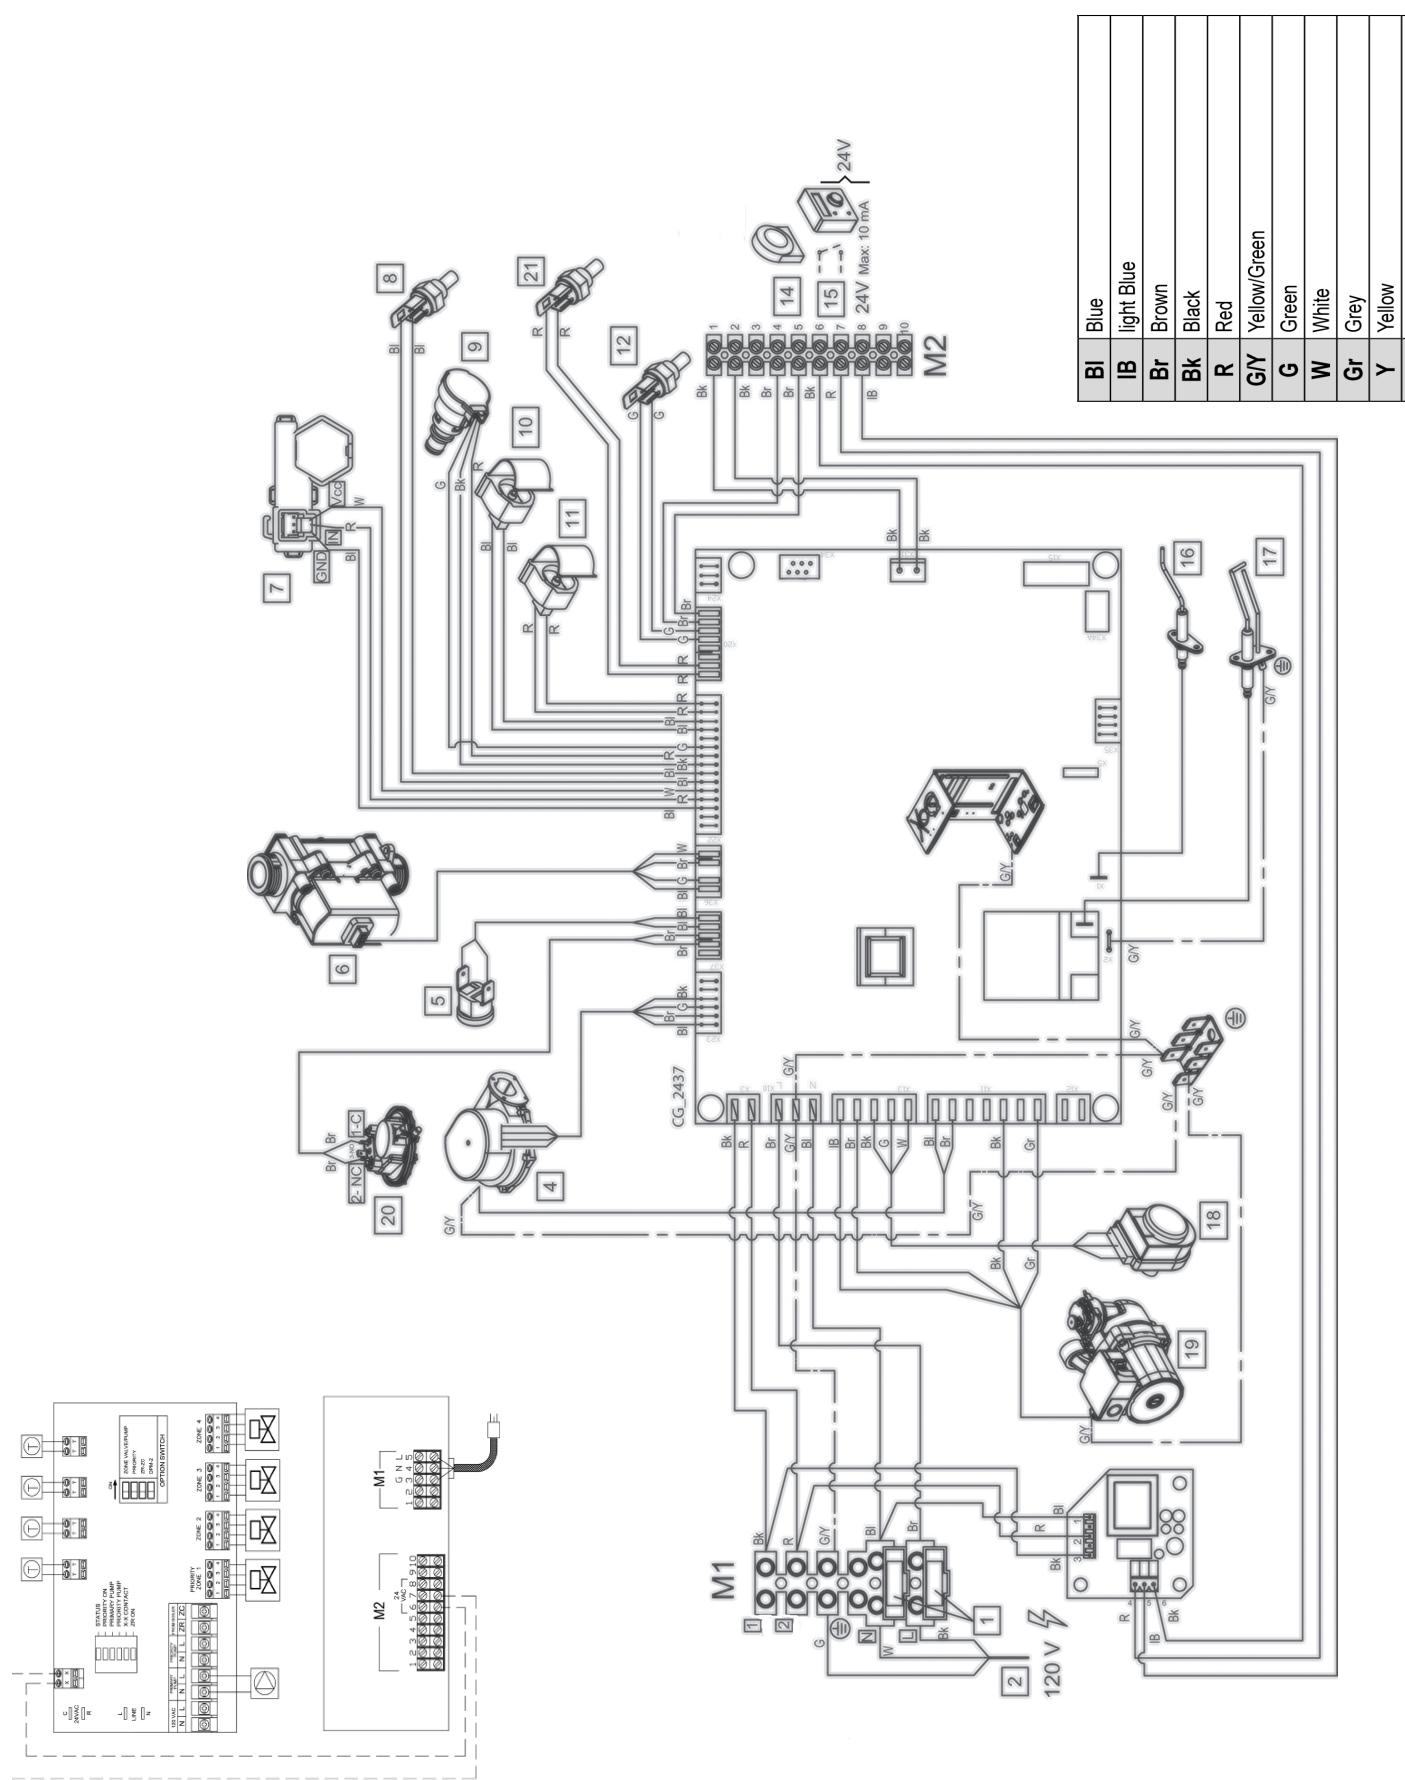

## ALTITUDE EFFECTS ON BOILER PERFORMANCE

### CALCULATED EFFECTS OF HI-ALTITUDE ON BOILER PERFORMANCE

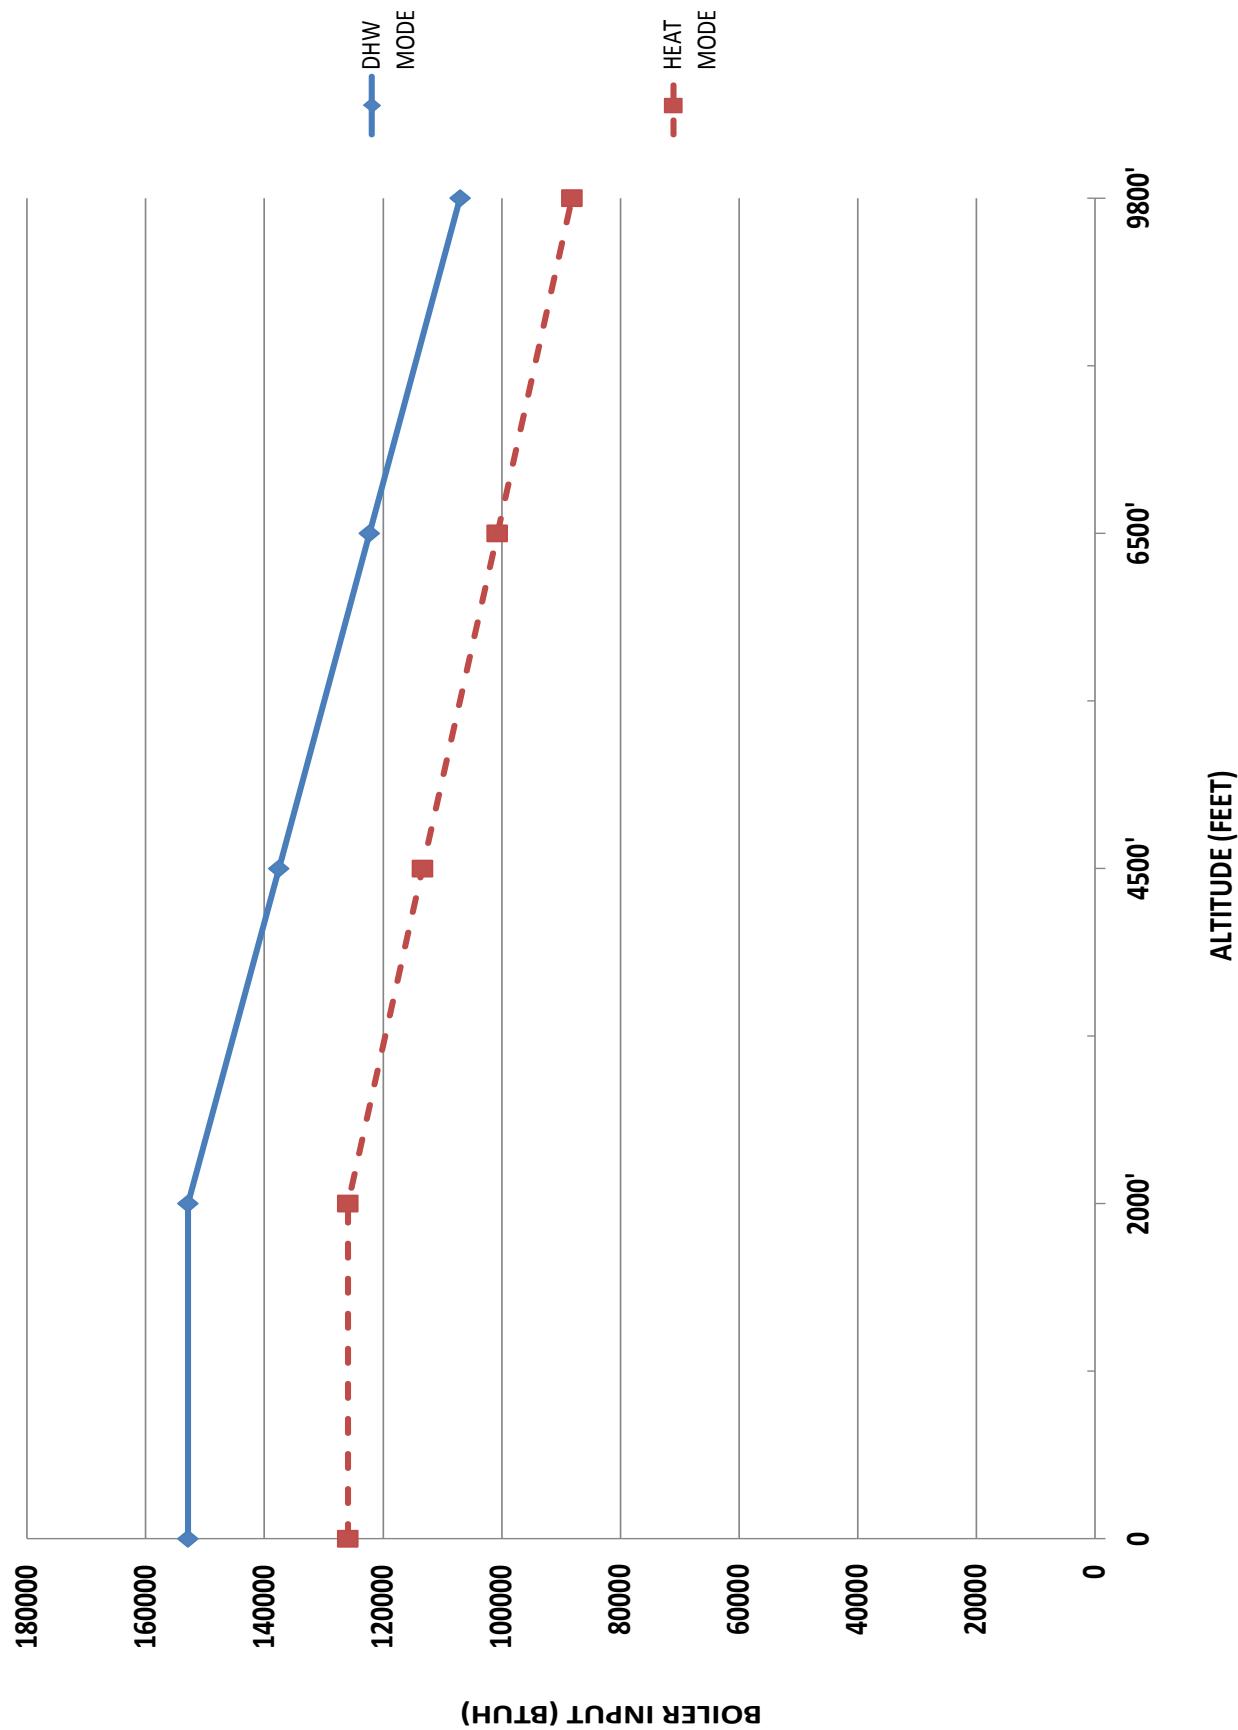

# NOTICE


Do not solder fittings when they are threaded onto boiler. Heating the boiler fittings will cause failure of the gaskets and water leaks.

1. Use piping accessories as shown below.
2. Do any soldering away from the boiler, then thread soldered assembly to Boiler connections.

## Factory Supplied Trim

The boiler features quick connection removable fittings.


The connections on the bottom of the boiler are all straight threaded - standard tapered fittings cannot be used to connect to the boiler.

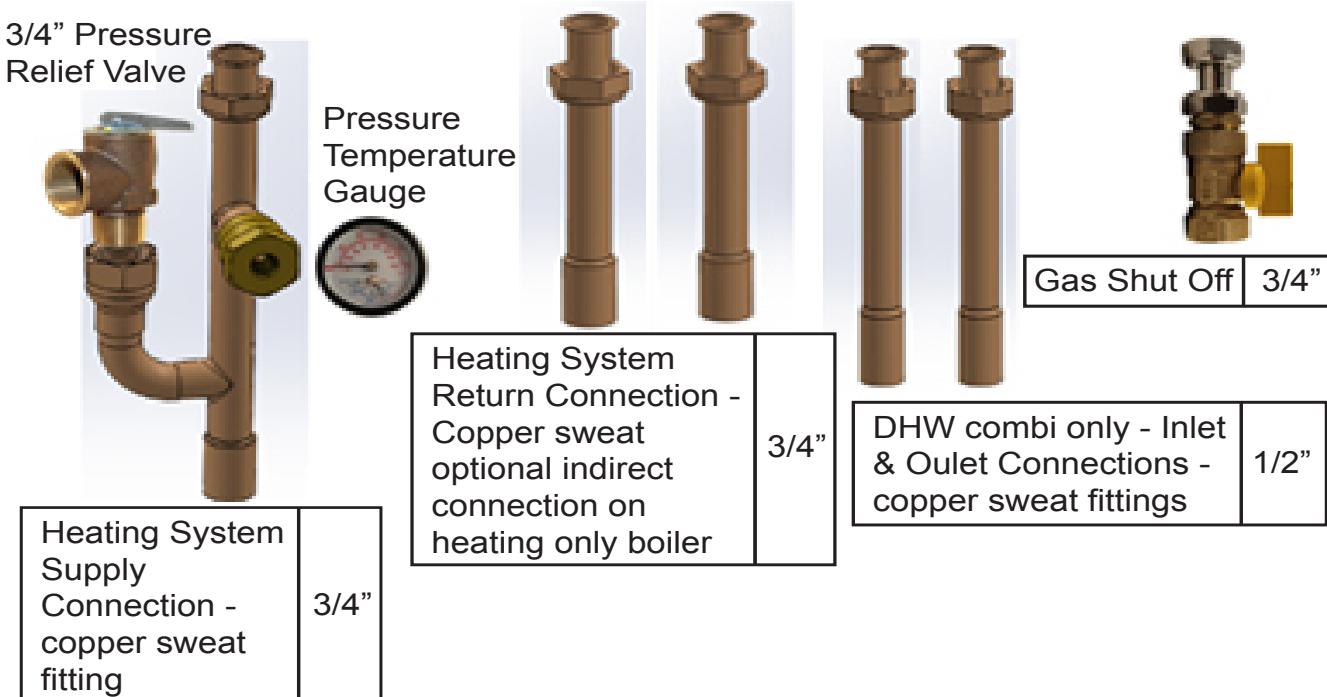

240011431 Rev A

**! WARNING****BURN AND SCALD HAZARD!**

Primary/Secondary piping with closely spaced supply and return lines is mandatory for ASME Code Compliance. Failure to follow these instructions could result in death or serious injury.

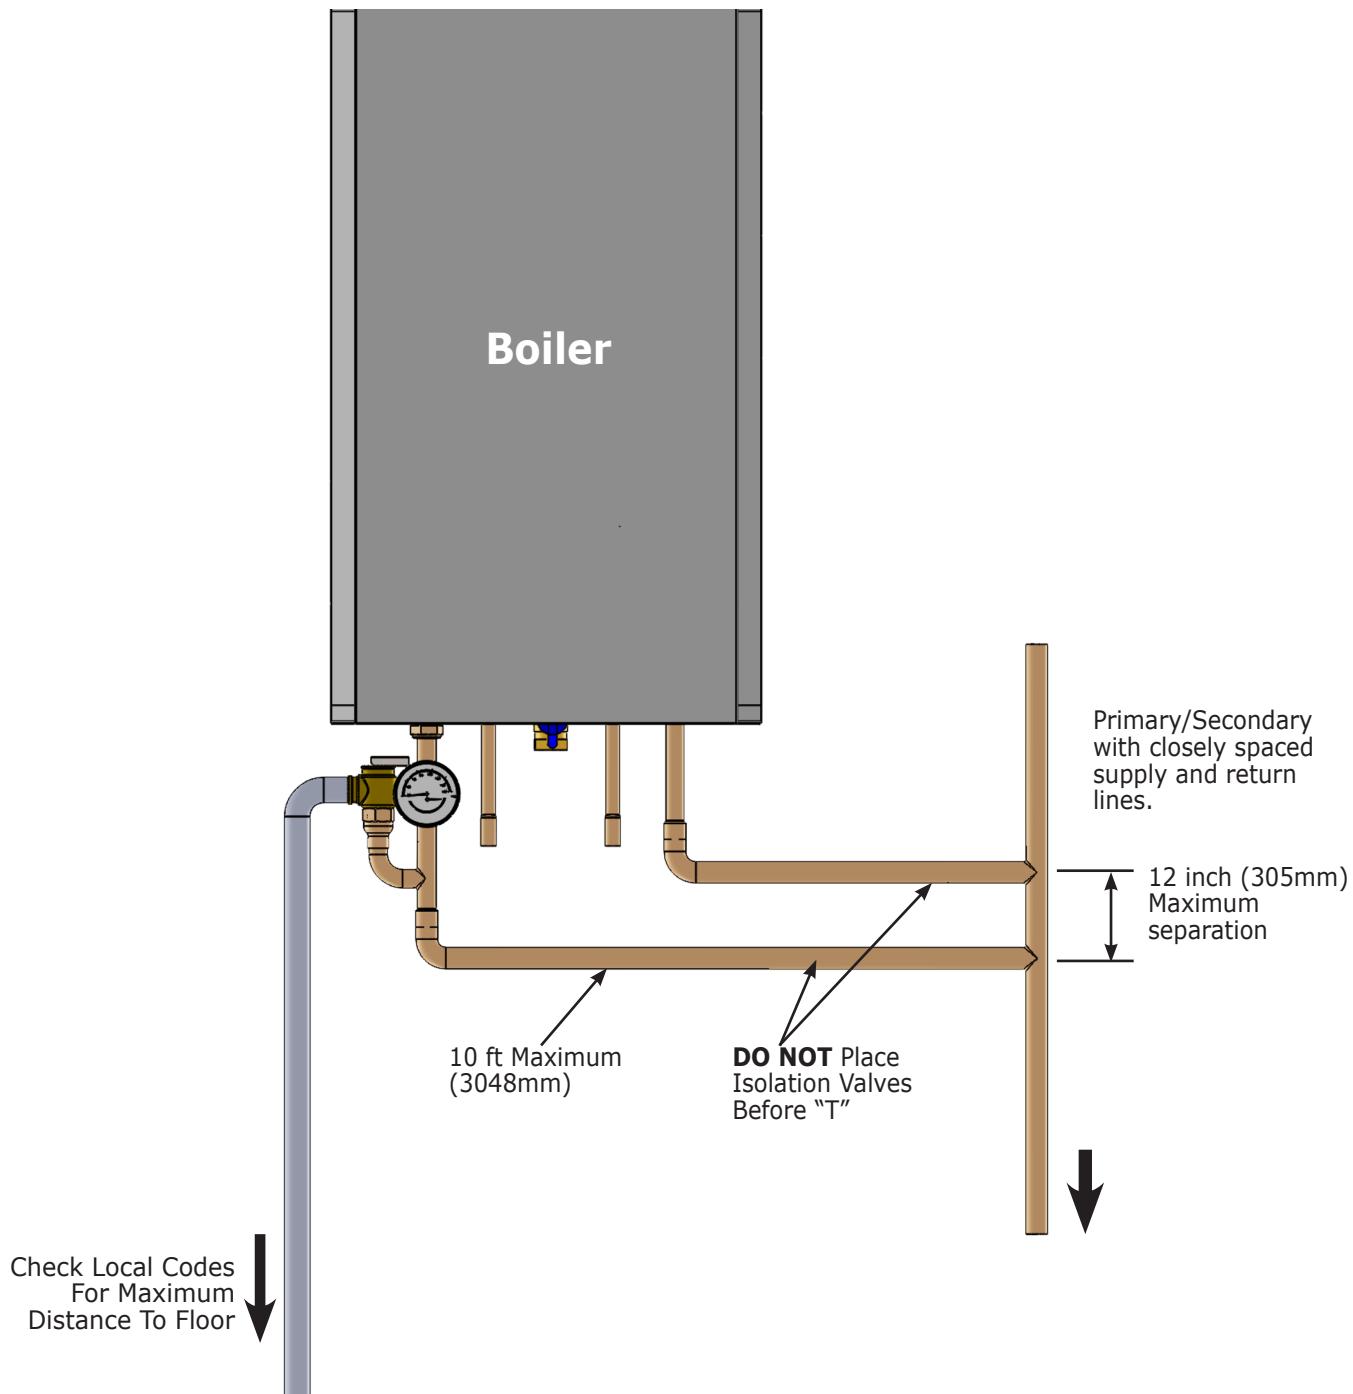

**APPLICATION TABLE - INDIRECT TANK SIZING**

'HEATING ONLY' BOILER (125,000 BTUH)				
BOILER OUTPUT (BTUH/HR)				MAX. OUTPUT
	50,000	60,000	80,000	100,000
<b>H2O30</b>				113,000
<b>1st HOUR RATING (GAL/HR)</b>	140 F 115 F	94 119	106 138	106 158
<b>CONTINUOUS RATING (GAL/HR)</b>	140 F 115 F	67 92	79 111	79 131
<b>H2O40 / H2O40L</b>				
<b>1st HOUR RATING (GAL/HR)</b>	140 F 115 F	103 128	115 147	119 174
<b>CONTINUOUS RATING (GAL/HR)</b>	140 F 115 F	67 92	79 111	83 138
<b>H2O50</b>				
<b>1st HOUR RATING (GAL/HR)</b>	140 F 115 F	112 137	124 156	133 192
<b>CONTINUOUS RATING (GAL/HR)</b>	140 F 115 F	67 92	79 111	88 147
<b>H2O60 / H2O60L</b>				
<b>1st HOUR RATING (GAL/HR)</b>	140 F 115 F	121 146	133 165	147 208
<b>CONTINUOUS RATING (GAL/HR)</b>	140 F 115 F	67 92	79 111	93 154
				93 154

Notes:

176 °F Boiler Supply Water Temperature  
AHRI Rating Conditions - 50 °F Inlet Water  
@ 4.0 GPM FLOW RATE



Manufactured for:  
**ECR International, Inc.**  
2201 Dwyer Avenue, Utica NY 13501  
web site: [www.ecrinternational.com](http://www.ecrinternational.com)